STANDARD OPERATING PROCEDURE OF Water Wicking VF-E14

Lab /SOP/ 35



Wicking tray with Gripper Set and Flume
Stopwatch or timer
Paper clip or other type of sinker weights
White paper or paper towel



A. Fabric , Synthetic Leathers , Bound Textile and Bound Leather

1. Cut sample size 114+/-2 mm by 114 +/-2 mm for Maeser flexing in each direction and label.
2. Clamp top and bottom of sample into machine. Face side towards water.




3. Submerge sample 2.5 cm from the bottom of the folded specimen and also place water inside of sample at 2.5 cm deep.
4. Run for 3,000 flexes, approximately 30 minutes. After Maeser flexing is complete, let sample air dry for at least 12 hrs before cutting the specimens for wicking test.



B. Lace / Webbing :


Using the Lace Abrasion Tester
First fix the lace/webbing at the weight
Put each individual counter, for each specimen to “0” and turn on each individual counter at each used testing position.
Test 100cycle then remove the lace/webbing

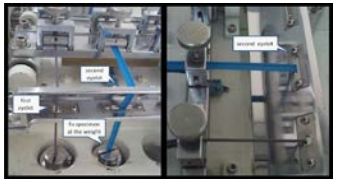


Using a “Load Weight “of 1,500g.
Thread the remaining lace/ webbing through the load weight and allow a back and forward motion (200 revolutions)
Lace should be held at 45 °angle.
Samples are taken from the pre-stressed lace by measuring 7.5cm



Thread:
Pre- stitch the thread on a piece of 1.6mm – 2.2 mm Full Grain Leather (free from fat and don’t use any oil). Use 3 stitches /cm high speed, without intermediate stop.Use R-needle.
After stitching rip the lower suture line using seam ripper / scalpel and remove upper thread.

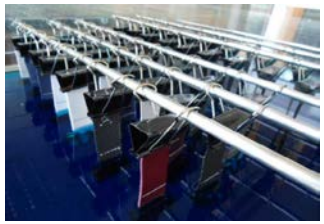

1. Fill the wicking tray with distilled water at 23+/-2oC
2.For thread and lace attach the sinker / weights to the test samples so that it will remain immersed in the water.
3.Fix the specimen with the gripper set. Then put the gripper set on a tester.

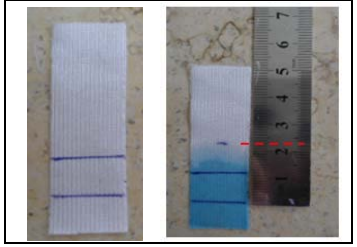

4. Fix the specimen into the flume and check waterline. Ensure the first 10 mm line on sample is at the water level.
5.After 1 hour or 2 hours, remove the material, Press the side for water marking on white paper or paper towel. Press the specimen (back side) top to bottom.Check and measure the watermark.

Prepared by	Approved by	REVISION		DATE	