# STANDARD OPERATING PROCEDURE OF BONDING TEST FOR WHOLE PIECE VF-F01

Lab /SOP/ 38-01



1. Tensile testing machine with chart recorder
2. Razor or sharp knife.
3. Steel scale or calipers capable of measuring




Whole Piece of Outsole Bonded with other Component




Mark on the testing sample approximately every 2cm and number these locations starting at the initiation point in ascending order around the entire perimeter of the



Measure and record the nominal width of the perimeter test sample

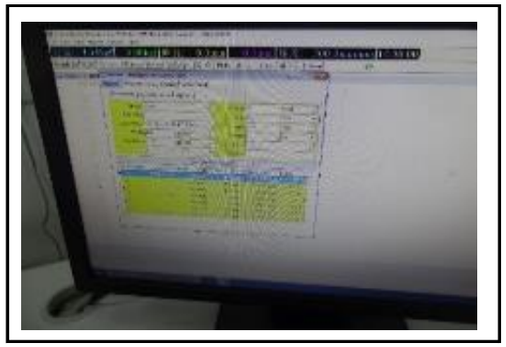

Zero and calibrate the tensile testing machine .

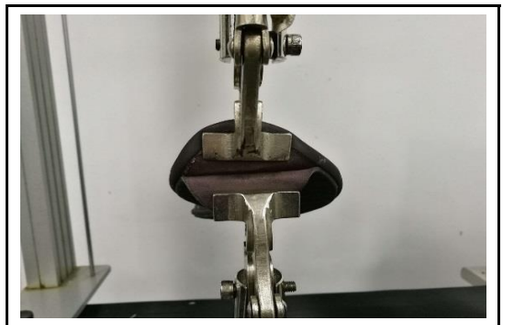

Set the crosshead speed to 100mm/minute and the load range to 20kgf, and a jaw gap of approximately 4cm.




Operate the tensile testing machine at a crosshead speed of 100mm/minute.




If either surface is tearing rather than separating, use a sharp knife to cut back the tearing material to the bonding line until the two surfaces separate




Record the load at each marked 2cm location. If chart recorder is available, plot the load value on the chart recorder at every 2 cm marked.

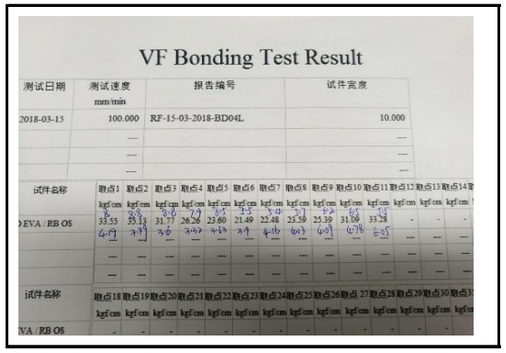


Calculate the force required to pull the test specimen apart at every 2 cm marked by dividing the force by the measured width of the test specimen.

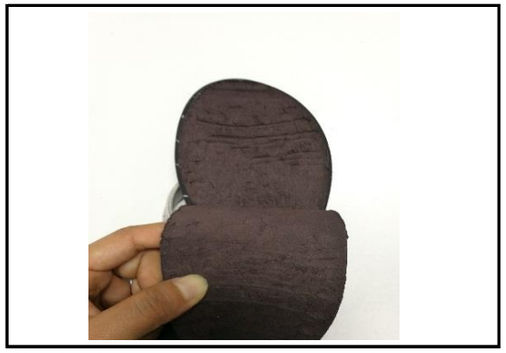

Check the reason for bond failure.

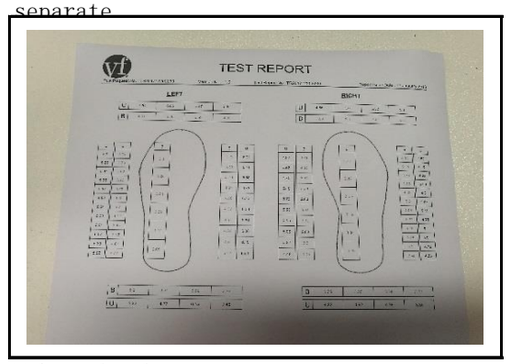


Make a bonding report

| Prepared by | Approved by | REVISION | | DATE | |
|---|---|---|---|---|---|