STANDARD OPERATING PROCEDURE OF BONDING TEST VF-F01


Lab /SOP/ 38



1.Tensile testing machine with chart recorder 2.Razor or sharp knife. 3.Steel scale or calipers capable of measuring



Draw a line which has a width of 1.0+/-0.1cm from the edge

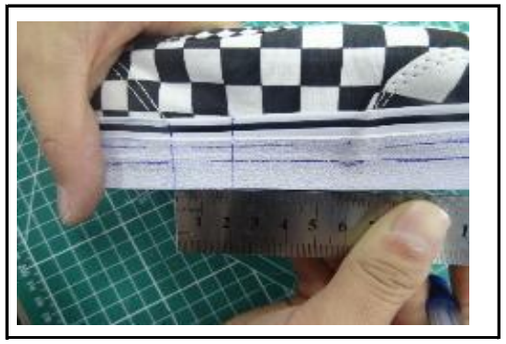


Mark on the testing sample approximately every 2cm and number these locations starting at the initiation point in ascending order around the entire perimeter of the



Using a razor blade or sharp knife, accurately cut along this perimeter line so that the cut completely penetrates through the upper or outsole component and into the midsole.



The perimeter cut should be made in the shank - medial area of the shoe, peel the 1.0cm wide upper or outsole strip away from the midsole for a distance of about 2cm to provide enough material for the clamps to grip.

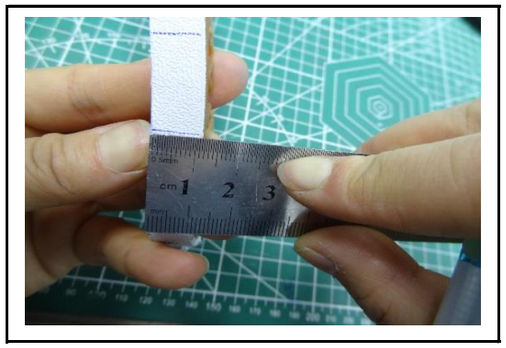

Measure and record the nominal width of the perimeter test sample before testing



Zero and calibrate the tensile testing machine .Set the crosshead speed to 100mm/minute and the load range to 20kgf, and a jaw gap of approximately 4cm.



If either surface is tearing rather than separating, use a sharp knife to cut back the tearing material to the bonding line until the two surfaces separate.




Record the load at each marked 2cm location. If chart recorder is available, plot the load value on the chart recorder at every 2 cm marked.



Calculate the force required to pull the test specimen apart at every 2 cm marked by dividing the force by the measured width of the test specimen.



Check the reason for bond failure.

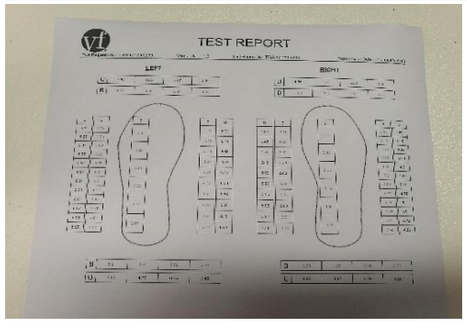

Make a bonding report

Prepared by	Approved by	REVISION		DATE	