
STANDARD OPERATING PROCEDURE OF Statics Waterproof VF-G07

Lab /SOP/ 44

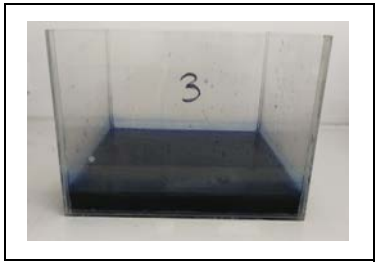

Immersion tank
Dry weights (rocks , steel)
Steel scale capable of measuring to +/-0.1cm
Silver ink pen



Remove all hang tags, laces, inserts, and tissue from dry footwear.



Insert enough weight inside footwear to hold footwear firmly on bottom of the container.



Insert footwear to be tested into plastic container.
Do not add water until all footwear is inside.
Only test like style# and size in one plastic container.



Start test and note starting time in logbook.
Manually monitor footwear every 30 minutes, and remove footwear to inspect.
Replace footwear into container(s).
After reaching the predetermined number of hours , stop test and remove footwear to inspect.



If leak(s) are detected, record time and elapsed time in logbook. Note area(s) where water penetrated or wicked. Mark wet area(s) with a silver ink pen and dry footwear on dryer machine.

Prepared by	Approved by	REVISION		DATE	