



EHS Procedure QuickCard

FC-GL-EHS-SAF-0708 – Machine Safety

Risk Assessment

ACTIONS:

- Only operate machinery if competent
- Ensure all guarding is in place
- Perform required safety checks
- Immediately report defects or unsafe conditions
- Do not disconnect any interlock or guard
- No long hair, loose clothing or jewelry
- No gloves allowed if operating non-safeguarded rotating machines
- Wear task-specific PPE as identified on risk assessment
- Inspect and Test safeguarding
- Maintain a clean work area

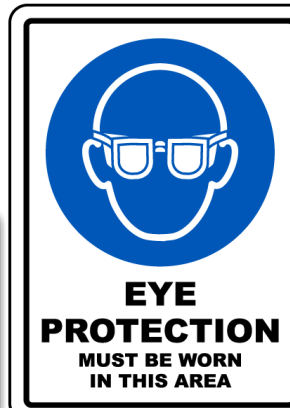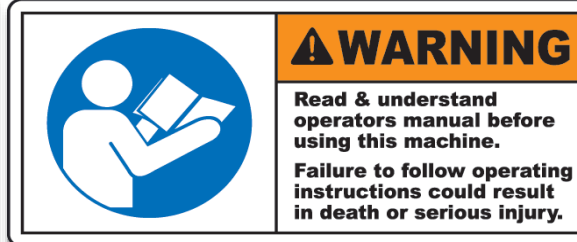

Machine Guarding



Scope / Key Changes

- FC-GL-EHS-SAF-0708 - Machine Safety (Issue 2)
- Added – Complete MOC Screening prior to introducing new machine. Reference FC-GL-MAN-0303-F1: MOC EHS Screening
- Added - Machine Transport requirements under Section 2.6



Key Tools

- FC-GL-MAN-0303-F1 - MOC EHS Screening
- FC-GL-EHS-SAF-0708-F1: Typical Machine Guarding Assessment
- ANSI / EN / ISO 12100: Safety of Machinery
- 29 CFR 1910.212 Subpart A: General Requirements for all Machine Guarding
- ISO 14121: Safety of Machinery - Risk Assessment
- Machine Safety Directive 98/37/EC
- Appendix A: Typical Machinery Hazards
- Appendix B: Examples of Machine Guarding



Further Work / Support/Action

- Ensure that machines are adequately safeguarded