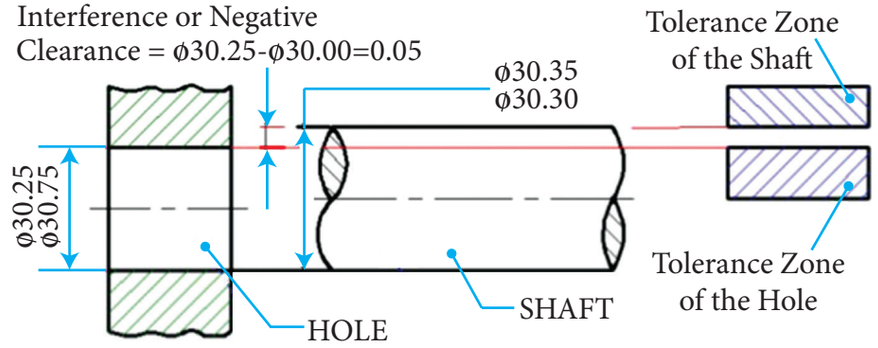


Interferance Fit

1. Shrink Fit
2. Heavy Driving Fit
3. Light Driving Fit

Shrink Fit: The parts with holes are heated to expand. In this condition, the shaft is inserted into the hole and the joint is rapidly cooled to have a strong fit. This is known as shrink fit.


Heavy Driving Fit: In heavy driving fit, a good amount of force is given to drive the shaft into the hole.

Light Driving Fit: It involves light force employed to insert the shaft into the hole.





Eli Whitney (December 8, 1765 – January 8, 1825) has inventing the idea of interchangeable parts.

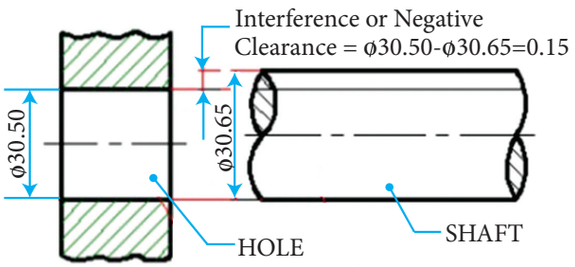

Tranistion Fit

Transition Fit: If a positive clearance or negative clearance exists between the hole and shaft, it will be called transition fit. Transition fit may provide either a clearance or an interferance. In this fit tolerance zones of the holes and shaft overlap.

There are four types of transition fits

1. Force Fit
2. Tight Fit
3. Wringing Fit
4. Push Fit

HOLE BASIC SYSTEM

If the system of assembley of shaft and hole is consisting of basic hole, then the type of system is known as Hole basic system. It means for the system of assembly

BME_Chp08.indd 107 11/9/2020 12:26:07 PM