
2. SURFACE PLATE



The flatness of a surface of a work can be tested with the help of a surface plate. It is also used for marking-out work.

3. SCRIBERS

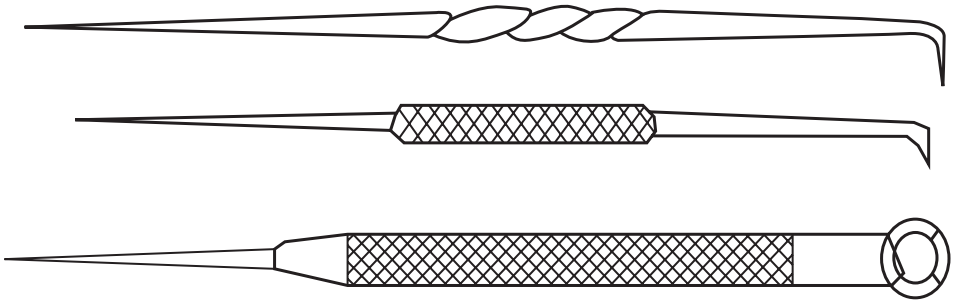

Scribers are used to mark dimensions and to scribe lines on the workpieces .

4. PUNCHES



Punches are used to make permanent marks on the lines already scriber on the workpieces. The punch marks make the line appear clearly. Punches are also used to make marks on exact locations on the workpieces where drilling is to be performed . Punch marks are made at regular intervals on the lines(interval may be 6mm for straight lines and 3mm for curved lines).

5. TRY SQUARE

Try square is used to check the perpendicularity of surfaces (both external and internal) It is also useful in scribing parallel lines perpendicular to a particular surface and to check flatness of surfaces.

