
1.2.4 Dimensioning


Method of describing the shape and measurement of an object in engineering drawing is called "**Dimensioning**". So many lines, letters, numerals and symbols are used in this dimensioning.

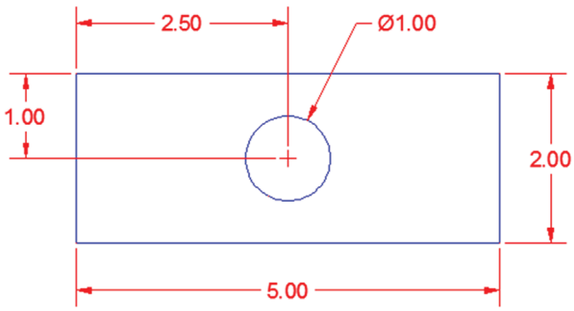

1.2.5 Methods of Dimensioning


Method-I: Aligned System

In Aligned method of Dimensioning the dimension line should be continuous and dimension should be placed in the middle of the dimension line without touching it.

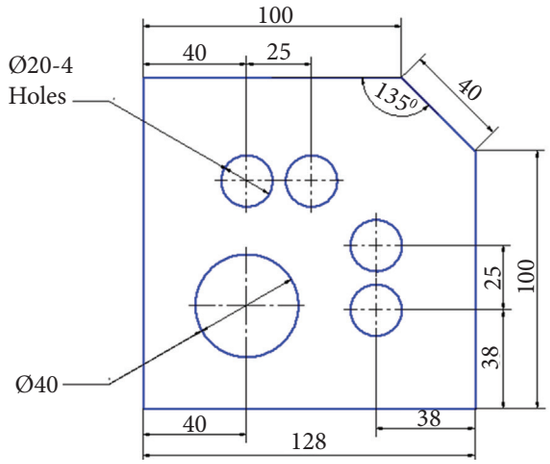


Dimensional values are marked so that they can be read either from the bottom or from the right hand side of the drawing. The above figure shows the method of placing dimensional values at different positions on the dimension lines.

Angular Dimensions: Angular dimensions are oriented as in the following figure

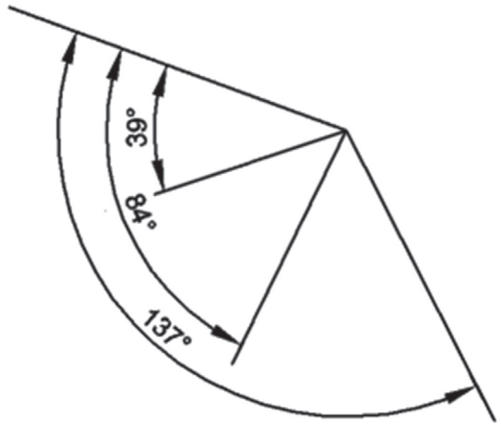

Marking Angles from Baseline

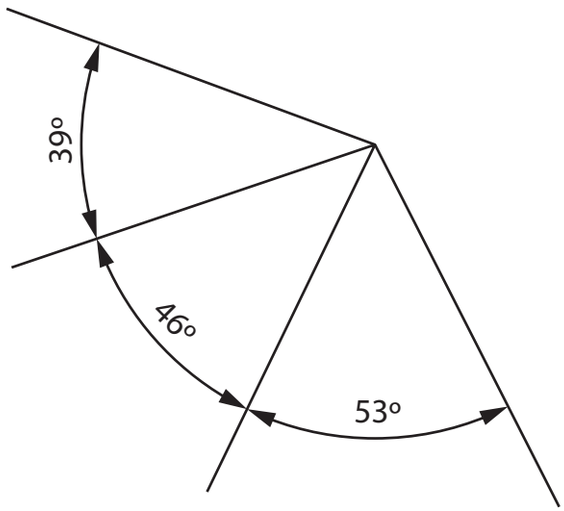

Marking Angles Continuously

Method-II: Unidirectional System

In unidirectional method of dimensioning the dimension line should be cut at center and dimensions should be placed in the middle of dimension lines as shown in the fig below.

Civil_English_Unit_1.indd 18 12/21/2019 1:06:39 PM