2.1.1.4 Punches

Punch is used to place a punch at the drilling point before drilling an object. It makes drilling easier. Its node will be at many angles. It is categorized as such.

a) Centre Punch
b) Dot Punch
c) Prick Punch
d) Hollow Puch
e) Letter / Number Punch

a) Centre Punch

In the drilling jobs, the edge of the drill unit has to be at and rotate. For this small and wide punch is made at the center. It is called as center punch. It's angle 90^0. Fig 2.1.1.4(a) shows Centre Punch.

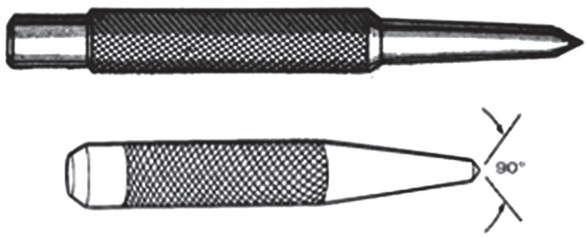


Figure 2.1.1.4(a) Centre Punch

b) Dot Punch

The lines which are drawn by the scriber can be made clearly visible by using dot punches. In this dots are put over the line. Its angle is 60°. Fig 2.1.1.4(b) shows Dot Punch



Figure 2.1.1.4(b) Dot Punch

c) Prick Punch

Deep points are made of the soft metals and some tactical works with the help of prick punch. Its angle is 30^0. Figure 2.1.1.4(c) shows Prick Punch.



Figure 2.1.1.4(c) Prick Punch

d) Hollow Punch

The tool which has a hollow section inside the nose is used to cut the hole in the skin, rubber card etc. This tool is called as hollow punch. Fig 2.1.1.4(d) shows Hollow Punch.



Figure 2.1.1.4(d) Hollow Punch

e) Letter and Number Punch

In this punch, the letters or numbers are labeled or cut over the punch in order to punch letter and number in places where we need them. These types of punches are made up of high carbon steel. Fig 2.1.1.4(e) shows Letter and Number Punch.



Figure 2.1.1.4(e) Letter and Number Punch

2.1.1.5 Screw Drivers

The screw driver is used to fix or remove the screw based on the requirement. Refer Figure 2.1.1.5(a). The screwdrivers are classified mainly based on their tip shape and their types are given below.

AM_Unit_02.indd 26 12/20/2019 4:25:25 PM