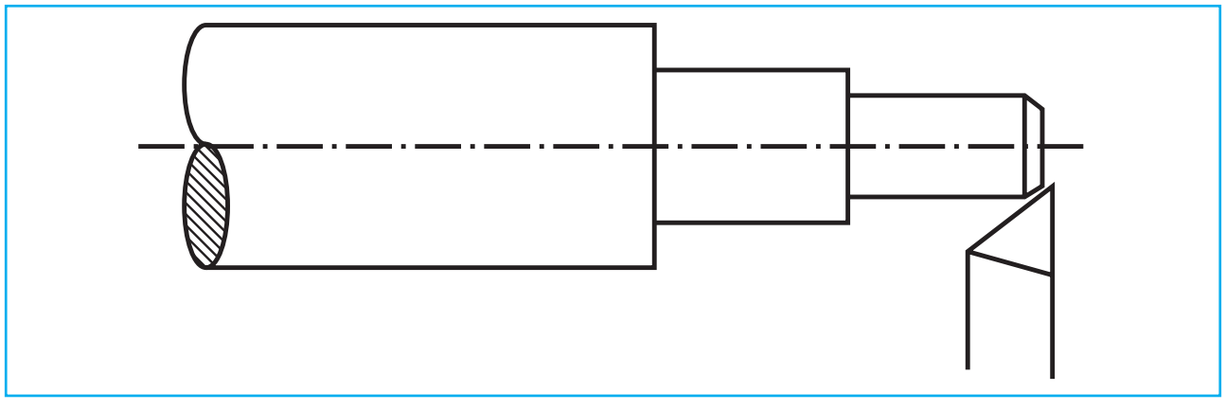


Marking

Marking is done on the work at the required point to indicate the length of the steps to be turned.

Procedure

1. The cross-slide is adjusted for required depth of cut and the lathe is switched on. The plain turning tool mounted on the toolpost is given feed by the carriage parallel to the lathe axis.
2. The above process is repeated until the given larger diameter is obtained. The length should be equal to the sum of the lengths of larger and smaller diameter. When the larger step of given diameter is obtained, the tool is again fed parallel to the lathe axis to the given length of smaller step. Depth of cut is gradually given by the cross-slide to get the smaller step of required length and diameter.
3. During this process, the dimensions of the work are checked with the help of outside caliper and inside calipers.
4. Finishing tool is used to obtain accurate dimensions of length and diameter.
5. The chamfering tool (form tool) is set at the work at the required angle. Feed is given to the tool by the cross-slide to perform chamfering.

Result

The finished piece of work is sent for inspection after the machining is over.

XII BME_English version_Practicals.indd 196 1/8/2020 1:50:18 PM