
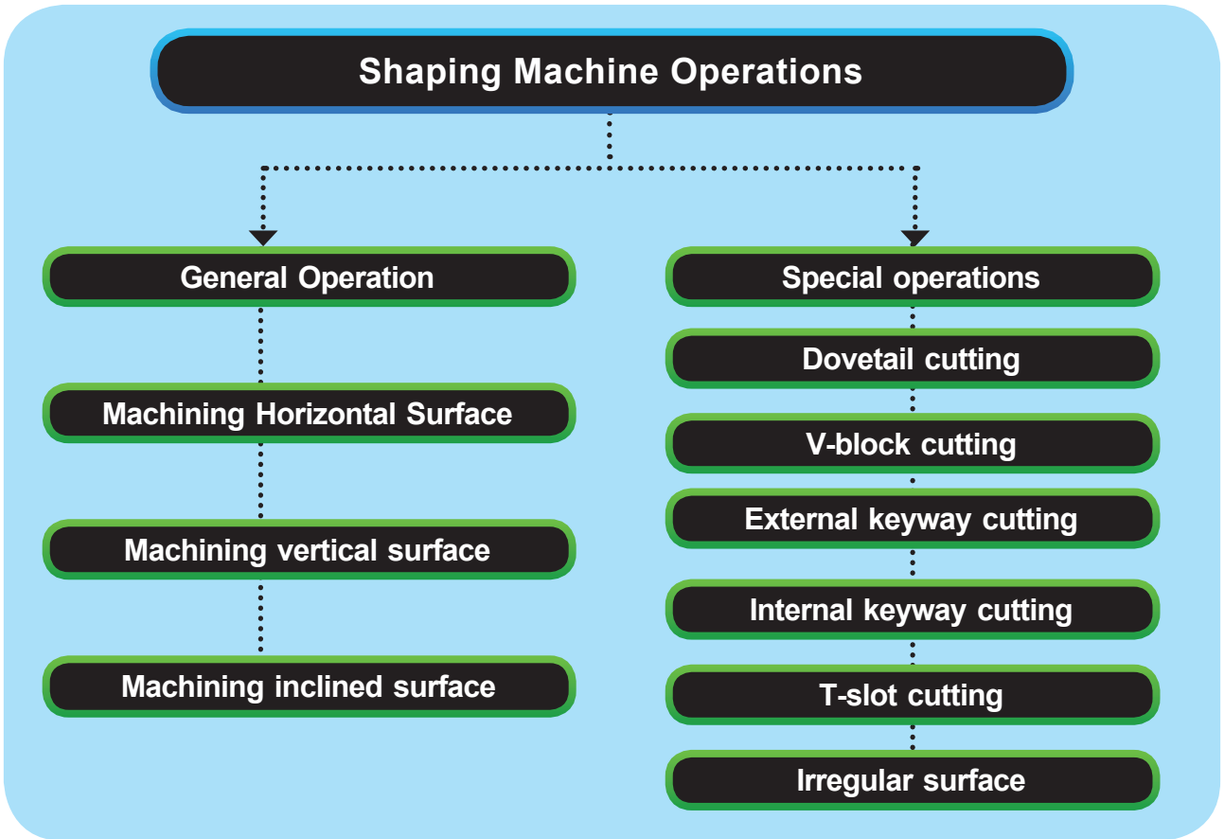


The feed is given to the tool by rotating the downfeed screw of the vertical slide. The table is not moved vertically for this purpose. The apron is swiveled away from the vertical surface being machined as shown in the diagram.

Machining Inclined surfaces

If the surface to be machined is neither horizontal nor perpendicular, the surface is called inclined surface. Machining 'V' grooves and dovetail grooves are some examples for angular machining.

Machining the inclined (angular) surfaces can be done in several ways.

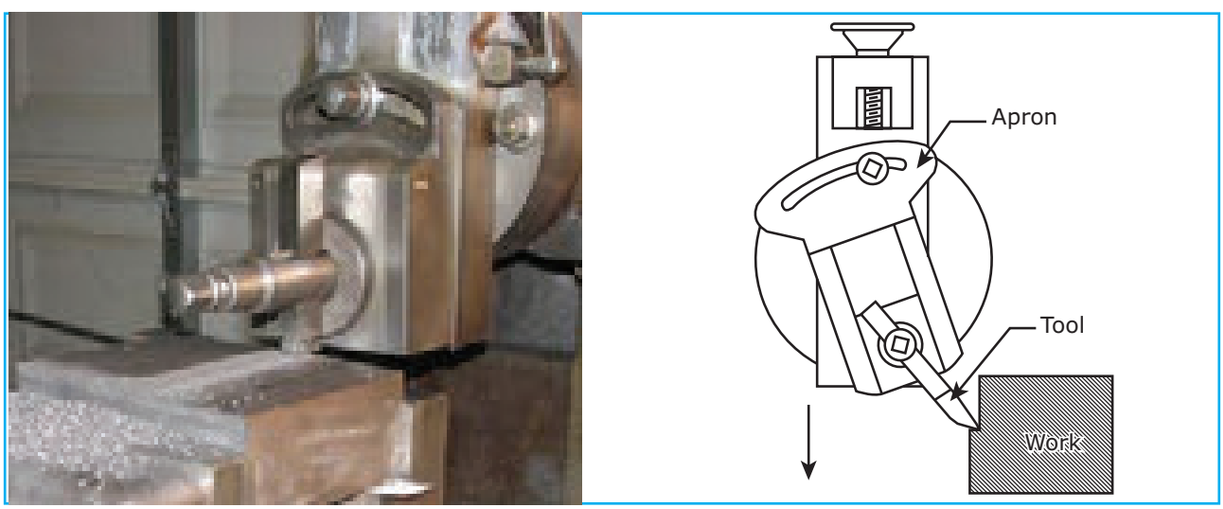

Machining vertical surfaces

XII BME_English version CHAPTER 03.indd 71 1/8/2020 1:44:00 PM