


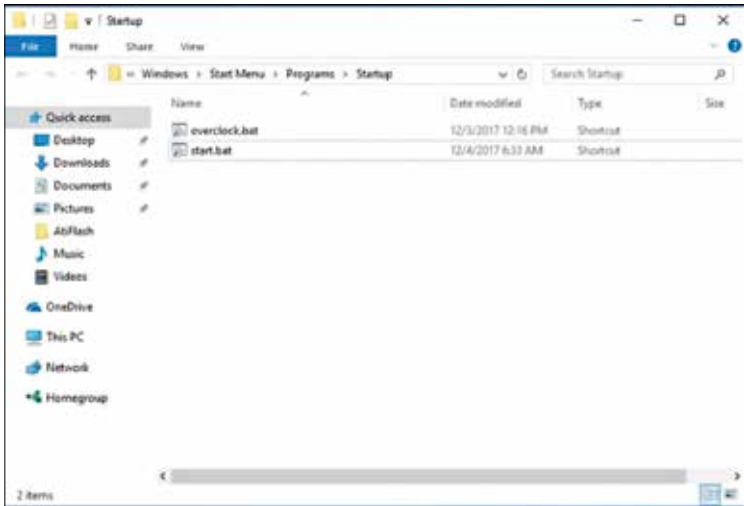

- If you don't get any memory errors after 2-3 minutes, your GPU isn't having any issues running at those speeds. Now we'll try to raise the RAM clock rate by 50 MHz increments, repeating steps 4 and 5 each time.
- If you get a few errors, you can keep it as it is. However, if you get profuse errors then you need to reduce your clock rate by 50 MHz

Mining at Windows Startup

- Make a shortcut to the "start.bat" file in Claymores.
- Create a shortcut to the "overclock.bat" file in OverdrivenTools.
- Press Windows Key + R (it will open run mode).
- Run command "shell:startup"
- Then drag both OverdriveNtool and Claymore shortcuts to the popped up folder.

Takeaway

You should now have understood the concept of mining. By following the step-by-step procedure you can successfully efficiently optimise your mining crypto. **d**