

25. Now tick 'Dead Phone USB flashing'. Make sure your phone is not connected at this point.


26. Press Options-you will get list of five files, one of which will be red in color. Select that file and delete-confirm 'yes' and press OK.

27. Now switch off your mobile phone. Don't connect it as yet. Make sure battery level is minimum 50%. There are high chances of bricking your phone if battery drains out in the middle of the flashing procedure

28. Press Refurbish. Once you get this screen, connect your phone in switched off mode via usb, and then turn it on by pressing the power button for about three seconds and then press Ok. Flashing will begin.

29. Once flashing is complete, you will need to sync your data back to your phone.

Here are some screenshots of the phone.

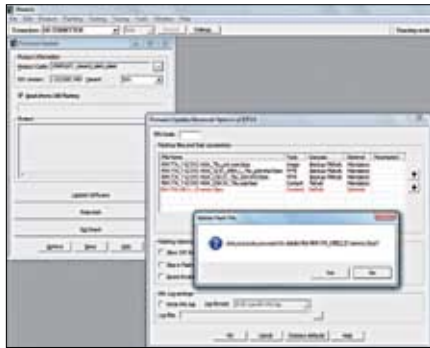

The flashing begins

DIY – Create your own FBUS adapter

Fbus (for “Fast Bus”) is an ANSI/IEEE data bus oriented towards back-planes and cell phones. It is used by Phoenix and J.A.F. to connect to your phone. Flashing can be accomplished by USB but testing out all features via Phoenix requires you to make use of the FBUS adaptor. Buying a new adaptor can throw you back by upwards of Rs. 3000/- for a multi pin configuration universal cable. Or you could make one for a few hundred rupees. Here's how -