

# Charging Arm

Install printed arm and servo arm together with M2.5 * 6mm screw and M2.5 nut

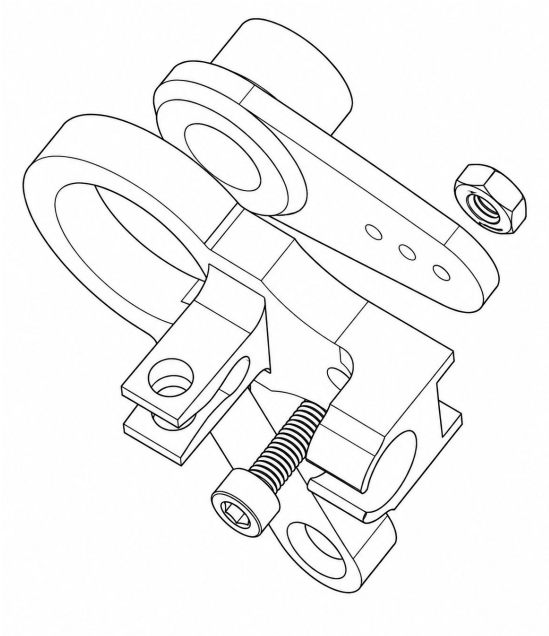



Hold the magnetic charging cable with M3 * 6mm screw and M3 nut

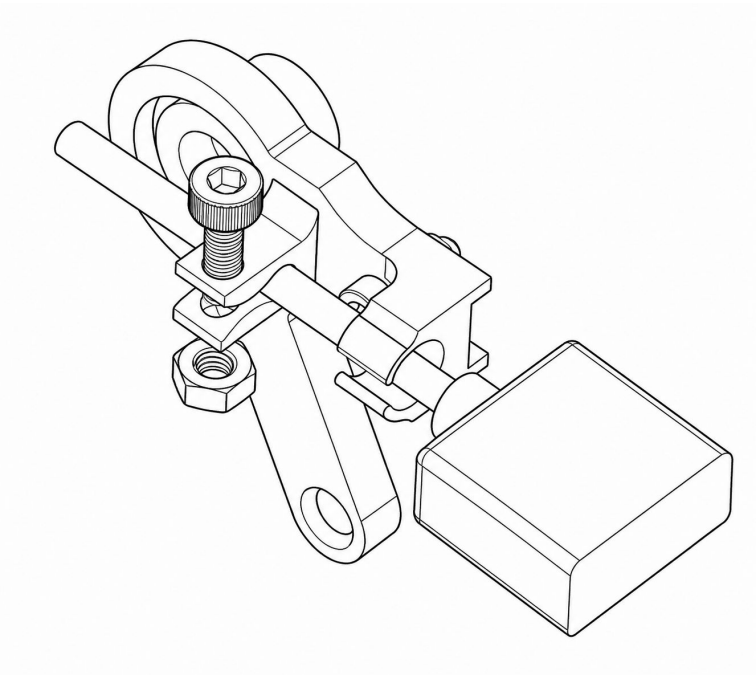


# Charging Box - heated inserts

Insert m3 heat inserts to the positions in the following image.

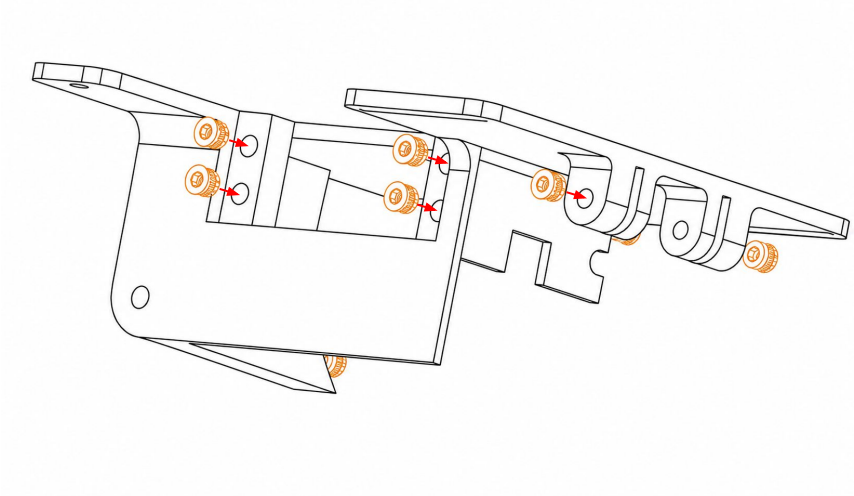


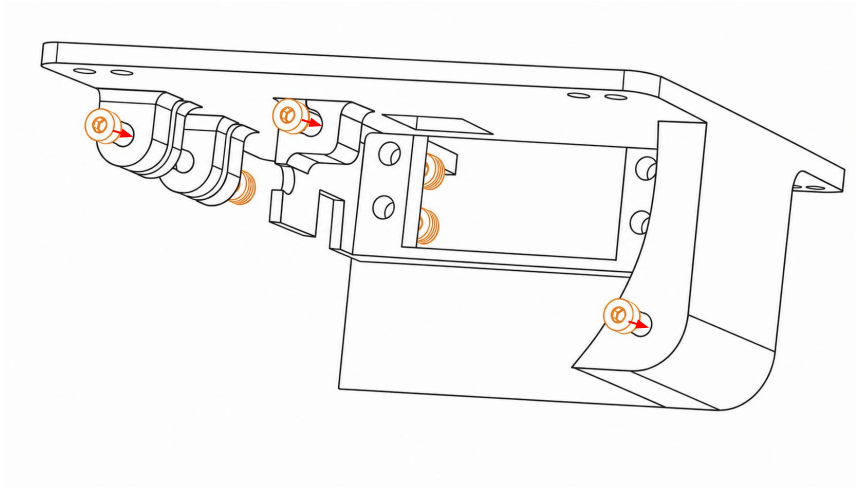


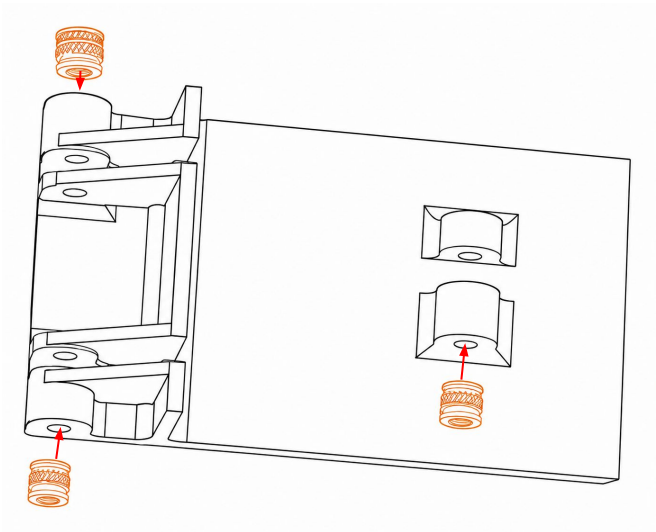

# Charging Box - Assembly

Use M3 * 10mm screws for all.

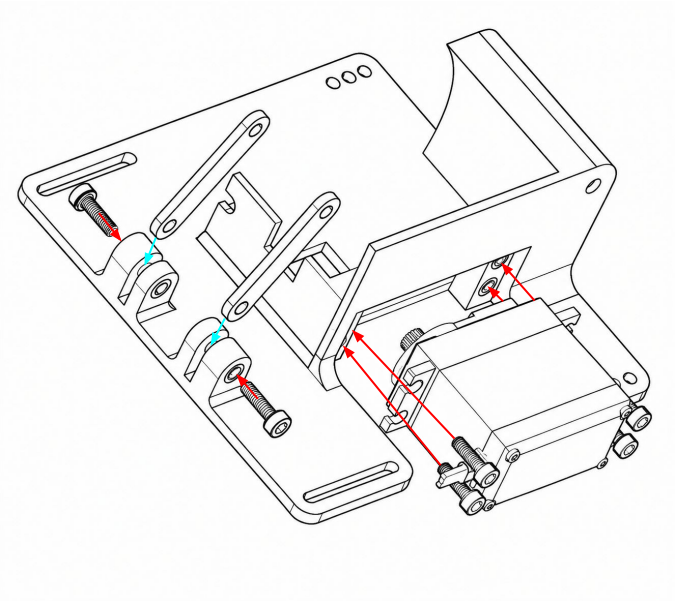

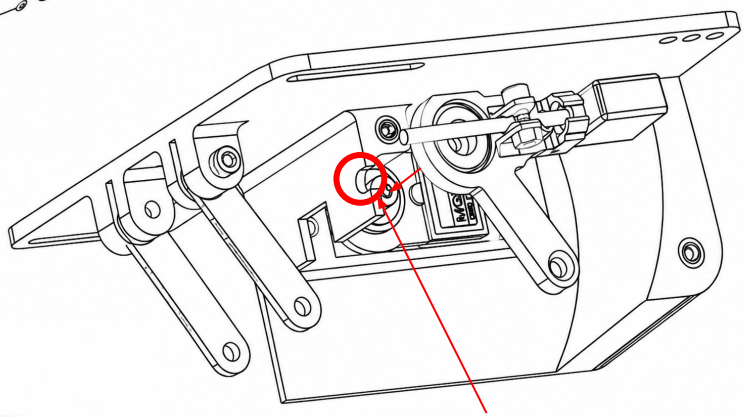

Cable goes through here

