OPERATIONS

Internal Use Only

# VSM Data Capture

Capture accurate process data during a Value Stream Mapping gemba walk — cycle times, changeover times,

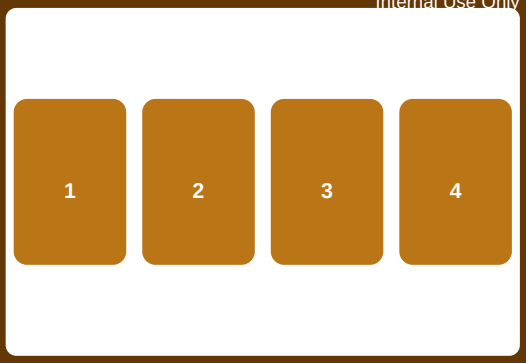


## WHEN TO USE

During the current state VSM gemba walk. Walk the process with this sheet, measure actual times (minimum 5 cycles per step), and record everything you observe.

## HOW TO APPLY — STEPS

1. Define the value stream boundaries: customer demand, start point, and end point
2. Calculate takt time: available seconds per day divided by customer demand per day
3. Walk the process from customer back to raw material — observe, do not manage
4. At each step: measure actual cycle time (5 cycles minimum), C/O time, and uptime %
5. Count physical inventory between each step and estimate queue time in hours
6. Note value-added (Y) vs non-value-added (N) classification for each step
7. Record number of operators and any waste or problem observations
8. Calculate process efficiency: total VA time divided by total lead time

## PRACTITIONER TIP

! NEVER estimate — measure. Walk upstream from customer to supplier. Use a stopwatch. The data you collect here becomes the foundation for every improvement decision on the VSM.

## KEY OUTPUTS

- Current state process data table (CT, C/O, uptime, inventory, queue time)
- Process efficiency % and lead time calculation
- Value-added vs non-value-added step classification
- Waste and problem observation notes for each step
- Input data for drawing the current state VSM

## HOW TO MEASURE SUCCESS

Total lead time (days); Value-added time (seconds); Process efficiency %; Total WIP inventory (units); % steps operating below takt time

TOOL CATEGORY
**Operations**