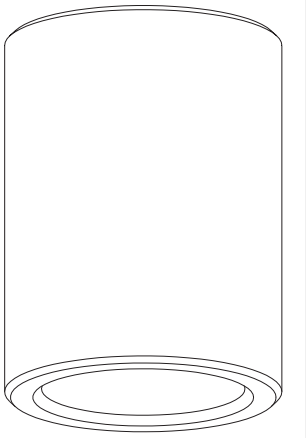

Case Hardened
60 - 64 HRc

To Be Use With

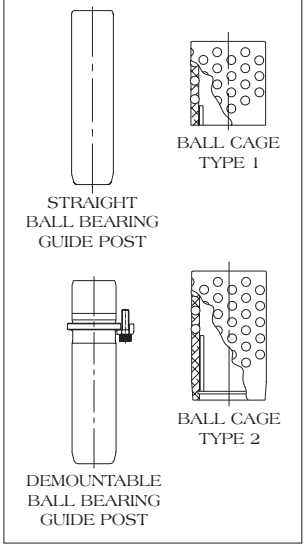

Examples

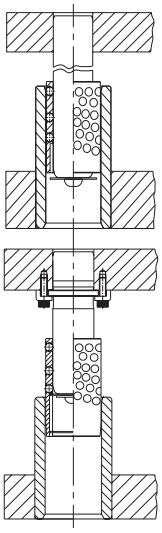

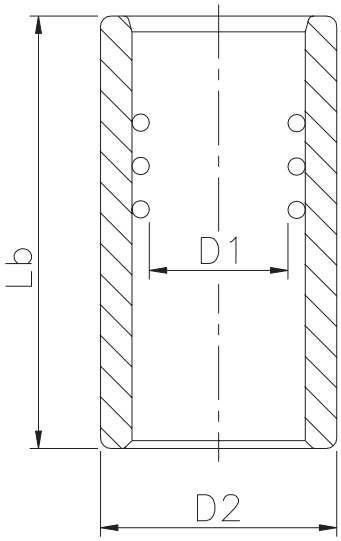

D_1	1	1 1/4	1 1/2	1 3/4	2	2 1/2	3
Lb	CATALOG NUMBER						
2.50	B35.008.010						
3.00	B35.008.012	B35.010.012	B35.012.012				
3.50	B35.008.014	B35.010.014		B35.014.014			
3.75			B35.012.015				
4.00	B35.008.016	B35.010.016			B35.016.016		
4.25				B35.014.017			
4.50	B35.008.018	B35.010.018	B35.012.018				
4.75					B35.016.019		
5.00	B35.008.020	B35.010.020	B35.012.020	B35.014.020			
5.50			B35.012.022	B35.014.022	B35.016.022		
6.00		B35.010.024	B35.012.024	B35.014.024		B35.020.024	B35.024.024
6.25					B35.016.025		
6.75						B35.020.027	B35.024.027
7.00			B35.012.028	B35.014.028	B35.016.028		
7.50						B35.020.030	B35.024.030
8.00			B35.012.032	B35.014.032	B35.016.032		
8.50						B35.020.034	B35.024.034
9.00				B35.014.036	B35.016.036		
9.50						B35.020.038	B35.024.038
10.00					B35.016.040		
10.50						B35.020.042	B35.024.042
D_2	1 7/8	2 1/8	2 1/2	2 3/4	3 1/4	3 3/4	4 1/4

MDL Straight Sleeve Ball Bearing Bushings should not be press-fit since close-in may occur.
If properly installed, no honing is necessary.

MDL recommends that Straight Sleeve Ball Bearing Bushings should be installed using Loctite 603.

For selection of appropriate Sleeve or Demountable Ball Bearing Bushing length, see page 15 when using with Cage type 1, or page 17 when using Cage type 2.

Assembly Instructions:

1.Press Guide Posts into Punch Holder Plate. End of Guide Posts with drill and tapped hole should not be pressed in. For Demountable Ball Bearing Guide Posts use Clamps and Screws supplied.
2.Be sure Guide Posts are perpendicular to the surface of the Punch Holder (0.001 in 6 inches).
3.Mount Ball Bearing Cages on the Guide Posts using Retainer Assembly supplied.
4.Place Die Shoe on a flat surface. For Big Die Sets we recommend using two horses to keep the bores accessible on both ends.
5.Place on Die Shoe two parallels having height as close as possible Minimum Shut Height.
6.Degrease Sleeve and Die Shoe Bore using appropriate solvent and wipe carefully.
7.Apply a thin layer of Loctite 603 on the Bores and Sleeves.
8.Position the Sleeve into Bore.
9.Bring the Punch Holder into position until it rests on the two parallels.
10.Check that the Sleeves are in the right position.
11.Allow the required time to harden: 4 hours at 72°F. Do not use Die Set during hardening process.