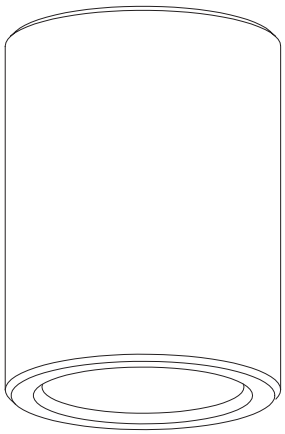

Case Hardened
60 - 64 HRc

To Be Use With

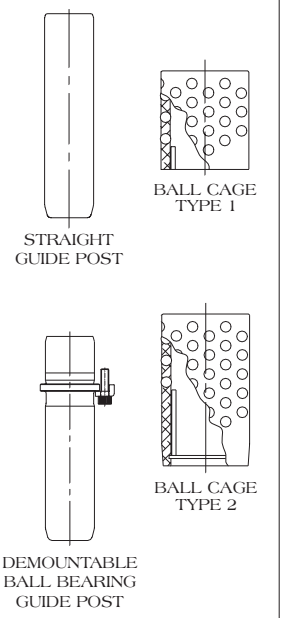

Examples

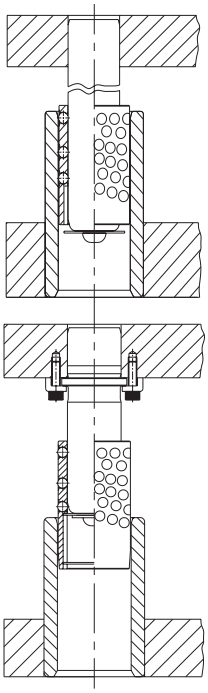

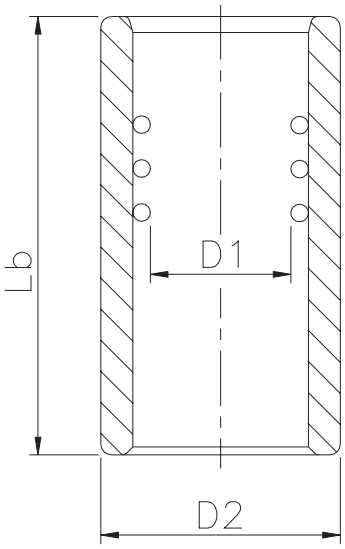

D_1	25	32	40	50	63	80
L_b	CATALOG NUMBER					
65	B30.025.065					
80	B30.025.080	B30.032.080	B30.040.080			
95	B30.025.095	B30.032.095	B30.040.095			
110	B30.025.110	B30.032.110	B30.040.110	B30.050.110		
130	B30.025.130	B30.032.130	B30.040.130	B30.050.130		
150		B30.032.150	B30.040.150	B30.050.150	B30.063.150	B30.080.150
170		B30.032.170	B30.040.170	B30.050.170	B30.063.170	B30.080.170
190			B30.040.190	B30.050.190	B30.063.190	B30.080.190
215			B30.040.215	B30.050.215	B30.063.215	B30.080.215
240				B30.050.240	B30.063.240	B30.080.240
265				B30.050.265	B30.063.265	B30.080.265
D_2	45	54	65	81	95	112

MDL Straight Sleeve Ball Bearing Bushings should not be press-fit since close-in may occur.
If properly installed, no honing is necessary.

MDL recommends that Straight Sleeve Ball Bearing Bushings should be installed using Loctite 603.

For selection of appropriate Sleeve or Demountable Ball Bearing Bushing length, see page 29 when using with Cage type 1, or page 31 when using Cage type 2.

Assembly Instructions:

1.Press Guide Posts into Punch Holder Plate. End of Guide Posts with drill and tapped hole should not be pressed in.
For Demountable Ball Bearing Guide Posts use Clamps and Screws supplied.
2.Be sure Guide Posts are perpendicular to the surface of the Punch Holder (0.025 in 150 mm).
3.Mount Ball Bearing Cages on the Guide Posts using Retainer Assembly supplied.
4.Place Die Shoe on a flat surface. For Big Die Sets we recommend using two horses to keep the bores accessible on both ends.
5.Place on Die Shoe two parallels having height as close as possible Minimum Shut Height.
6.Degrease Sleeve and Die Shoe Bore using appropriate solvent and wipe carefully.
7.Apply a thin layer of Loctite 603 on the Bores and Sleeves.
8.Position the Sleeve into Bore.
9.Bring the Punch Holder into position until it rests on the two parallels.
10.Check that the Sleeves are in the right position.
11.Allow the required time to harden: 4 hours at 22°C. Do not use Die Set during hardening process.