

VCarve Desktop

Install PostProcessor

Start VCarve Desktop.

Navigate to the "Machine" menu and click "Post-Processor Management".

Click the "Install Post-Processor" button.



Select and import the "Carvera ATC (mm) (*.cnc).pp" file.


Repeat importing the "Carvera Wrap X2A ATC (mm) (*.cnc).pp" file and "Carvera Laser (mm) (*.cnc).pp" file.

Create Machine

Navigate to the "Machine" menu and click "Machine Configuration Management".

Click the "Add a custom machine" button.

Fill in the information as shown below.

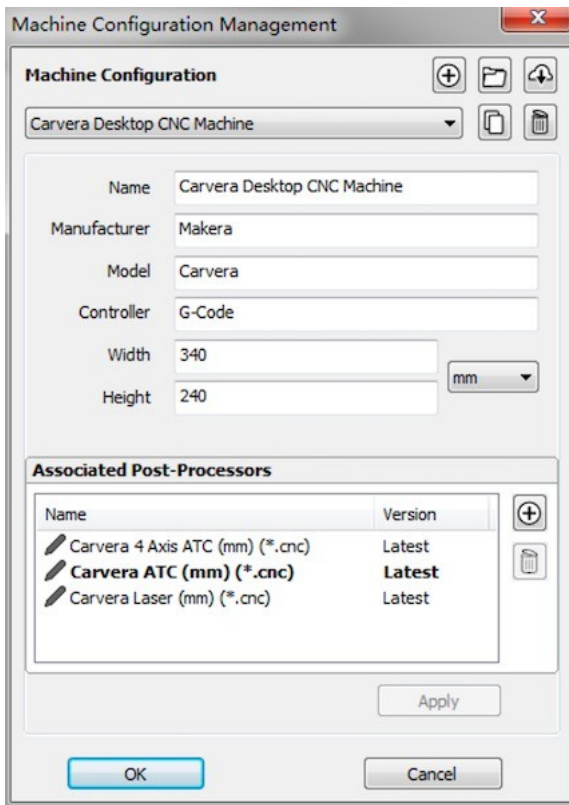

The image shows a "Machine Configuration Management" dialog box. It has a title bar with a close button. Below the title bar is a "Machine Configuration" section with a dropdown menu showing "Carvera Desktop CNC Machine". To the right of the dropdown are icons for adding, saving, and deleting. Below the dropdown are input fields for Name, Manufacturer, Model, Controller, Width, and Height. The Name field is filled with "Carvera Desktop CNC Machine", Manufacturer with "Makera", Model with "Carvera", Controller with "G-Code", Width with "340", and Height with "240". To the right of the Width and Height fields is a unit dropdown menu set to "mm". Below the input fields is an "Associated Post-Processors" section with a table. The table has two columns: "Name" and "Version". There are three rows of post-processors, each with a pencil icon to its left. The first row is "Carvera 4 Axis ATC (mm) (*.cnc)" with version "Latest". The second row is "Carvera ATC (mm) (*.cnc)" with version "Latest". The third row is "Carvera Laser (mm) (*.cnc)" with version "Latest". To the right of the table are icons for adding and deleting. Below the table is an "Apply" button. At the bottom of the dialog are "OK" and "Cancel" buttons.

Name	Version
Carvera 4 Axis ATC (mm) (*.cnc)	Latest
Carvera ATC (mm) (*.cnc)	Latest
Carvera Laser (mm) (*.cnc)	Latest


Select the post processors just imported and set the "Carvera ATC (mm)(*.cnc)" as default.

Click "Apply" then "OK" to save the configuration.

Install Tool Database

Navigate to the "Toolpaths" menu and click "Tool Database".

Click the "Import a tool database" button.

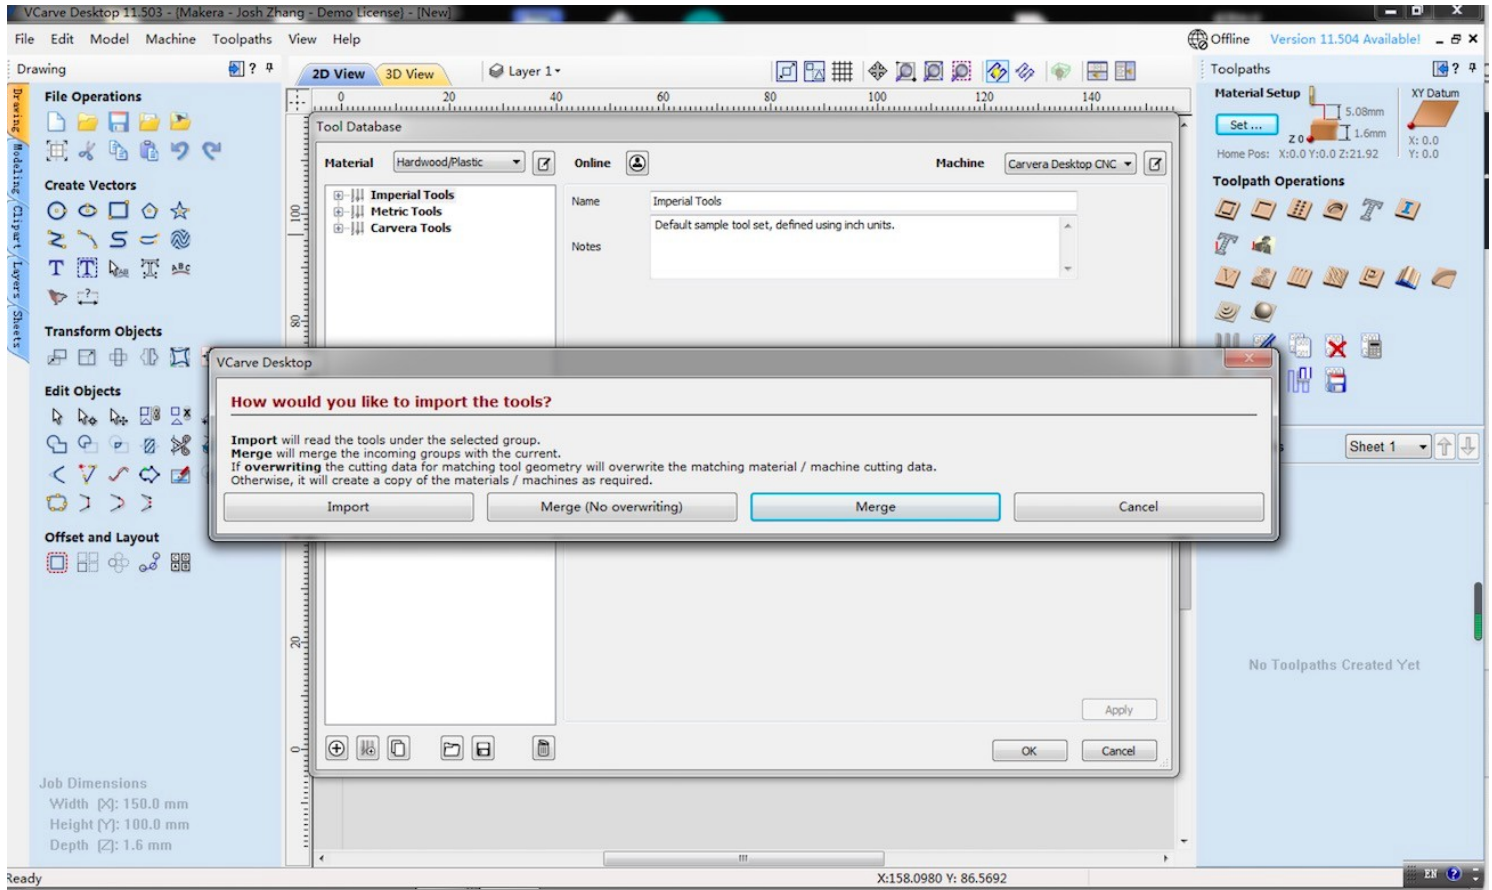


Select the "CarveraTools.vtdb" file.

Click the "Merge" button on the popup confirm dialog and finish the import.

Using VCarve Desktop Profiles

When saving Tool paths, select Carvera Desktop CNC Machine and a suitable post processor for your job.

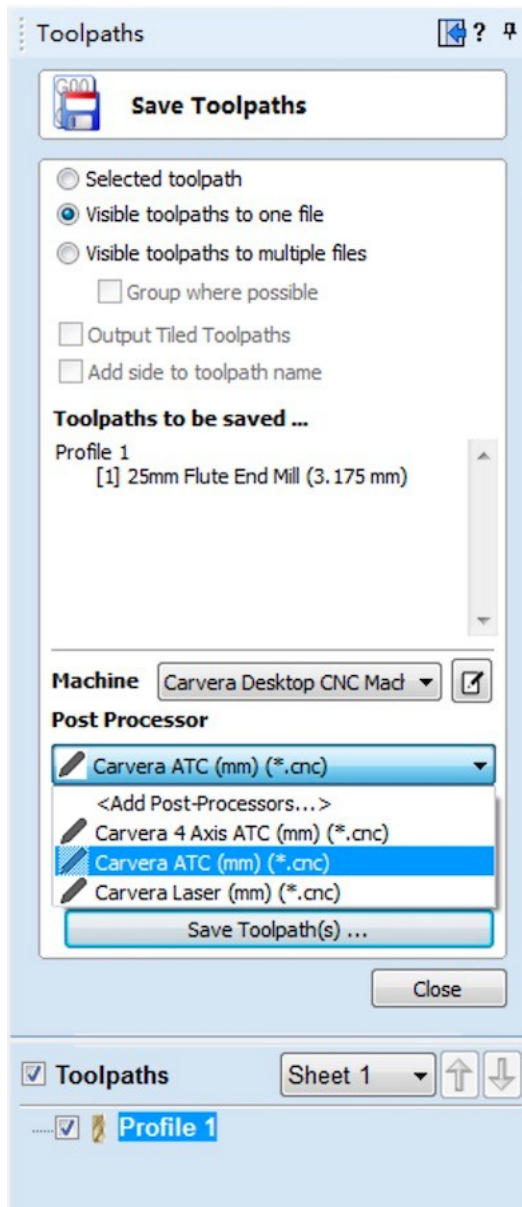

When working with 4th axis parts: 1: Set your Z to be the center of your stock, not the surface, or you'll have a bad day.

Vcarve pro rounding toolpaths assume that the stock starts flat. Insert your stock, rotate it to flat (use a bubble level if you want), then in Carvera control press the "A" control at the top and then click "A=0" to zero out the rotation and set your start. The toolpath will rotate the stock 45degrees to bring the corner to the top when it starts and if all goes well, the bit will just kiss the corner as it starts.

The jaws on the headstock are invertible! if you have a smaller workpiece, you can flip the jaws around and grab much smaller things. The Jaws are marked 1-4 (I added a paint pen number to see them easier to distinguish, but it is stamped on there as well), when putting them in normally (longer part of the jaw on the outside, you want to do them in order of 1-4. If you are flipping them, you need to re-insert them into the headstock in reverse order, 4-1, otherwise they won't close evenly and your stock will be off center and you'll have a bad day.

Thanks to renderman on the discord for this information!