


1. Open the UG installation folder, the path should be: Program Files -> Siemens -> NX 10.0 -> MACH -> resource -> postprocessor.
2. Copy the files 'CARVERA.DEF' , 'CARVERA.PUI' , and 'CARVERA.TCL' into the 'postprocessor' folder.
3. Locate the 'template_post.dat' file in the 'postprocessor' folder and open it using Notepad.

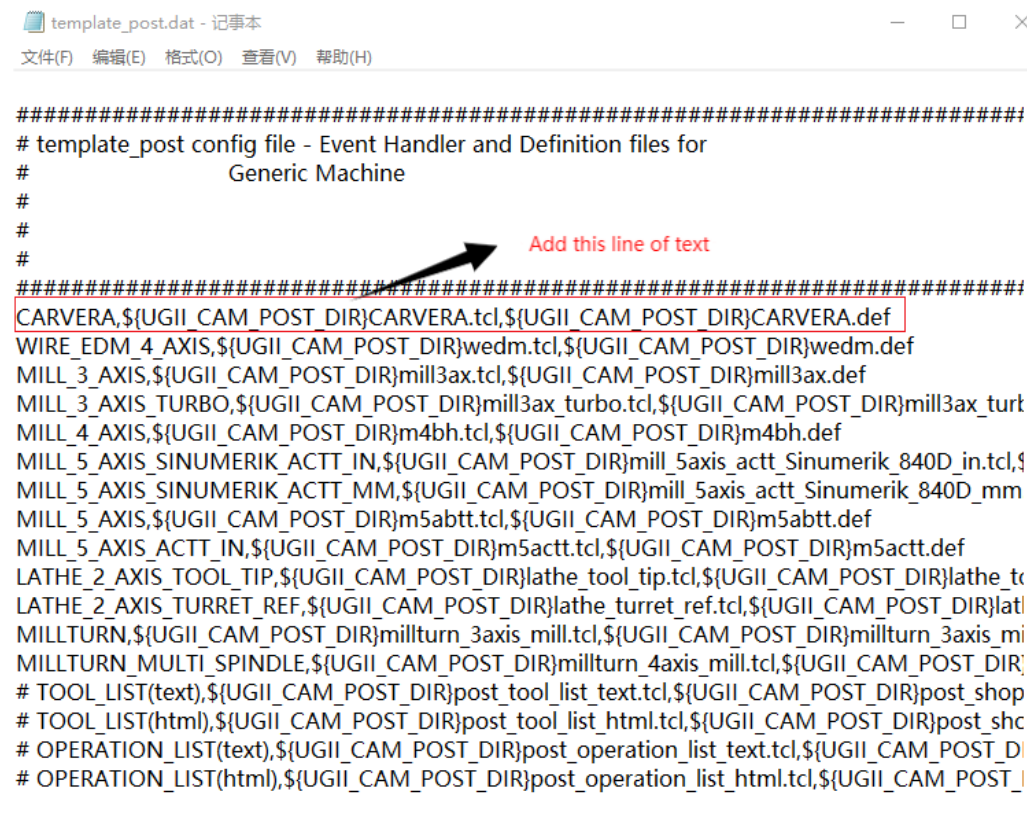

```
#####
# template_post config file - Event Handler and Definition files for
#                               Generic Machine
#
#
#####
CARVERA,{UGII_CAM_POST_DIR}CARVERA.tcl,{UGII_CAM_POST_DIR}CARVERA.def
WIRE_EDM_4_AXIS,{UGII_CAM_POST_DIR}wedm.tcl,{UGII_CAM_POST_DIR}wedm.def
MILL_3_AXIS,{UGII_CAM_POST_DIR}mill3ax.tcl,{UGII_CAM_POST_DIR}mill3ax.def
MILL_3_AXIS_TURBO,{UGII_CAM_POST_DIR}mill3ax_turbo.tcl,{UGII_CAM_POST_DIR}mill3ax_turbo.def
MILL_4_AXIS,{UGII_CAM_POST_DIR}m4bh.tcl,{UGII_CAM_POST_DIR}m4bh.def
MILL_5_AXIS_SINUMERIK_ACTT_IN,{UGII_CAM_POST_DIR}mill_5axis_actt_Sinumerik_840D_in.tcl,{UGII_CAM_POST_DIR}mill_5axis_actt_Sinumerik_840D_in.def
MILL_5_AXIS_SINUMERIK_ACTT_MM,{UGII_CAM_POST_DIR}mill_5axis_actt_Sinumerik_840D_mm.tcl,{UGII_CAM_POST_DIR}mill_5axis_actt_Sinumerik_840D_mm.def
MILL_5_AXIS,{UGII_CAM_POST_DIR}m5abtt.tcl,{UGII_CAM_POST_DIR}m5abtt.def
MILL_5_AXIS_ACTT_IN,{UGII_CAM_POST_DIR}m5actt.tcl,{UGII_CAM_POST_DIR}m5actt.def
LATHE_2_AXIS_TOOL_TIP,{UGII_CAM_POST_DIR}lathe_tool_tip.tcl,{UGII_CAM_POST_DIR}lathe_tool_tip.def
LATHE_2_AXIS_TURRET_REF,{UGII_CAM_POST_DIR}lathe_turret_ref.tcl,{UGII_CAM_POST_DIR}lathe_turret_ref.def
MILLTURN,{UGII_CAM_POST_DIR}millturn_3axis_mill.tcl,{UGII_CAM_POST_DIR}millturn_3axis_mill.def
MILLTURN_MULTI_SPINDLE,{UGII_CAM_POST_DIR}millturn_4axis_mill.tcl,{UGII_CAM_POST_DIR}millturn_4axis_mill.def
# TOOL_LIST(text),{UGII_CAM_POST_DIR}post_tool_list_text.tcl,{UGII_CAM_POST_DIR}post_tool_list_text.def
# TOOL_LIST(html),{UGII_CAM_POST_DIR}post_tool_list_html.tcl,{UGII_CAM_POST_DIR}post_tool_list_html.def
# OPERATION_LIST(text),{UGII_CAM_POST_DIR}post_operation_list_text.tcl,{UGII_CAM_POST_DIR}post_operation_list_text.def
# OPERATION_LIST(html),{UGII_CAM_POST_DIR}post_operation_list_html.tcl,{UGII_CAM_POST_DIR}post_operation_list_html.def
```

4. Open the NX project file, right-click on the desired program file, select "Postprocess," and after configuring the settings as shown in the picture, click "OK" to generate the toolpath file.

