

Document No	:	MT-056-SOP-002	STANDARD OPERATING PROCEDURE
Effective Date	:	March 5, 2025	
Revision Status	:		Installation of Components on Sparc CNC PCB
Department : Engineering			

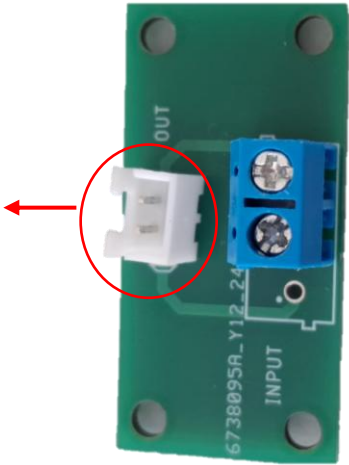
1. PURPOSE :

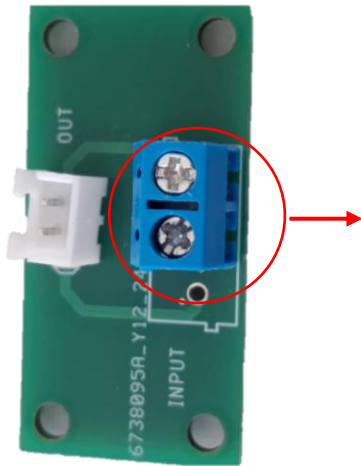
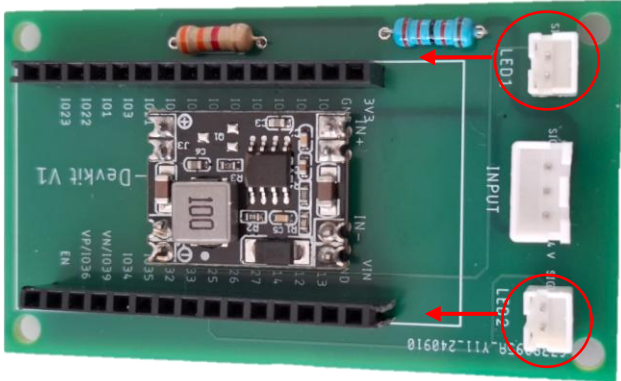
to find out the installation of components on Sparc CNC PCBs both PCBs using batteries and PCBs without batteries.

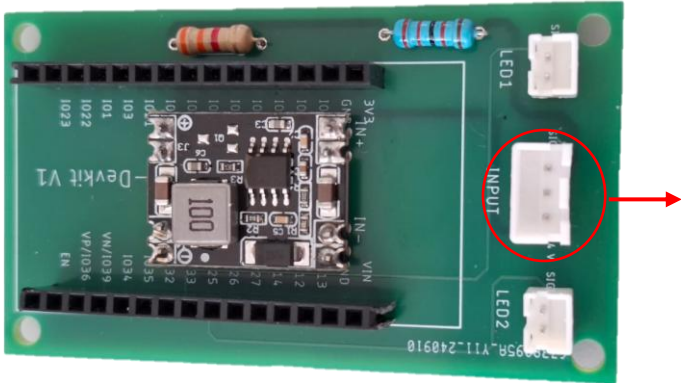
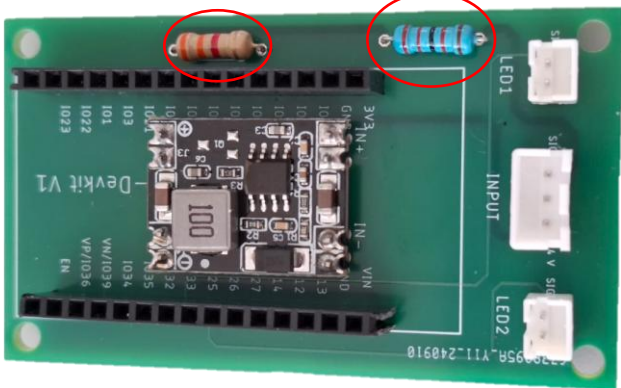
2. SCOPE :

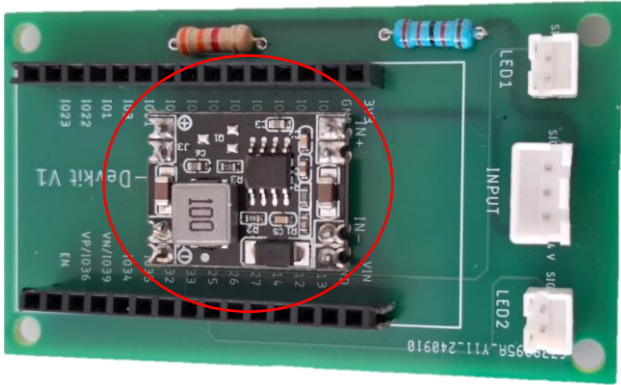
This document describes each process and direction of attaching each component to the PCB.

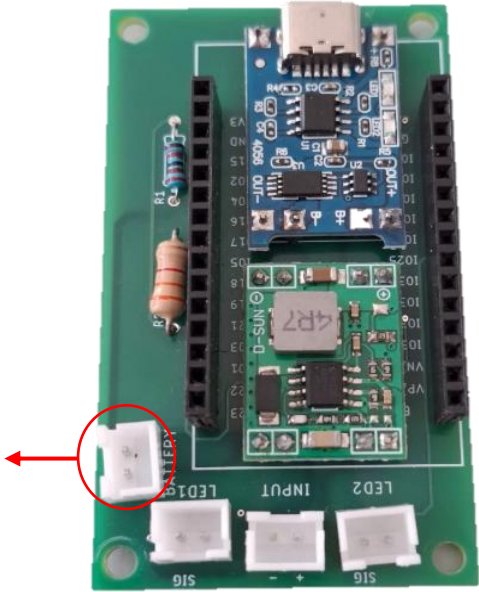
3. PROCEDURE DETAILS:

No.	Picture	Detail
1		Attach the 2-pin JST terminal to the Output pin in the direction of the arrow.

		Install a 2-pin terminal block on the input pin.
PCB Without Battery		
2		Install the 2-pin jst terminal on the LED 1 and LED 2 pins in the direction of the arrow.

		Attach the 3-pin JST to the Input pin in the arrowlike direction.
		Added a 3K3 Resistor and a 100K resistor.

		Pairing MP1584 components. (note the direction of input and output pins).
PCB With Battery		
4		Install the 2-pin jst terminal on the LED 1 and LED 2 pins in the direction of the arrow.

		Install the 2-pin JST on the battery pin with the direction of the arrow.
		Install the 2-pin JST on the Input pin with the direction of the arrow.



Install TP4056 components by paying attention to the input and output pin labels on the PCB.



Pairing MP1584 components.
(note the direction of input and output pins).

