Lab 13 - Controlling I/O Pins of Microcontroller

13.1 Digital Write

13.1.1 Digital Write Method 1:

The following code will set an I/O pin of microcontroller to high or low:

This will turn on the LED attached to D13 pin of Arduino Uno (built-in LED on Arduino Uno development board). Actually, it is *PB5* pin of ATmega328p.

13.1.2 Digital Write Method 2:

In this method we can use predefined names of the I/O pins defined in the "m328pdef.inc" file.

13.1.3 Digital Write Method 3:

Without using left-shift operators we can also write the bits explicitly:

```
LDI r16, 0b00100000 ; r16 = 00100000

OUT DDRB, r16 ; PB5 set as an OUTPUT pin

LDI r17, 0b00100000 ; r17 = 00100000

OUT PORTB, r17 ; PB5 pin --> HIGH (5v)
```

So, all the above three methods are exactly same. But the issue with these methods is that whenever you set a pin all other pins of the microcontroller are also affected.

The below method 4 and 5 shows the ways to change the required pin without disturbing other I/O pins of the MCU.

13.1.4 Digital Write Method 4:

This method uses "Bit Masking" method to only change the required bit in the I/O registers.

```
.include "m328pdef.inc"
.cseg
.org 0x00
; setting PB5 pin as OUTPUT
      IN r16, DDRB
      ORI r16, (1<<PB5) ; r16 = ??1?????
      OUT DDRB, r16
                                      ; PB5 set as an OUTPUT pin
; setting PB5 pin to HIGH
      IN r16, PORTB
      ORI r16, (1<<PB5) ; r16 = ??1?????
OUT PORTB, r16 ; PB5 pin --> HIGH (5v)
      ;delay()
; setting PB5 pin to LOW
      IN r16, PORTB
      ANDI r16, ~(1<<PB5)
OUT PORTB, r16
                                     ; r16 = ??0?????
                                       ; PB5 pin --> LOW (0v)
loop:
rjmp loop
                         ; stay in infinite loop
```

13.1.5 Digital Write Method 5:

This is the easiest method that requires only two commands; set bit (SBI) and clear bit (CBI):

SBI – Set Bit in I/O Register and **CBI** – Clear Bit in I/O Register instructions set and clear the specific bit in the I/O register without disturbing other bits of that register.

Other set bit instructions are as follows:

- SBR Set Bit in General-Purpose Register
- **CBR** Clear Bit in General-Purpose Register
- **SER** Set whole register (11111111)
- **CLR** Clear whole register (00000000)

13.1.6 Blink the LED using Procedure

To blink an LED, we have to implement a delay function to stop the execution of program for specific time interval then resume the execution. For that purpose, we have two options:

- Blocking Delay: Halt the entire program and wait for the delay (wasting clock cycles to achieve delay).
- **Non-blocking Delay:** CPU performs other activities and when the delay time is passed then perform that task.

In the following example, we implemented blocking delay for LED blinking:

```
.include "m328pdef.inc"
.cseg
.org 0x00
                         ; PB5 set as an OUTPUT pin
       SBI DDRB, PB5
loop:
      SBI PORTB, PB5 ; PB5 pin --> HIGH (5v)
CALL delay ; Delay of 0.5 second
CBI PORTB, PB5 ; PB5 pin --> LOW (0v)
CALL delay ; Delay of 0.5 second
rjmp loop
                                  ; stay in infinite loop
; Delay Procedure (0.5 seconds)
delay:
       LDI r18,71 ; initialize outer loop count
       L1:
              LDI r24,LOW(28168) ; intialize inner loop count in inner LDI r25,HIGH(28168) ; loop high and low registers
       L2:
              ret
```


Adding the clock cycles used by these instructions in loops gives a cycle count of 8000000. At 16 MHz, this is exactly 0.5 seconds. So, to change the desired delay we have to change the loop counts accordingly. In the next example we performed these calculations in the code to get variable delay according to the user's need.

13.1.7 Blink the LED using Macro

Unlike subroutines/procedures where the microcontroller will jump to a new section of code, the assembler will simply replace macros with the code it represents during assembly. We can also pass parameters to macros.

Add the following macro in a new include file named "delayMacro.inc":

```
;* macro: delay
;* description: creates a delay for the specified number of milliseconds
;* inputs: @0 - number of milliseconds to delay for
;* registers modified: none
.macro delay
     push r18
     push r24
     push r25
     ldi
          r18,00/10
L1:
     ldi
          r24,LOW(39998)
                         ; intialize inner loop count in inner
     ldi
          r25,HIGH(39998)
                         ; loop high and low registers
L2:
     sbiw r24,1
                          ; decrement inner loop registers
     brne L2
                          ; branch to L2 if iLoop registers != 0
     dec r18
                          ; decrement outer loop register
                          ; branch to L1 if outer loop register != 0
     brne L1
     nop
                          ; no operation
     pop
          r25
          r24
     pop
          r18
     pop
.endmacro
```

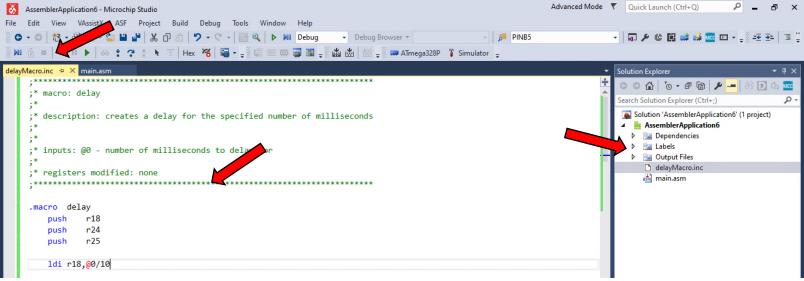

Then include this macro file in our project:

```
.include "delayMacro.inc"
```

Hence the *main.asm* file becomes:

```
.include "m328pdef.inc"
.include "delayMacro.inc"

.cseg
.org 0x00
    SBI DDRB, PINB5 ; PB5 set as an OUTPUT pin
loop:
    SBI PORTB, PINB5 ; PB5 pin --> HIGH (5v)
    delay 1000 ; Delay of 1 second
    CBI PORTB, PINB5 ; PB5 pin --> LOW (0v)
    delay 1000 ; Delay of 1 second
    rjmp loop ; stay in infinite loop
```

Important: From now, we will use this delay macro our examples throughout the Lab. The maximum delay supported by this macro is 2500 milliseconds (2.5 seconds). So, to get delay larger than 2.5 seconds just reuse the delay macro again and again.

```
delay 4000 ; error

delay 2000
delay 2000 ; success
```

13.1.8 LED Toggling

A shorter method to ON/OFF the LED is to use XOR operator to invert the previous state of the PORTB register. So, we don't have to explicitly set or clear the bits of PORTB register, XOR automatically do this.

Another easiest way to toggle a pin is just set bit in **PINx** register again and again while in a loop:

```
loop:
SBI PINB, PB5; Toggle the state of the PB5 pin delay 1000
rjmp loop
```

13.2 Digital Read

To read the state of an I/O pin of the microcontroller we have two steps:

- Configure the pin as INPUT using **DDRx** register by setting the corresponding bit to 0.
- Read the state of the pin using **PINx** register by reading the corresponding bit.
- (optional) Set the pull-up using PORTx register by setting the corresponding bit to 1.


For example, to read the state (HIGH or LOW) of PB5 pin we will read bit number 5 of the PINB register. If the bit number 5 is 1 it means, PB5 pin is high, if the bit number 5 of PINB register is zero then it means PB5 pin in low.

When we declare a pin as input then there are 3 conditions of that pin:

- **High:** means there is high pulse (5v) on that pin from external sensor.
- Low: means there is low pulse (0v) or Ground on that pin.
- High-Impedance (Floating): means the pin is not connected to either 5v or 0v but it is floating (not connected to anything). This state is not recommended so whenever we configure a pin as an input pin, we should set it default either high or low. This is called pull-up or pull-down respectively. ATmega328p only supports internal pull-up.

13.2.1 Turn ON the LED using Push Button

Let's attach a push button to PB3 pin and then blink LED if the button is pressed. This is the circuit diagram.

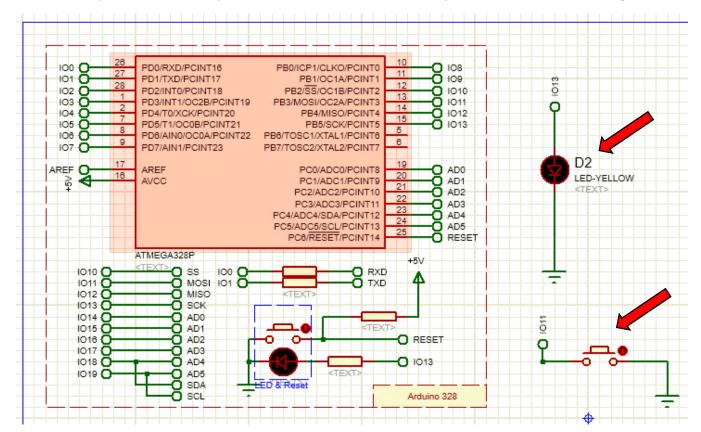

This is the assembly code to read the status of a push button attached to the PB3 pin and then turn ON the LED on PB5 pin if the push button is pressed. When the button is released then turn OFF the LED again:

```
.include "m328pdef.inc"
.include "delayMacro.inc"
.cseq
.org 0x00
     CBI PORTB, PB5
CBI DDRB, PB3
SBI DORTS
                               ; PB5 set as OUTPUT Pin
                               ; LED OFF
                               ; PB3 set as INPUT pin
      SBI PORTB, PB3
                               ; Enable internal pull-up resistor
loop:
      ; check if push buttong is pressed
      SBIS PINB, PB3; if not pressed, skip next line if the PINB reg. bit# 3 is 1
      rjmp L1
      CBI PORTB, PB5 ; LED OFF
rjmp loop
L1:
      SBI PORTB, PB5 ; LED ON
rjmp loop
```


The **SBIS** (**S**kip if **B**it in **I**/O Register is **S**et) instruction checks the bit on I/O register and if that bit is 1 then skip the next coming instruction. (e.g., in our case CALL L1 instruction).

These are some "Skip" Branching instructions in AVR assembly:

Mnemonic	Description
SBRC	skip if bit in register cleared
SBRS	skip if bit in register set
SBIC	skip if bit in i/o register cleared
SBIS	skip if bit in i/o register set


13.3 Analog Read

An Analog to Digital Converter (ADC) is used to turn an analog signal into a digital one. It does this by measuring voltage on its input pin.

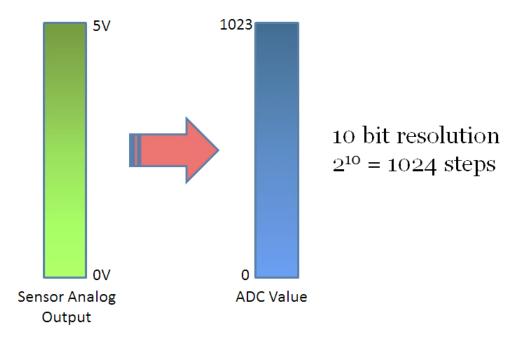

ATmega328p has 10-bit resolution ADC which provide output result in the range of 0-1023. It means at a given input voltage to analog pin, the ADC converts that voltage level and map it to a value between 0 and 1023. ATmega328p has 6 analog read pins (PC0 to PC5). Note that analog write is not supported on these pins.

Below is a block diagram of the ADC in the ATmega328p. A *multiplexer* (MUX) selects one of six inputs to be fed into the ADC. A *prescaler* determines the speed of the conversion. The output is 10-bits wide, so the lowest eight bits go into the *ADCL* register; and the *ADCH* register holds the remaining high bits in its low end.

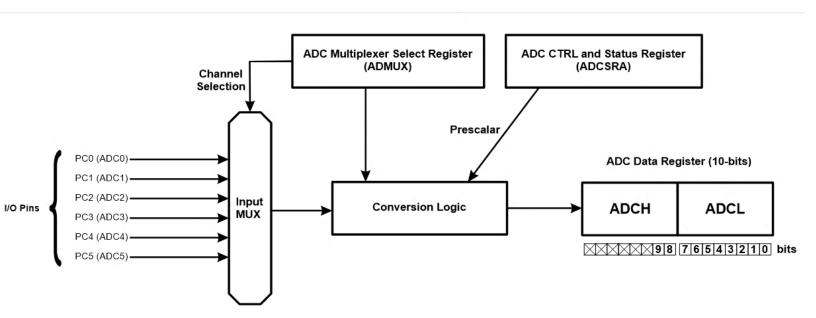

13.3.1 Reading Light Intensity using LDR Sensor

The following example reads the value on ADCO pin (PCO) of ATmega328p and then turn ON and OFF an LED attached to the PB5 pin by comparing the LDR reading with a threshold value.

```
.include "m328pdef.inc"
.include "myMacro.inc"
.def A = r16
.def AH = r17
.org 0x00
      ; I/O Pins Configuration
                                ; Set PB5 pin for Output to LED
      SBI
            DDRB,5
                              ; LED OFF
      CBI
            PORTB, 5
      ; ADC Configuration
      LDI A,0b11000111
                               ; [ADEN ADSC ADATE ADIF ADIE ADIE ADPS2 ADPS1 ADPS0]
      STS
           ADCSRA, A
            A,0b01100000
                               ; [REFS1 REFS0 ADLAR - MUX3 MUX2 MUX1 MUX0]
      LDI
                               ; Select ADCO (PCO) pin
      STS
            ADMUX, A
      SBI
            PORTC, PCO
                               ; Enable Pull-up Resistor
loop:
      LDS
           A, ADCSRA
                               ; Start Analog to Digital Conversion
      ORI
            A, (1<<ADSC)
      STS
            ADCSRA, A
wait:
      LDS
            A, ADCSRA
                               ; wait for conversion to complete
      sbrc A,ADSC
      rjmp wait
      LDS
            A, ADCL
                               ; Must Read ADCL before ADCH
      LDS
            AH, ADCH
      delay 100
                               ; delay 100ms
            AH,200
                               ; compare LDR reading with our desired threshold
      cpi
      brsh LED_ON
                               ; jump if same or higher (AH >= 200)
      CBI
            PORTB,5
                               ; LED OFF
rjmp loop
LED_ON:
      SBI
            PORTB, 5
                               ; LED ON
rjmp loop
```

Note: To select the desired input pin of the ATmega328p for analog reading just change the value of the ADMUX register and the PORTC register bit in the above code as follow:

ADMUX	ADC Pin of ATmega328p
	<u> </u>
0b01100000	ADC0 (PC0)
0b01100001	ADC1 (PC1)
0b01100010	ADC2 (PC2)
0b01100011	ADC3 (PC3)
0b01100100	ADC4 (PC4)
0b01100101	ADC5 (PC5)

13.3.2 Conditional Branching

Use **CP** – Compare two Registers or CPI – Compare register with immediate constant instructions to compare two operands then branch to a label using these instructions:

Mnemonic	Description
brbs	branch if status flag set
brbc	branch if status flag cleared
breq	branch if equal
brne	branch if not equal
brcs	branch if carry set
brcc	branch if carry cleared
brsh	branch if same or higher
brlo	branch if lower
brmi	branch if minus
brpl	branch if plus
brge	branch if greater or equal, signed
brlt	branch if less than, signed
brhs	branch if half carry set
brhc	branch if half carry cleared
brts	branch if t flag set
brts	branch if t flag cleared
brvs	branch if overflow flag set
brvc	branch if overflow flag cleared
brie	branch if interrupt enabled
brid	branch if interrupt disabled

For example:

```
CP r16, r17 ; compare r16 and r17 ; breq L1 ; branch if r16 == r17 L1:


or

CPI r16,50 ; compare r16 and value 50 ; breq L1 ; branch if r16 == 50 L1:
```

13.4 16x2 LCD Display Module

16×2 LCD is character LCD means it can display ASCII characters. It has 16 Columns and 2 Rows. So, can display 32 ASCII characters in two rows of 16 characters each.


13.4.1 LCD Pinout

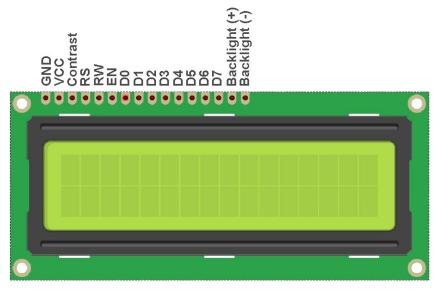

Pin #	Pin Name	Description
1	GND	Connected to the ground of the Arduino.
2	VDD or VCC	Power supply for the LCD which we connect to the 5V pin on the Arduino.
3	V0	Controls the contrast and brightness of the LCD.
		Attach a 3.9Kilo-ohm resistance from this pin to GND of Arduino.
4	RS	Set this pin to LOW when sending commands to the LCD (such as setting the cursor,
		clearing the display, etc.) and set it to HIGH when sending data to the LCD.
5 R\		Allows you to read data from the LCD or write data to the LCD. Since we are only
	RW	using this LCD as an output device, we are going to set this pin LOW. This forces it into
		WRITE mode.
6 EN	EN	Used to enable the display. When this pin is set to LOW, the LCD does do not accepts
		data. When this pin is set to HIGH, the LCD processes the incoming data.
7	D0	
8	D1	
9	D2	These pins carry the 8-bit data we send to the display. For example, if we want to see
10	D3	an uppercase 'A' character on the display, we set these pins to 0100 0001 (as per the
11	D4	ASCII table)
12	D5	
13	D6	
14	D7	
15	BLA	VCC pin of the backlight of the LCD. Connect with 5V or I/O pin to turn on the LCD backlight.
16	BLK	GND pin of the backlight of the LCD.

13.4.2 Example: Hello World

We will display "Hello World" on the LCD using Assembly program. First of all, connect the LCD according to this circuit diagram.

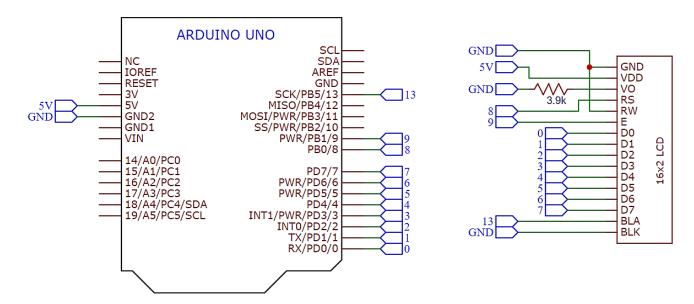

Then in the Microchip Studio project, write the following code in your "main.asm" file:

```
.include "m328pdef.inc"
.include "delay.inc"
.include "lcd_Macros.inc"
.org 0x00
      ; Setting pins to Output for LCD
      sbi DDRD,PD0 ; D0 pin of LCD
      sbi DDRD,PD1; D1
      sbi DDRD, PD2; D2
      sbi DDRD, PD3; D3
      sbi DDRD, PD4; D4
      sbi DDRD,PD5 ; D5
      sbi DDRD, PD6; D6
      sbi DDRD,PD7; D7
      ;Setting LCD Mode selection pins
      sbi DDRB,PB0 ; RS
      sbi DDRB, PB1; E pin of LCD
      ;Setting LCD Backlight pin
      sbi DDRB,PB5; BLA pin of LCD
      ; LCD Init
      LCD_send_a_command 0x01
                                     ; sending all clear command
      LCD_send_a_command 0x38
                                     ; set LCD mode to 16*2 line LCD
                                     ; screen ON
      LCD_send_a_command 0x0C
      sbi PORTB, PB5
                                     ; Backlight ON
loop:
      ; Sending Hello World to LCD
                                     ; 'H'
      LCD_send_a_character 0x48
                                     ; 'E'
      LCD_send_a_character 0x45
                                     ; 'L'
      LCD_send_a_character 0x4C
                                     ; 'L'
      LCD_send_a_character 0x4C
      LCD_send_a_character 0x4F
                                     ; '0'
                                     ; ' ' (space)
      LCD_send_a_character 0x20
                                     ; 'W'
      LCD_send_a_character 0x57
                                    ; '0'
      LCD_send_a_character 0x4F
                                     ; 'R'
      LCD_send_a_character 0x52
                                     ; 'L'
      LCD send a character 0x4C
                                    ; 'D'
      LCD_send_a_character 0x44
                                    7.21
      LCD_send_a_character 0x21
      LCD_send_a_command 0xC0
                                    ; move curser to next line
                                     ; 'C'
      LCD_send_a_character 0x43
                                     ; '0'
      LCD_send_a_character 0x4F
                                    ; 'A'
      LCD_send_a_character 0x41
                                     ; 'L'
      LCD_send_a_character 0x4C
      LCD_send_a_command 0x14 ; move curser one step forward (another way to add space)
      LCD_send_a_character 0x4C
                                ; 'L'
                                    ; 'A'
      LCD_send_a_character 0x41
                                    ; 'B'
      LCD_send_a_character 0x42
      delay 1000
      LCD_send_a_command 0x01 ; clear the LCD
rjmp loop
```

Create a new include file, paste the following code in that file, and save it with the name "lcd_Macros.inc" in the project directory. Then include this file in your project.

```
.macro LCD_send_a_command
        PUSH r16
        LDI r16,@0 ; receives the command

OUT PORTD,r16 ; Set the PD0 to PD7 pins according to command bits

CBI PORTB, PB0 ; set RS pin to LOW (set LCD mode to "Command Mode")

SBI PORTB, PB1 ; set E pin to HIGH (set LCD to receive the command)
        delay 50
        CBI PORTB, PB1 ; set E pin to LOW (set LCD to process the command)
        LDI r16,0x00
        OUT PORTD, r16
                                ; clear the PDO to PD7 pins after sending the command
        POP r16
.endmacro
.macro LCD_send_a_character
        PUSH r16
        LDI r16,00 ; receives the character


OUT PORTD,r16 ; Set the PD0 to PD7 pins according to command bits

SBI PORTB, PB0 ; set RS pin to HIGH (set LCD mode to "Data Mode")

SBI PORTB, PB1 ; set E pin to HIGH (set LCD to receive the command)
        delay 30
        CBI PORTB, PB1 ; set E pin to LOW (set LCD to process the command)
        LDI r16,0x00
        OUT PORTD, r16
                                   ; clear the PDO to PD7 pins after sending the command
        POP r16
.endmacro
```

These are our custom-made macros to send the data to the LCD. LCD_send_a_command macro will send the command to the LCD and LCD_send_a_character macro will send an ASCII character to LCD to display.

After uploading the code to Arduino or Porteus, you will see the following result:

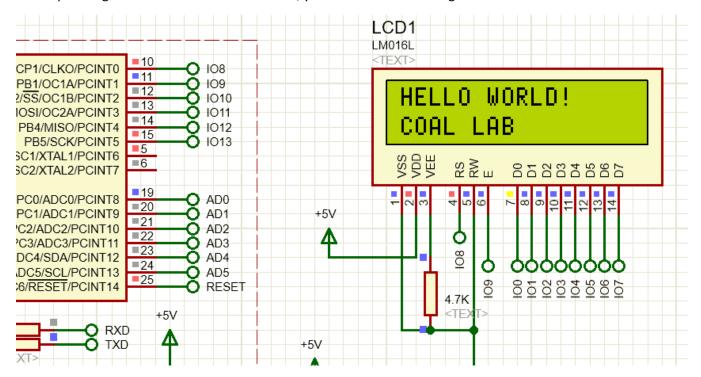

The following table contains some important commands that we can send to LCD using the LCD_send_a_command macro:

Command HEX Code	Description
0x01	Clear display screen
0x02	Return home
0x04	Decrement cursor (shift cursor to left)
0x06	Increment cursor (shift cursor to right)
0x05	Shift display right (scroll right)
0x07	Shift display left (scroll left)
0x80	Force cursor to beginning of first line
0xC0	Force cursor to beginning of second line
0x38	Set LCD mode to 2 lines and 5×7 matrix
0x3C	Activate second line
0x08	Display OFF, cursor OFF
0xOC	Display ON, cursor OFF
0x0F	Display ON, cursor ON
0x0E	Display ON, cursor blinking

The table of ASCII codes is shown below. Here for the LCD to show a character 'H' we need to send a hexadecimal code "0x48" using our custom-defined *LCD_send_a_character* macro. If we send '0x45' to the LCD it will show 'E' symbol. In this way we can display any message and data on the LCD.

ASCII Table 0ct Char Dec Char Hex Dec Dec Hex Hex 0ct Dec 0ct Char Hex 0ct Char [space] @ Α а В b # C \$ D d % Ε е & F G g Н Α 2A 4A 6A В 2B 4B Κ 6B 2C 4C C L 6C D 2D 4D 6D m Ε 2E 4E Ν 6E n 2F 4F 6F Ρ р Q q R S Т U u W w Χ х Υ 1A 5A Ζ 7A 1B ЗВ 5B [7В { 3C 7C 1C < 5C

5D

5E

5F

]

7D

7E

1D

1E

1F

3D

3E