


1. Insert LFS sensor #2 into Sensor housing #1 so that all 6 wires go into the individual holes and until the sensor bottoms out in the housing.
2. Pot the sensor into the housing using either DP-190 grey epoxy or Formlabs Clear SLA resin.
1. Fill with epoxy /resin until flush with top face of #1.
2. Use a syringe and be careful not to inject air when potting.
3. Be careful to not get excess glue/resin on the LFS sensor.
3. If using the resin, post cure in the UV oven.

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A		10/24/2025	

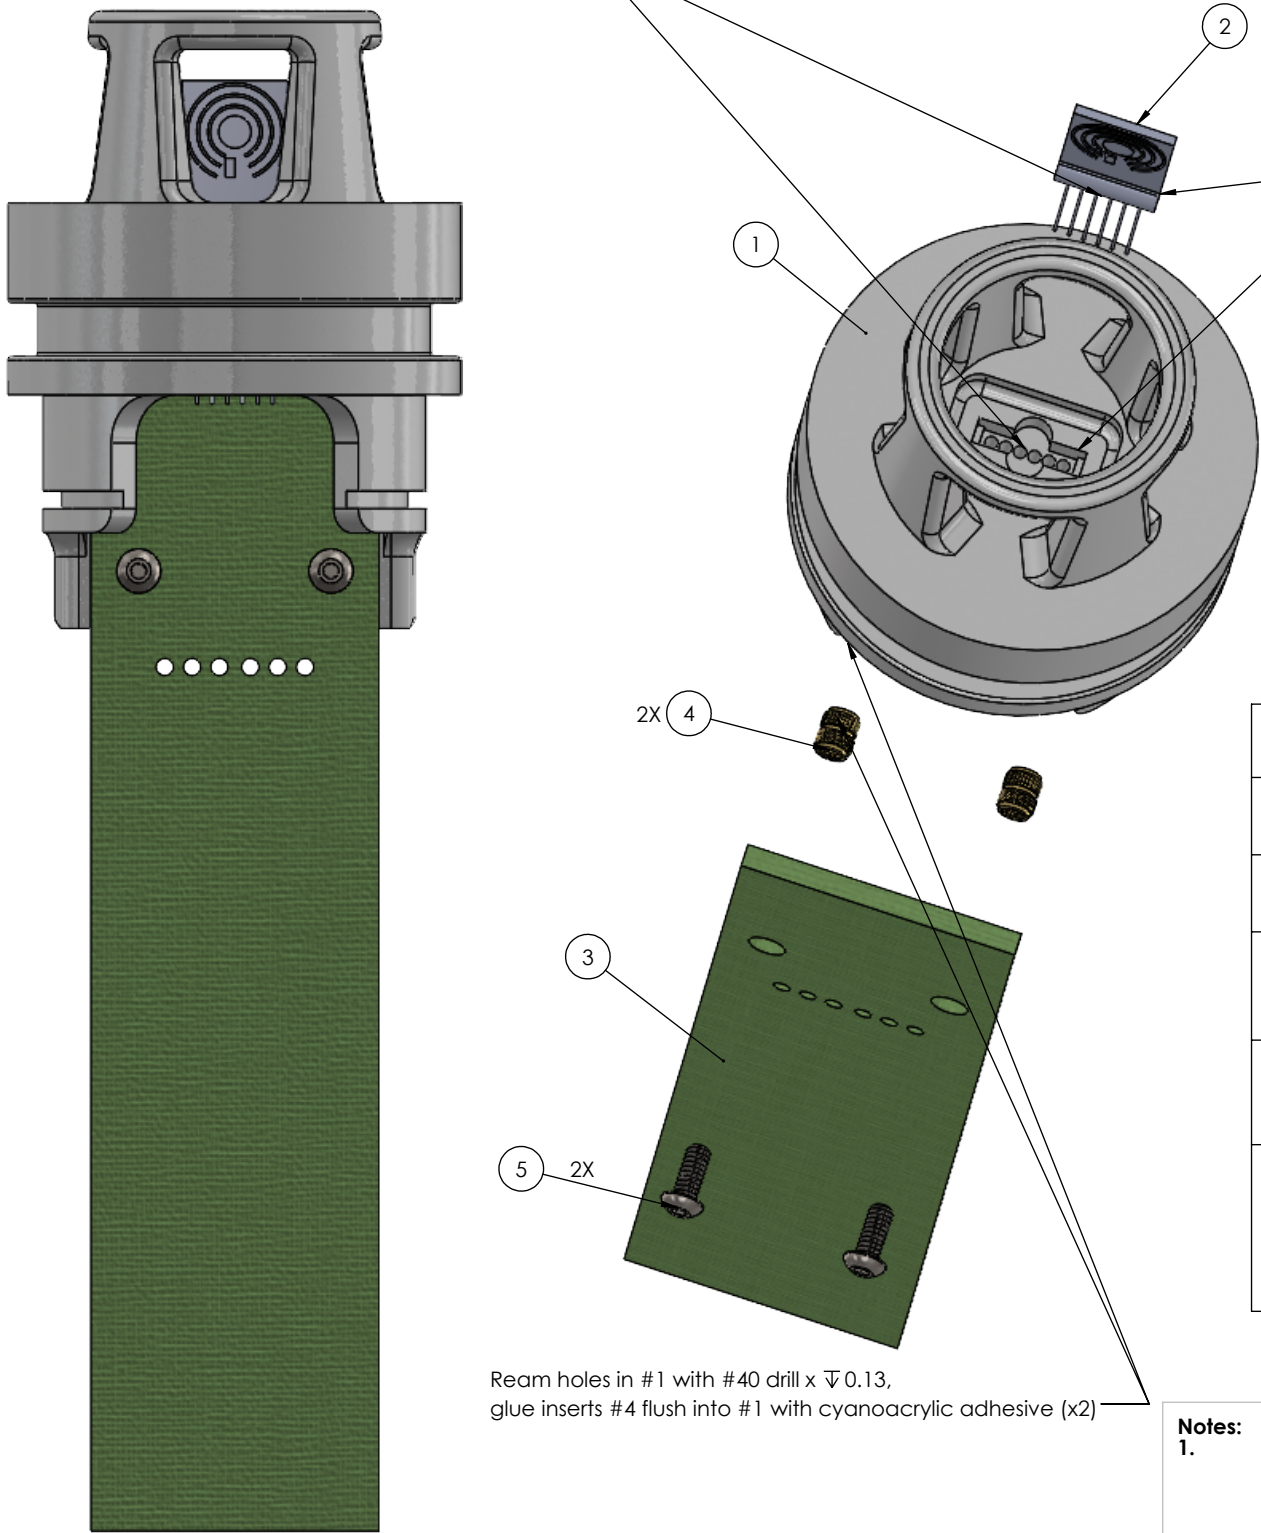

Insert Sensor into housing as shown, note part is NOT symmetrical

ITEM NO.	PART NUMBER	DESCRIPTION	Stock Size	Vendor	QTY.
1	000450	LFS1107 Conductivity Sensor Housing	3D Printed SLA		1
2	LFS1K011076WB010_6S	LFS1107 Conductivity Sensor Chip w/ RTD	LFS1K0.1107.6W.B.010-6.S	Innovative Sensor Technology	1
3	IST Conductivity Board	Low Cost Profiler NOAA-PMEL IST Conductivity Board			1
4	92120A150	M1.6 x 0.35mm x 3mm L, Brass Heat-Set Inserts for Plastic	MMC# 92120A150	McMaster Carr	2
5	92095A322	M1.6 x 0.35mm x 4mm L, Button Head Hex Drive	MMC# 92095A322	McMasterbCarr	2

Ream holes in #1 with #40 drill x ∇ 0.13, glue inserts #4 flush into #1 with cyanoacrylic adhesive (x2)

Notes:
1.

UNLESS OTHERWISE SPECIFIED	
NO MODIFICATION OF SPECIFIED DIMENSIONS OR MATERIALS IS ALLOWED UNLESS APPROVED BY NOAA ENGINEERS.	DIMENSIONS ARE IN INCHES TOLERANCES ARE: ANGLES $\pm 1^\circ$ FRACTIONS $\pm 1/16$ DECIMALS $.X \pm 0.05$ $.XX \pm 0.02$ $.XXX \pm 0.005$
BREAK SHARP EDGES 0.005 MIN MACHINED FILLETS 0.015 MAX	
SURFACE FINISH 125	
DO NOT SCALE DRAWING	
DRAWING NUMBER 500126	ASSEMBLY NUMBER 500126

THIRD ANGLE PROJECTION	
DRAWN NLS	DATE 6/2/2020
CHECKED	DATE
ASSEMBLY NUMBER 500126	

 NOAA-PMEL Engineering Division		7600 Sand Point Wy NE Seattle, WA 98115 206-526-6800
DESCRIPTION LFS1107 Conductivity Sensor		
PRODUCT Low Cost Profiler		PLOT DATE 10/24/2025
CONFIGURATION Default	REV. A	SHEET 1 OF 1