Lab_PNR_1.0

Steps: -

1. Copy Lab_PNR_1.0 folder from your computer into the virtual machine inside Labs directory
1. Prepare different constraints Files
    - Open ALU_TOP.sdc file and add the following commands:
        - set_case_analysis 0 test_mode
        - set_case_analysis 0 SE
    - Copy ALU_TOP.sdc to **ALU_TOP_scan.sdc** and add the following:-
        - set_case_analysis 1 test_mode
        - set_case_analysis 0 SE
    - Copy ALU_TOP.sdc to **ALU_TOP_capture.sdc** and add the following:-
        - set_case_analysis 1 test_mode
        - set_case_analysis 0 SE
    - Open MMC.tcl script: -
    - Add constraints mode using create_constraint_mode for **ALU_TOP_scan.sdc** and **ALU_TOP_capture.sdc**
    - Create setup & hold analysis views for the new constraints modes
2. Open Terminal and then Type **innovus** and Pess Enter

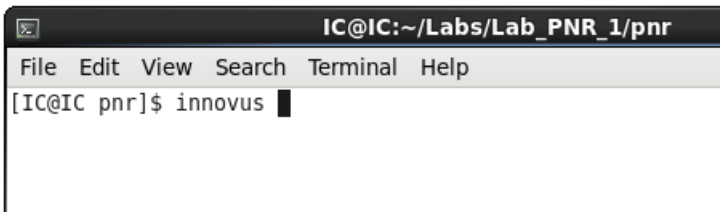

3. The tool will open

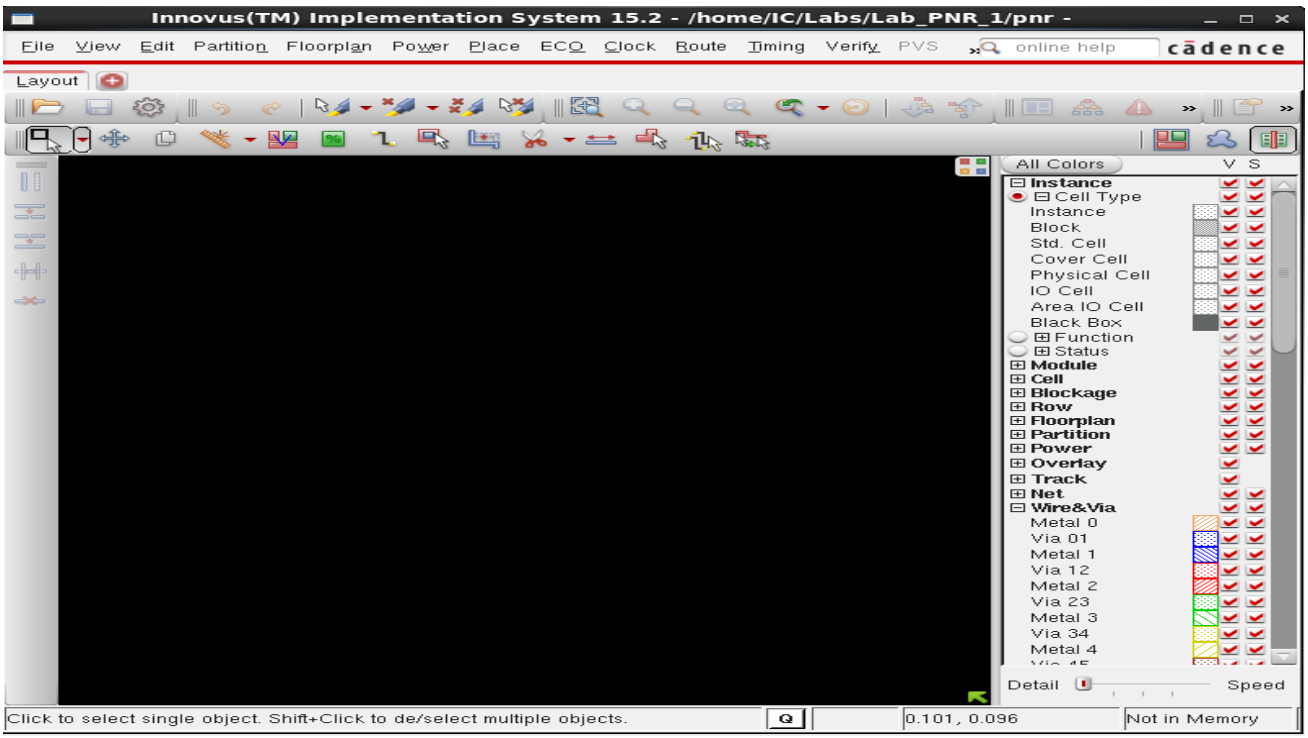

4. Design Import
5. Check the warnings and messages in the terminal
6. View Chip Utilization
7. Power planning
    - Add power ring
        i. Check connectivity & DRCs and fix issues
    - Add power strips
        i. Check connectivity & DRCs and fix issues
    - Add special routing