



Meanwell LRS-350-24 / RSP-320-24 PSU Mount for Prusa i3 and PrusaWire 3D Printers



erikbuild

[VIEW IN BROWSER](#)

updated 24. 8. 2025 | published 24. 8. 2025

Summary

This is a complete/safe solution to use a Meanwell LRS-350-24 or Meanwell RSP-320-24 power supply on a Prusa i3 frame.

[3D Printers](#) > [Prusa Parts & Upgrades](#)

Tags: [prusa](#) [meanwell](#) [meanwellrs350](#) [meanwellrsp320](#)
[prusawire](#)

Overview

This is a complete and safe solution to use a Meanwell LRS-350-24 or Meanwell RSP-320-24 power supply on a Prusa MK3(S)(+)/MK3.9(S)/MK4(S) frame. This can be used either on an otherwise stock Prusa i3 OR the excellent PrusaWire 3D printer.

Print Settings

- I printed in Prusament Galaxy Black ASA, but anything that is at least PETG should be sufficient.
- Voron Print Specs
 - Layer height: 0.2mm
 - Extrusion width: 0.4mm, forced
 - Infill percentage: 40%
 - Infill type: gyroid
 - Wall count: 4
 - Solid top/bottom layers: 5
 - Supports: NONE

Printed Parts

- **meanwell_psu_lower_body**
 - two supports are modeled in that should remove very easily
- **meanwell_psu_access_door**
 - Version A: has Voron logo embossed for fun
- **meanwell_psu_access_door_blank**
 - Version B: has no logo / is blank
- **meanwell_psu_upper_bracket**
 - Uses M4x4.0 heat set inserts to allow use of Prusa spec M4x10 BHCS in the upright frame.
- **meanwell_psu_upper_bracket_m3**
 - Uses M3x5x4 (Voron spec) heat set inserts for the Prusa upright frame.
- **m3_in_m4_hole_shim_2x**
 - OPTIONAL: simple hole spacer/shim if you use M3 screws in the M4 holes in the upright frame.

Electronics

- **1x Meanwell Power Supply Unit**
 - **LRS-350-24**
 - **RSP-320-24**
- **1x ZF Electronics WRG32F2FBRLN Power Switch**
- **1x TE Connectivity 3-1609115-3 Power Receptacle**

Hardware Required


- **4x M3x10 FHCS**
- **3x M4x10 FHCS**
- **4x to 6x M3x5x4 (Voron spec) heat set inserts**
 - 2x are needed if you use M3 screws and the optional hole shim for the Prusa frame.

- **0x to 2x M4x4.0 heat set inserts**
 - if you use the M4 screws for the Prusa frame
- **2x M3 roll-in T-Nut for 3030 Extrusion**
 - Prusa sells this as M3nEs
 - I used [this EXCELLENT model](#) to print the nut and added the M3x5x4 heat inserts to them.
- Hardware for securing the assembly to Prusa upright frame
 - Can use OEM M4x10 BHCS
 - Can use your own supplied M3x10 BHCS or even SHCS potentially.

Assembly Instructions

1. Print all models (PETG is sufficient, but ABS or ASA is nicer!).
2. Remove the print-in-place supports (they should pretty easily pop off) from the big front opening and back right corner of the lower body.

1.

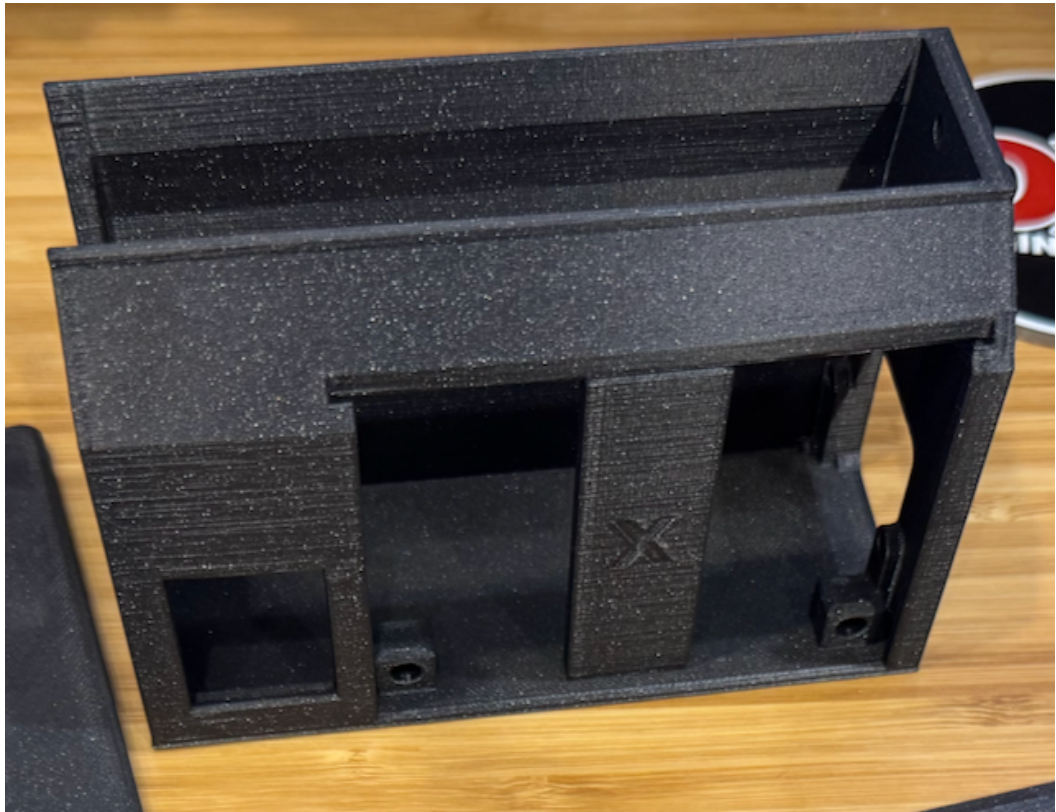


3. Install two M3x5x4 (Voron spec) heat inserts in the side of the lower body for the power input.

1.



4. Install two M3x5x4 (Voron spec) heat inserts in the front of the lower body for the access panel.

- 1.

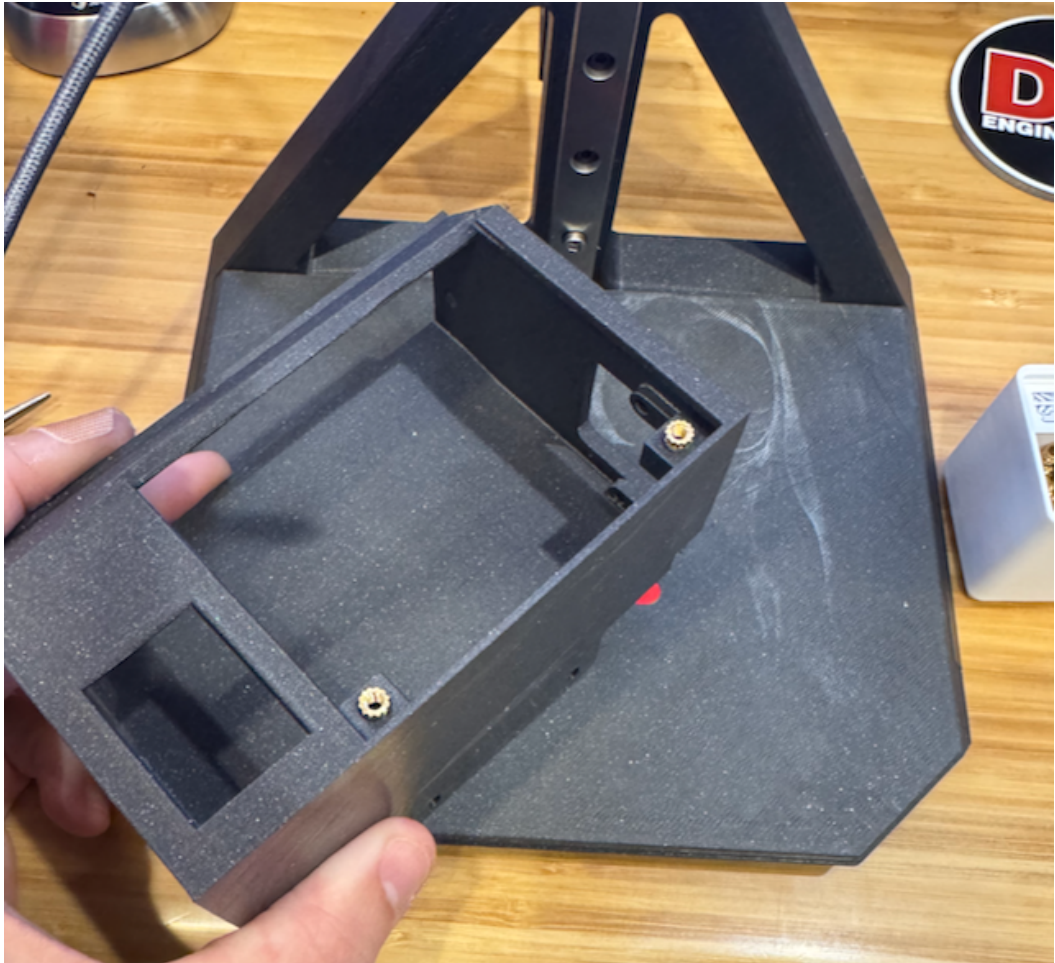

5. EITHER:

1. Install two M3x5x4 (Voron spec) heat inserts in the upper bracket (meanwell_psu_upper_bracket_m3.stl) if you intend to use M3x10 screws to secure to the Prusa frame. Optionally use the provided M3-in-M4 hole shims.
2. Install two M4x4.0 heat inserts in the upper bracket (meanwell_psu_upper_bracket.stl) if you intend to use the Prusa spec'd M4x10 BHCS to secure to the Prusa frame.

6. Install the upper bracket to the left side of the Meanwell PSU using two M4x10 FHCS.

1.



7. Install the lower body onto the Meanwell PSU using a single M4x10 FHCS on the right side of the lower body.

- 1.



8. Install the **ZF Electronics WRG32F2FBRLN Power Switch** into the front left side of the lower body (press to snap in).
9. Install the **TE Connectivity 3-1609115-3 Power Receptacle** into the right side of the lower body and secure with two M3x10 FHCS.

10. Install the access panel into the lower body to enclosure the wiring and secure with two M3x10 FHCS.

1.



11. Install two M3 roll-in T-Nuts (3030 extrusion) into top of the back right frame extrusion.


12. Install the PSU assembly onto the Prusa upright frame with either two M3 or M4 screws as noted in step 5.

- 1.



13. Secure the lower assembly to the back right frame extrusion by using two M3x10 SHCS and the previously installed M3 T-Nuts.

- 1.

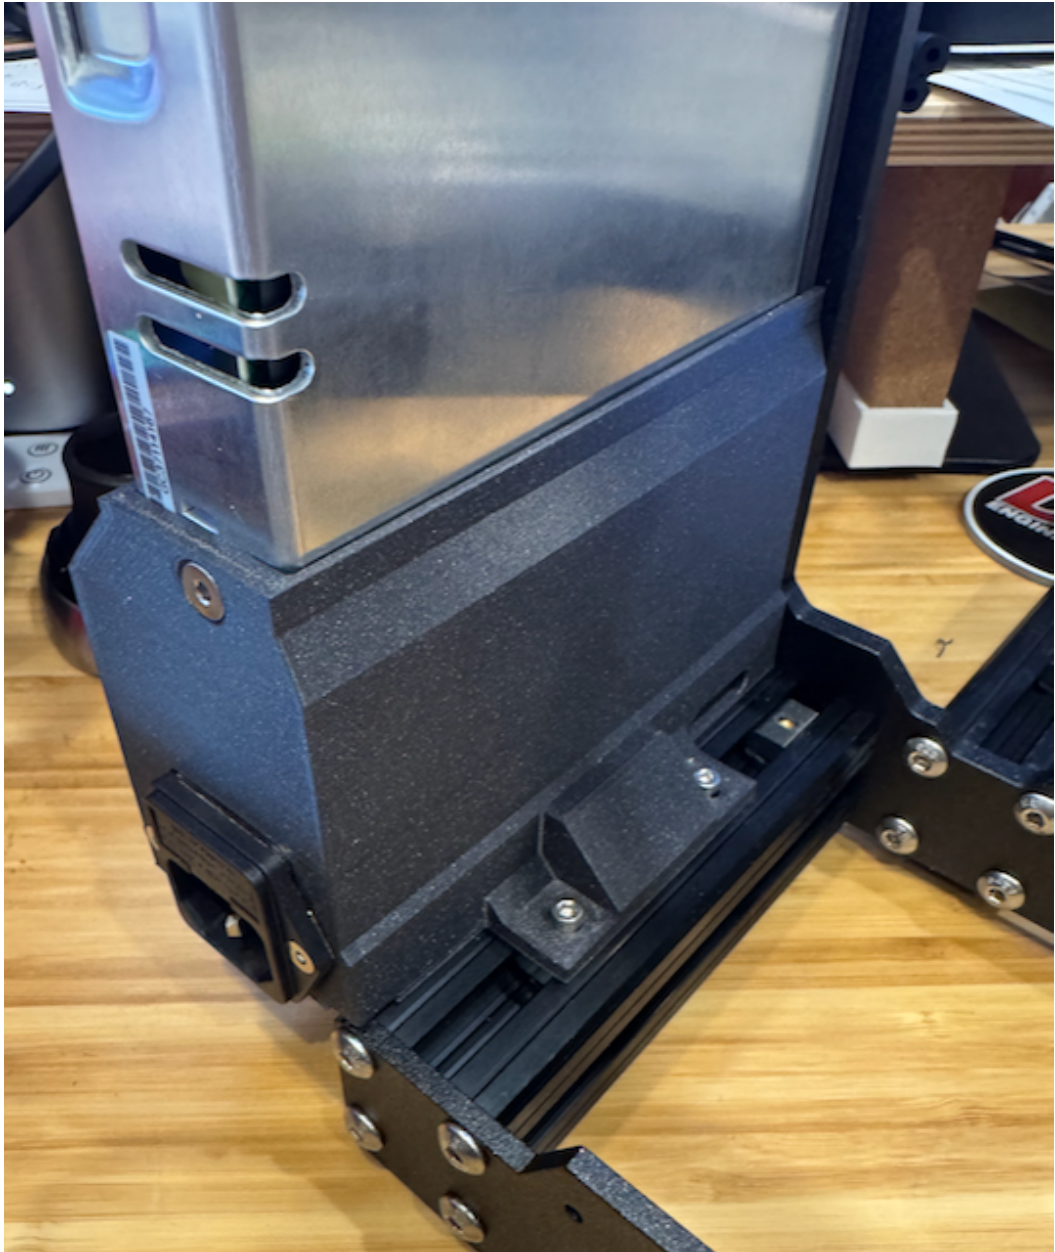

14. Done! :-)

This remix is based on



Prusawire 2025.B1 (BETA 1)

by Ella Fox

Model files



meanwell_psu_upper_bracket.stl

☐ Option A: Uses 2x M4 x 4.0 heat set inserts



meanwell_psu_access_door.stl

☐ Voron Logo for PrusaWire funzies



meanwell_psu_upper_bracket_m3.stl

☐ Option B: Uses 2x M3x5x4 Voron Spec heat inserts




m3_in_m4_hole_shim_2x.stl

☐ OPTIONAL - to shim the prusa frame m4 holes for a M3 screw




meanwell_psu_access_door_blank.stl

☐ No Logo / Blank Door



meanwell_psu_lower_body.stl

☐ Uses 4x M3x5x4 Voron Spec heat inserts



meanwell_psu_prusawire_assembly_v20250822.f3z

License ©

This work is licensed under a
GNU

General Public License v3.0



- ✖ | Sharing without ATTRIBUTION
- ✓ | Remix Culture allowed
- ✓ | Commercial Use
- ✓ | Meets Open Definition
- i | Share under the same license