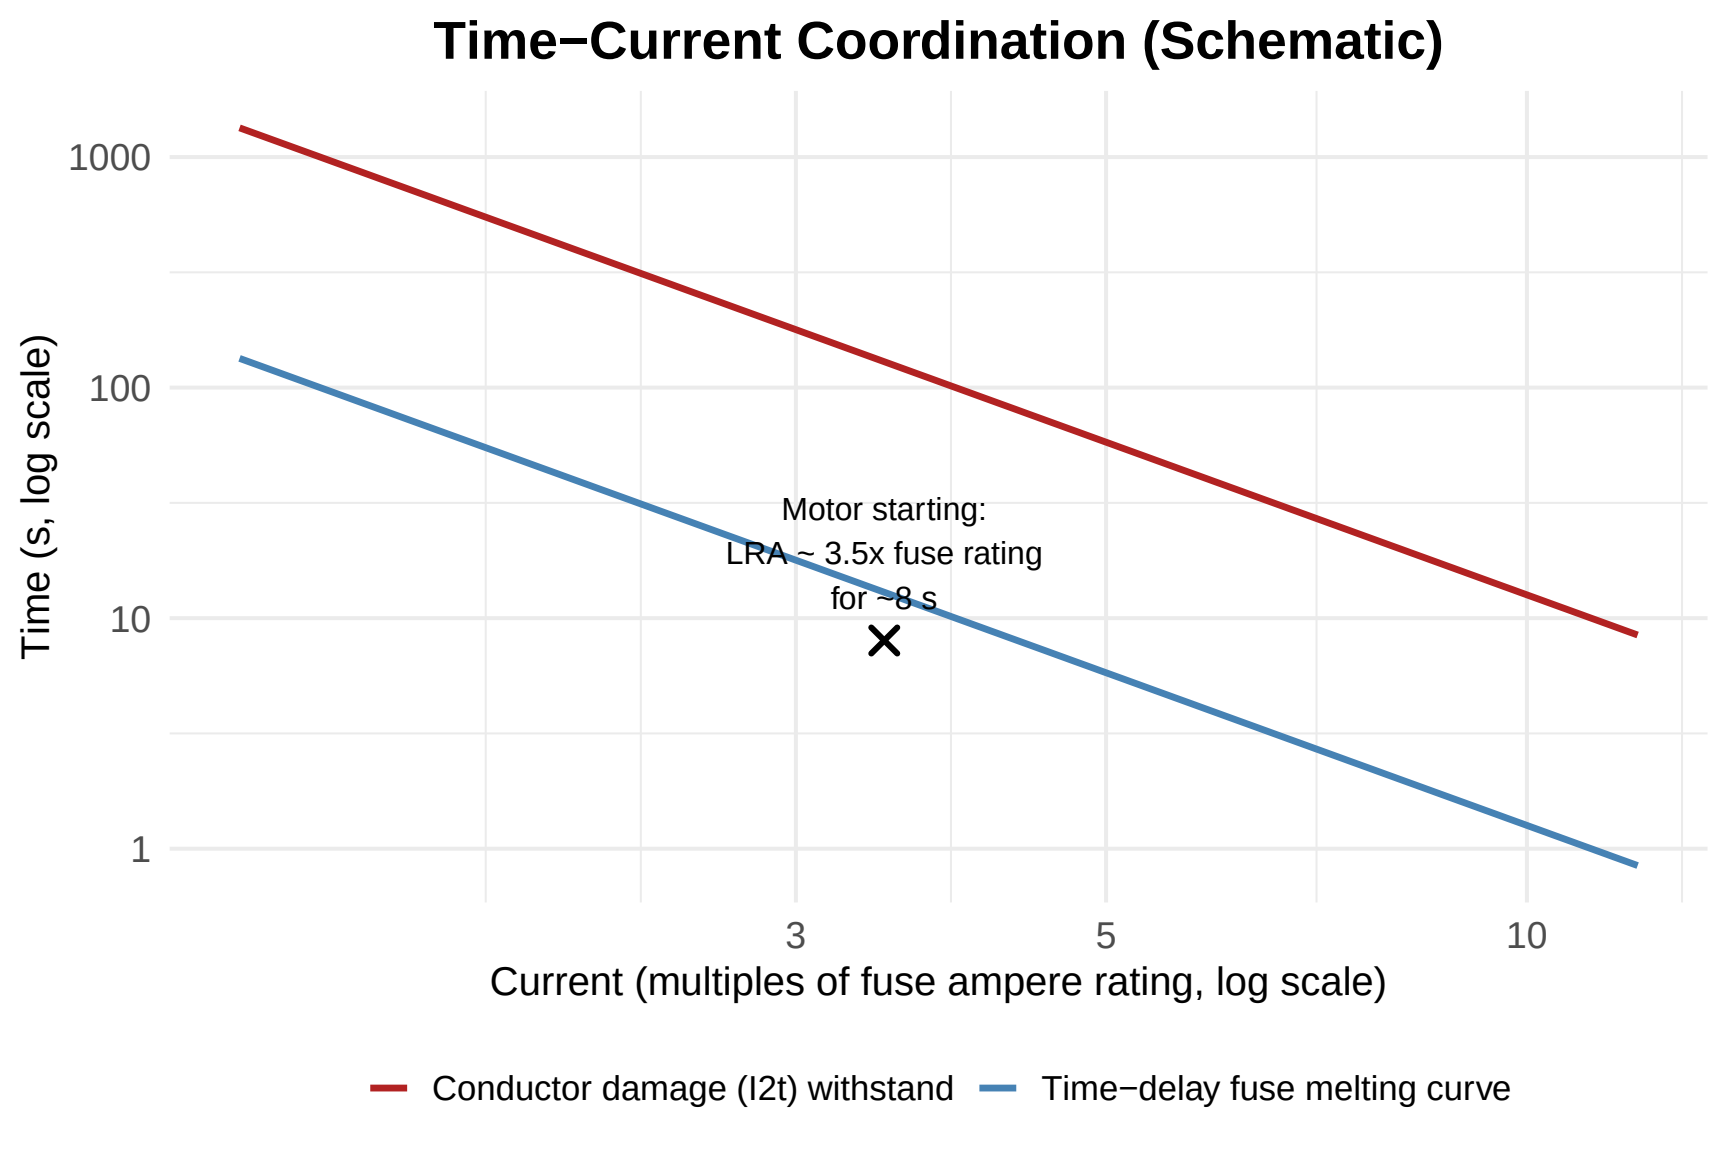
Time–Current Coordination (Schematic)
1000
100
10
1
Time (s, log scale)
Motor starting:
LRA ~ 3.5x fuse rating
for ~8 s
3
5
10
Current (multiples of fuse ampere rating, log scale)
Conductor damage (I2t) withstand
Time–delay fuse melting curve