


# The Same Parts Measured by Two Different Systems

Poor measurement systems lead to incorrect accept/reject decisions

**Good Measurement System  
(Low variation, no bias)**

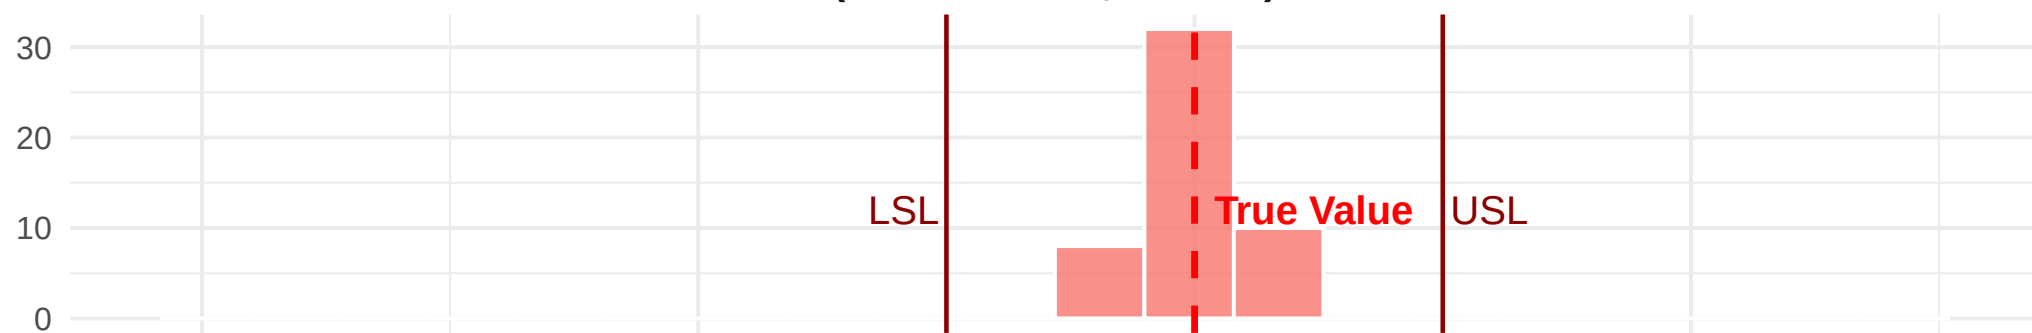

**Poor Measurement System  
(High variation, biased)**

