




FALL SENSOR - 1:1 TRUE-SCALE CARRIER PCB TEMPLATE (TOP & BOTTOM)



CARRIER PCB: TOP SIDE (Component Placement & Through-Holes)

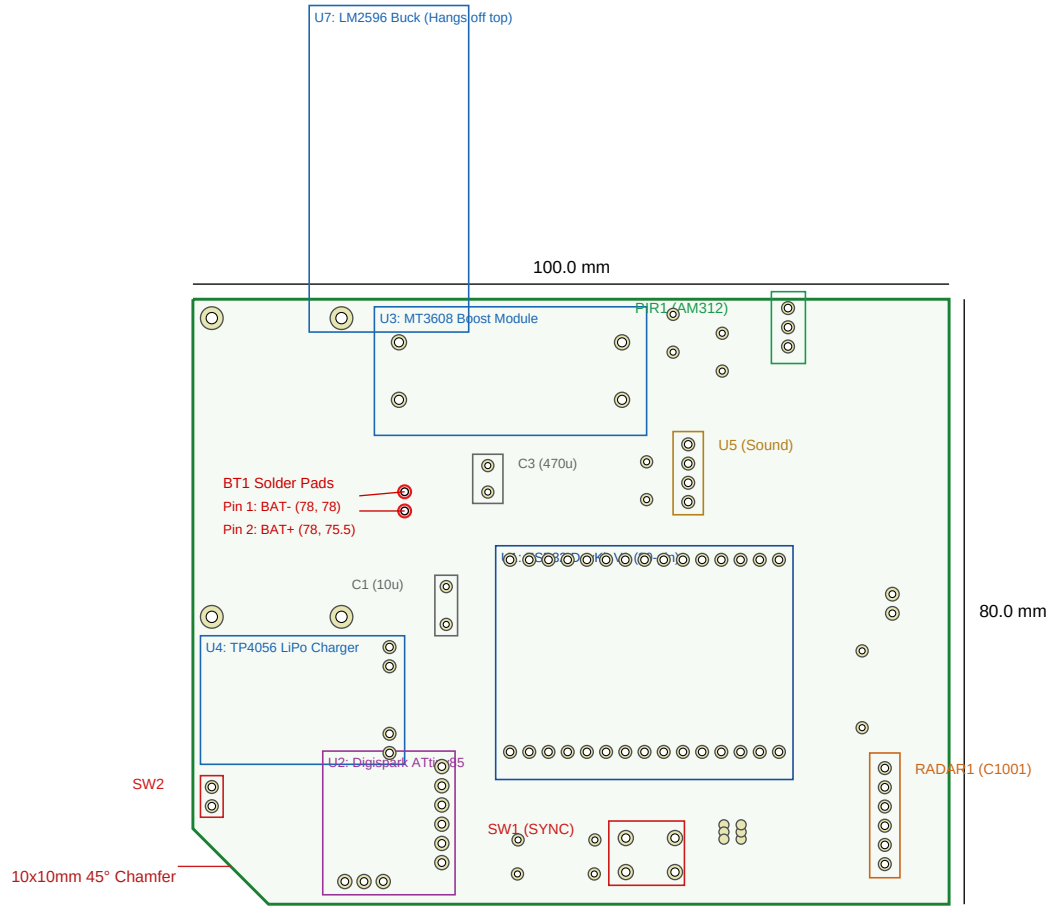


CARRIER PCB: BOTTOM SIDE (B.Cu Copper Tracks & Battery Routing)

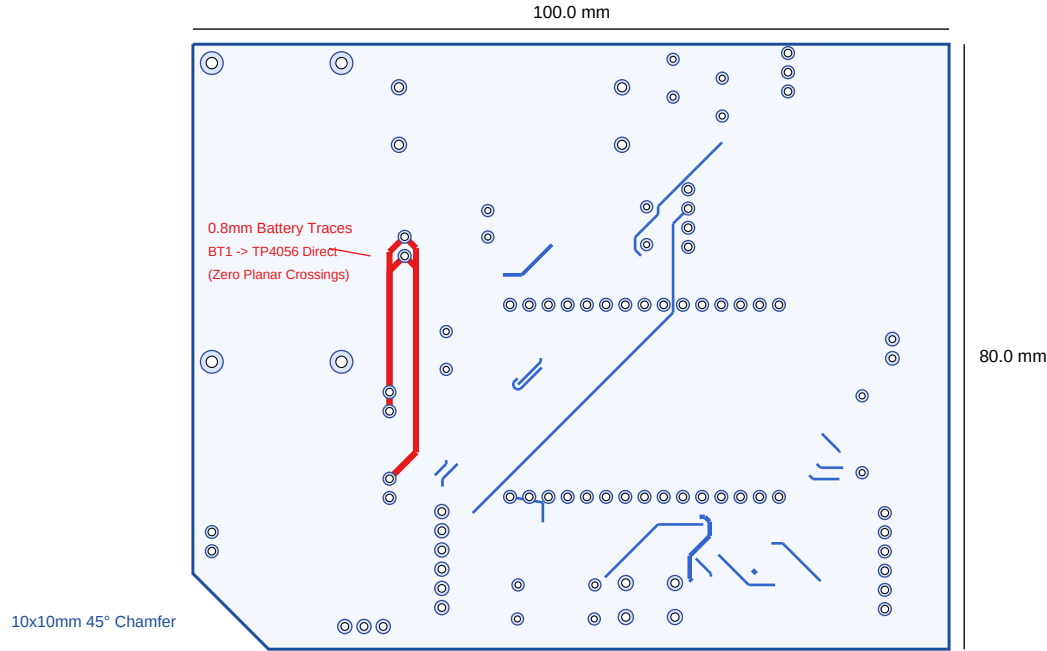


PCB PRINTING & VERIFICATION INSTRUCTIONS:

1. Print at 100% / 'Actual Size' (never 'Fit to page'). Verify the 100.0 mm calibration bar above.
2. Cut out the green Top PCB shape along the solid line (including the 10x10 mm 45° bottom-left chamfer).
3. Drop the paper into your 3D-printed enclosure base cavity to confirm fitment and standoff clearance (+1.31mm air gap).
4. Poke component pins directly through the through-hole circles to verify header pitch and mechanical clearance.
5. Holding Top and Bottom cutouts up to a light source verifies 100% pin-for-pin alignment for perfboard wiring.


FALL SENSOR - 1:1 ENCLOSURE BASE & LID TEMPLATE



ENCLOSURE BASE: 116.8 x 110.8 mm (Internal Cavity, Standoffs, Cradle & Shelf)

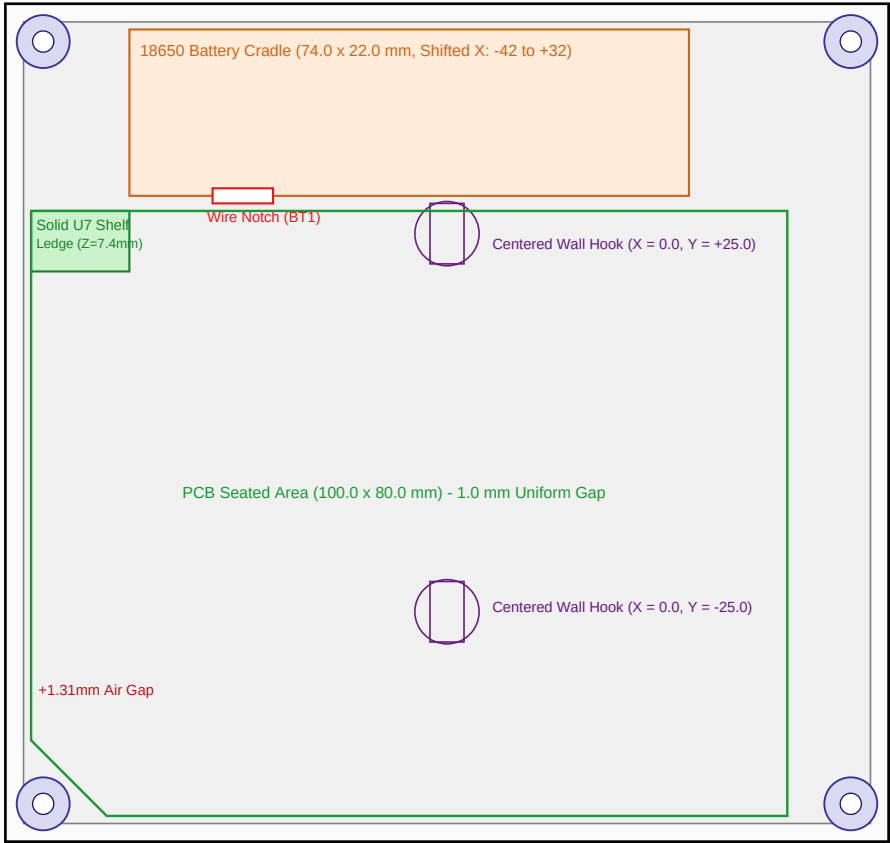

ENCLOSURE LID: 116.8 x 110.8 mm (Flat Support-Free Rim & Aperture Drill Guide)

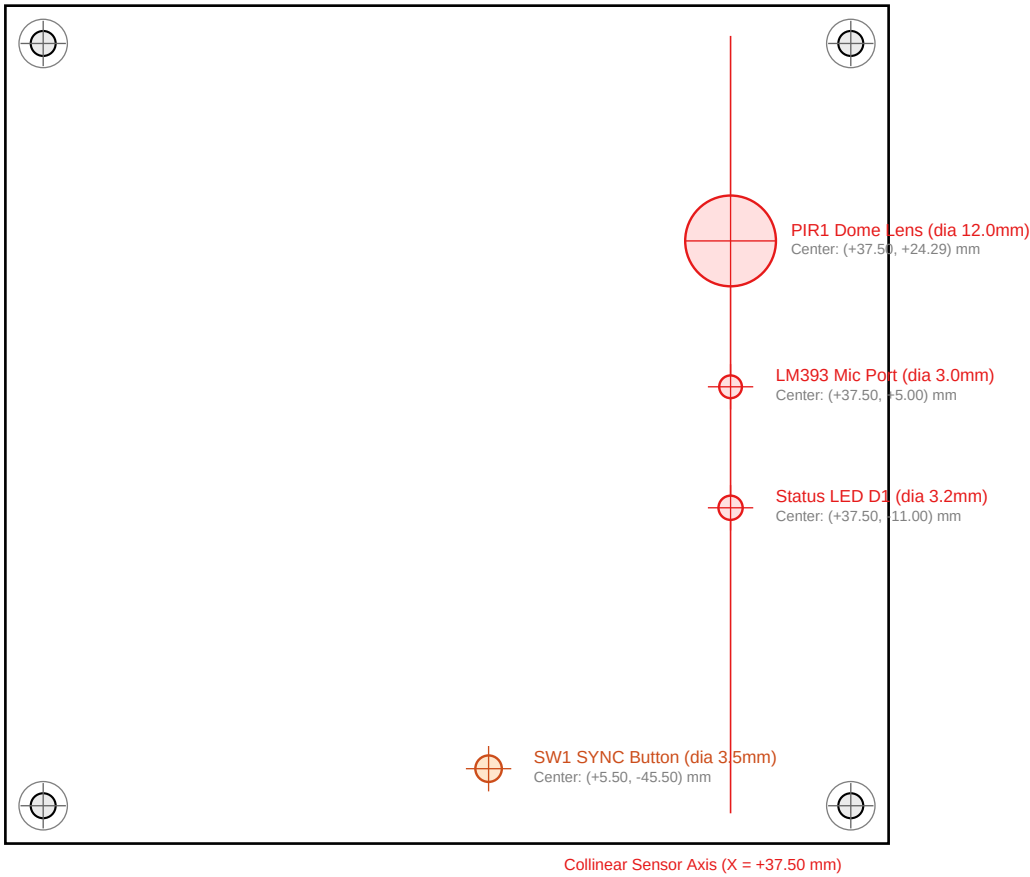

ENCLOSURE VERIFICATION INSTRUCTIONS:

- 1. Place 3D-printed Base directly over the top template: confirm 4 M3 screw boss alignment, centered wall hooks (X=0.0), and cradle boundaries.
- 2. Place 3D-printed Lid directly over the bottom template: confirm 4 corner screw countersinks, red sensor collinearity, and SYNC button hole.
- 3. For manual hole drilling or post-processing on the lid, center-punch directly through the crosshairs on this sheet.