FAAV Build Manual

MIT AURA Lab — 2026 v4.0

MIT AURA Lab

Contents

1 FAAV Build Manual . . . 7
1.1 How this manual is organised . . . 7
1.2 Semester map . . . 7
1.3 Conventions . . . 8
1.4 Robot architecture in one paragraph . . . 8
1.5 Versioning . . . 8

I Build modules

2 Module 1 — Orientation . . . 11
2.1 The robot . . . 11
2.2 Electronic architecture . . . 11

3 Module 2 — Motor and transmission shaft . . . 13
3.1 Summary . . . 13
3.2 Requirements . . . 13
3.3 The motor — AS2303 KV1500 . . . 13
3.4 Motor shaft . . . 14
3.5 Sensor magnet . . . 15
3.6 Mounting the motor . . . 15
3.7 Solder the motor wires to the Electronic Speed Controller . . . 16

4 Module 3 — Motor driver, sensor and serial connection . . . 17
4.1 Summary . . . 17
4.2 Requirements . . . 17
4.3 Electrical connections . . . 18
4.4 Electronic Speed Controller . . . 19
4.5 Flight controller microcontroller . . . 19
4.6 Encoder (or Angular sensor) . . . 20
4.7 Mounting . . . 22

5 Module 4 — Closed-loop control and tuning . . . 23
5.1 Summary . . . 23
5.2 Requirements . . . 23
5.3 Reduction . . . 23
5.4 How to program the ESC . . . 24
5.5 Firmware . . . 24
5.6 Calibration . . . 24

5.7 Commanding and monitoring . . . 24
5.8 Task sequence . . . 25
5.9 Why low speed is the hard part . . . 25

6 Module 5 — Frame, crank, linkage and gears . . . 27
6.1 Summary . . . 27
6.2 Requirements . . . 27
6.3 Main body . . . 27
6.4 Reduction . . . 27
6.5 Crank and linkage . . . 28

7 Module 6 — Flapping simulation (Ptera) . . . 31
7.1 Summary . . . 31
7.2 Requirements . . . 31
7.3 Deliverable . . . 31

8 Module 7 — Wing fabrication . . . 33
8.1 Summary . . . 33
8.2 Requirements . . . 33
8.3 Wing roots . . . 33
8.4 Building the wing . . . 33
8.5 Assembly . . . 34

9 Module 8 — Tail . . . 37
9.1 Summary . . . 37
9.2 Tail . . . 37
9.3 Trailing edge holder . . . 37

10 Module 9 — Flight controller, PCB and dry testing . . . 39
10.1 Summary . . . 39
10.2 Requirements . . . 39
10.3 Flight controller . . . 39
10.4 Dry testing . . . 39

11 Module 10 — Waterproofing . . . 41
11.1 Summary . . . 41
11.2 Requirements . . . 41
11.3 Flight controller waterproofing . . . 41
11.4 ESC waterproofing . . . 41
11.5 Battery waterproofing . . . 42
11.6 Gearbox . . . 42

12 Module 11 — Wet testing . . . 43
12.1 Summary . . . 43
12.2 Requirements . . . 43

12.3 Pre-immersion checks . . . 43
12.4 The tank . . . 43
12.5 What to log . . . 44
12.6 Housing . . . 44
12.7 Trim . . . 44
12.8 Cost of transport . . . 45

13 Module 12 — Competition . . . 47
13.1 Summary . . . 47
13.2 The competition rules . . . 47
13.3 Requirements . . . 47
13.4 Feedback . . . 47

II Reference

14 Parts list . . . 51

15 Brushless motors . . . 55
15.1 Start with the brushed DC motor . . . 55
15.2 What changes with a brushless motor . . . 56
15.3 Thermal limits . . . 56
15.4 Measured behaviour of the AS2303 . . . 57
15.5 Why an outrunner . . . 57

16 The G431 ESC board . . . 59
16.1 What it is . . . 59
16.2 The parts that matter . . . 59
16.3 How the three phases are generated . . . 60
16.4 What it can drive . . . 60
16.5 Why there is a daughterboard . . . 60
16.6 What we do not use . . . 61

17 How SimpleFOC works . . . 63
17.1 The problem it solves . . . 63
17.2 Three objects, and what links them . . . 63
17.3 The two loops . . . 63
17.4 What the inner loop actually computes . . . 63
17.5 What the outer loop computes . . . 65
17.6 Alignment, and why the motor twitches at power-on . . . 65
17.7 The main ESC code . . . 65
17.8 Where to look next . . . 66

18 Software . . . 67
18.1 ESC . . . 67

18.2 Flight controller . . . 67
18.3 PCB . . . 67
18.4 External documentation . . . 67

19 CNC — Stepcraft D660 . . . 69
19.1 Material-specific notes . . . 69

20 Design notes . . . 71
20.1 Log of 2026 changes . . . 71
20.2 Gearbox corrosion . . . 71

21 Changelog . . . 73
21.1 fall-2026 . . . 73

5.1 Motor shaft . . . 24
5.2 Faulhaber gearbox . . . 24
6.1 Transmission assembled . . . 29
6.2 Transmission, second view . . . 29
8.1 Strips laid out and bonded over the template . . . 34
8.2 Trimming the membrane to the outline . . . 34

1. FAAV Build Manual

MIT AURA Lab — 2026 v4.0

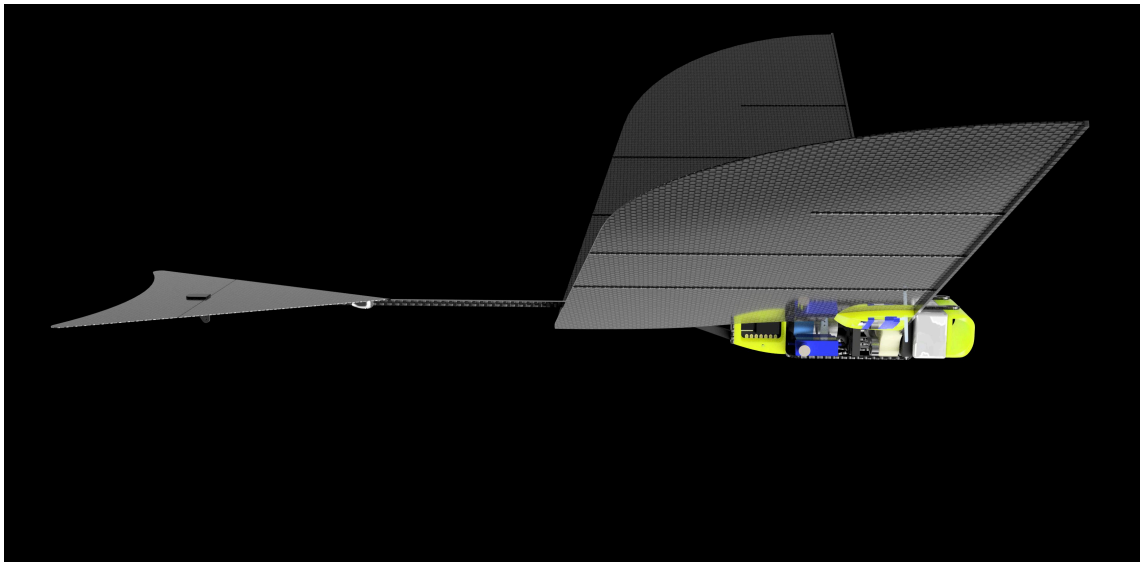


Figure 1.1: The FAAV3.2

Over the semester you build a **flapping aerial-aquatic vehicle**: a robot that with the right design can fly, land on water, swim by flapping the same wings, and takes off again. The aim of this project is to demonstrate swimming behavior. This manual is the build side of the course. It is sequenced to the weekly modules, and each page covers exactly what you do in that module.

1.1 How this manual is organised

Build modules are cumulative and in order. Each one opens with what you are building that day.

Reference holds the material you consult rather than follow: the parts list, the firmware repositories, the PCB revisions, the CNC guide, and the design notes explaining why the robot is the way it is.

1.2 Semester map

Module	Week	Build	Paired lecture
1	Sep 9	Orientation, teams, the robot	Intro to robotic locomotion
2	Sep 14	Motor and transmission shaft	Reaction forces in fluids
3	Sep 21	Motor driver, sensor, serial	Bird-scale flapping design
4	Sep 28	Closed-loop control and tuning	Swimming robots I

Module	Week	Build	Paired lecture
5	Oct 5	Frame, crank, linkage, gears	Undulatory locomotion
—	Oct 12	*No module*	—
6	Oct 19	Flapping simulation (Ptera)	Insect-scale flapping
7	Oct 26	Wing fabrication	Swimming robots II
8	Nov 2	Tail and housing	Multi-modal locomotion
9	Nov 9	Flight controller, PCB, dry testing	The future of actuation
10	Nov 16	Waterproofing	Multirotors
11	Nov 23	Wet testing	Fixed-wing flyers
12	Nov 30	Competition	Pair presentations

1.3 Conventions

> ⚠ Warning
>
> An operation whose likely failure mode destroys a part or injures you. Read it twice before acting.

> ℹ Checkpoint
>
> Do not proceed past this without having completed all the tasks listed.

> Why
>
> Design rationale.

1.4 Robot architecture in one paragraph

One 4S battery (16.8 V max) feeds a custom PCB that steps VBAT down to 5 V to power the flight controller, which in turn generates a 3v3 rail for the sensors on that PCB. Battery power passes through a shunt for current sensing, then out to the ESC. The flight controller commands the ESC over serial. The ESC drives a brushless motor through a 23.04:1 gearbox, and a crank–linkage converts that rotation into wing flapping.

1.5 Versioning

This is version **fall-2026**. Corrections published during the semester are dated in the Changelog. If a step here contradicts what a TA tells you at the bench, the TA is right and this page is stale — report it so the next team does not lose time to it.

I Build modules

2 Module 1 — Orientation 11

3 Module 2 — Motor and transmission shaft 13

4 Module 3 — Motor driver, sensor and serial connection 17

5 Module 4 — Closed-loop control and tuning 23

6 Module 5 — Frame, crank, linkage and gears 27

7 Module 6 — Flapping simulation (Ptera) 31

8 Module 7 — Wing fabrication 33

9 Module 8 — Tail 37

10 Module 9 — Flight controller, PCB and dry testing 39

11 Module 10 — Waterproofing 41

12 Module 11 — Wet testing 43

13 Module 12 — Competition 47

2. Module 1 — Orientation

2.1 The robot

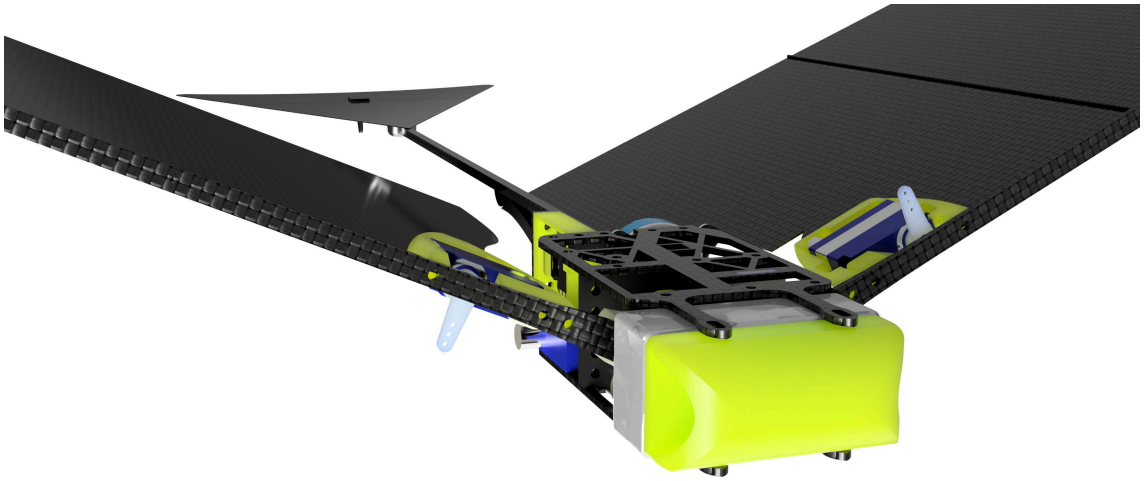


Figure 2.1: The FAAV3.2

We will develop, plan and optimize a vehicle with powerful custom actuation for flapping locomotion. The build divides into four subsystems, and the modules follow that order:

1. **Transmission** — motor, custom shaft, gearbox, crank and linkage (Modules 2, 5)
2. **Electronics** — ESC, angular sensor, flight controller, custom PCB (Modules 3, 4, 9)
3. **Aero/hydro surfaces** — wings, tail (Modules 6–8)
4. **Waterproofing and testing** — potting, immersion, tuning (Modules 10–12)

2.2 Electronic architecture

One 4S battery (max 16.8 V) powers the motor electronic speed controller (ESC). The motor controller generates a 3.3V rail for the encoder and a 5V rail for the flight controller. The flight controller sends commands to the ESC over serial.

! To be completed by the instructor

Shop safety requirements, machine access and booking procedure, team size and formation rules, and where the parts crib is. These are institution-specific and are not carried over from the manufacturing guide.

i Checkpoint

Kit checked against the parts list, and every member has completed the required training.

3. Module 2 — Motor and transmission shaft

3.1 Summary

A brushless motor with a custom shaft pressed into its rotor bell, with the sun gear and the sensor magnet installed, bolted to its bracket and mounted on the motor plate. The motor is soldered to the electronic speed controller. The gearbox itself goes on in Module 4.

3.2 Requirements

Parts	AS2303 KV1500 motor with pre-machined bell, custom motor shaft, sun gear from the Faulhaber 23.04:1 gearbox, 6 × 2.5 mm diametric magnet, 3D-printed magnet bracket, vertical nylon motor bracket, bottom fuselage plate, mounting screws
Tools	Circlip pliers, manual arbor press, superglue, hex drivers
Read	This page, and the *Motor shaft* section below in full before touching the motor. Brushless motors for the background

3.3 The motor — AS2303 KV1500

The AS2303 is a **brushless outrunner**. Read Brushless motors first.



We use the AS2303 KV1500 motor throughout the course. Its propeller horn **cannot** be separated from the bell, it has to be machined off in a lathe. That work, and the custom shaft, are prepared before the session.

3.3.1 What the KV rating means

KV is the motor's *velocity constant*, quoted in rpm per volt. It says how fast the rotor spins per volt applied, **with no load on the shaft**:

$$\omega_0 = k_V \, U \tag{3.1}$$

The constant is not a marketing number — it falls out of the motor's physics. As the rotor turns, its magnets sweep past the windings and induce a voltage that opposes the supply (the *back-EMF*):

$$U_{\text{emf}} = \frac{\omega}{k_V} \tag{3.2}$$

The supply voltage splits between this back-EMF and the ohmic drop across the winding resistance R, so $U = U_{\text{emf}} + R\,I$ and the speed under load becomes

$$\omega = k_V (U - R\,I) \tag{3.3}$$

which is why Equation (3.1) only holds at $I \approx 0$. Draw current and the motor slows down.

The same constant fixes the torque. Electrical power in equals mechanical power out, $U_{\text{emf}} I = \tau\omega$, and substituting Equation (3.2) gives $\tau = I/k_V$ in SI units. Converting k_V from rpm/V to rad/s/V:

$$k_T = \frac{60}{2\pi\, k_V} \approx \frac{9.55}{k_V} \qquad \text{with} \qquad \tau = k_T\, I \tag{3.4}$$

with k_T in N·m/A when k_V is in rpm/V. **Torque and speed constants are inverses of each other.** A high-KV motor spins fast but gives little torque per amp; a low-KV motor of the same size and mass does the opposite. Both cannot be had at once — the choice is where to sit on that trade-off, and then to recover the missing torque with a reduction.

3.3.2 What this means for our robot

With $k_V = 1500$ rpm/V and a 4S LiPo at its 14.8 V nominal voltage:

$$\omega_0 = 1500 \times 14.8 = 22\,200 \text{ rpm} \qquad k_T = \frac{9.55}{1500} = 6.4 \text{ mN·m/A} \tag{3.5}$$

6.4 mN·m/A is very little torque, too little to drive the wings directly, which is exactly why the 23.04:1 Faulhaber gearbox is there. It multiplies torque by 23.04 and divides speed by the same factor. One revolution of the gearbox output is one full flapping cycle, so

$$f_{\text{flap}} = \frac{\omega}{60\,r} = \frac{22\,200}{60 \times 23.04} = 16.1 \text{ Hz} \tag{3.6}$$

at no load. Under real aerodynamic and hydrodynamic loading the drive tops out near 15 200 rpm, i.e. about **11 Hz** of flapping, the figure that reappears in Module 4.

3.4 Motor shaft

To pair the motor with the gearbox, the stock shaft of the brushless motor is replaced by a custom one. What is left to do is the disassembly and the press fit, which is still a delicate operation: the motor's structure is mostly aluminium and quite thin, for weight savings.

1. Remove the circlip on the shaft with the special pliers. **Don't lose it, nor the brass ring.**
2. Separate the rotor from the stator delicately, by hand.
3. Press the stock shaft out of the rotor bell.

> ⚠ Never load the bell radially
>
> Press the shaft out very carefully, making sure to never apply forces radially on the bell. Use the manual press with appropriate support below the bell to avoid deforming the dome shape. **Do not squeeze the bell with a vice, or even by hand.**

4. Press the sun gear onto the new shaft.

> ⚠ Sun gear first — this order cannot be undone
>
> The sun gear goes on **while the shaft is still free**. Once the shaft is pressed into the bell, it can no longer be supported properly to press the gear on.

5. Press the new shaft into the bell, making sure not to press on the dome-shaped part of the bell without appropriate support underneath. It is a **tight fit** on the bell and a **clearance fit** through the bearings.

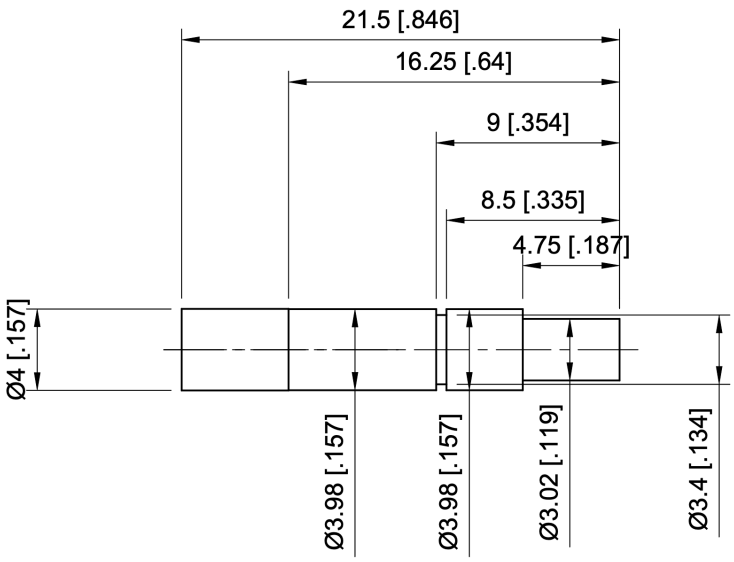


Figure 3.1: Motor shaft dimensions

3.5 Sensor magnet

The AS5047P encoder wired up in Module 3 does not touch the shaft. It reads the direction of the magnetic field from a small magnet rotating in front of it, so the magnet has to go on the motor.

Use a **6 × 2.5 mm diametrically magnetised disc magnet**. *Diametrically* magnetised is the part that matters: the poles are across the diameter, not through the thickness, so the field seen by the sensor sweeps through a full rotation as the shaft turns. An ordinary axially magnetised disc of identical size presents the same pole to the sensor all the way round and gives no angle at all.

1. Drop the magnet into its recess in the 3D-printed bracket. It should sit flat, fully seated, with no rocking.
2. **Centre it on the axis of rotation.** The bracket locates it, but check. Keep the magnet concentric with the shaft to within **0.5 mm**.
3. Bond it with **a single drop of superglue**. One drop is enough.
4. Turn the assembly through a full revolution by hand and watch the magnet. Any visible wobble means it is off-centre or not seated.

> ⚠ Off-centre magnets are hard to diagnose later
>
> An eccentric magnet may still produces a perfectly plausible angle reading at times.

3.6 Mounting the motor

With the shaft and the magnet done, the motor goes onto the robot plate. This happens in two stages: motor to bracket, then bracket to plate.

1. Fix the motor to the vertical **3D-printed nylon bracket** using **four screws M2x5 mm** through the mounting holes in the motor base. Don't over tighten. Check that the rotor still turns freely by hand. Nylon is compliant, and overtightening can pull the bracket out of flat enough to preload the bearings. A motor that spun freely on the bench and feels stiff once bolted down needs the screws backed off and retightened more gently.
2. Mount the bracket to the **bottom fuselage plate**. Before tightening, check the orientation: the shaft and sun gear must point towards the front of the robot.

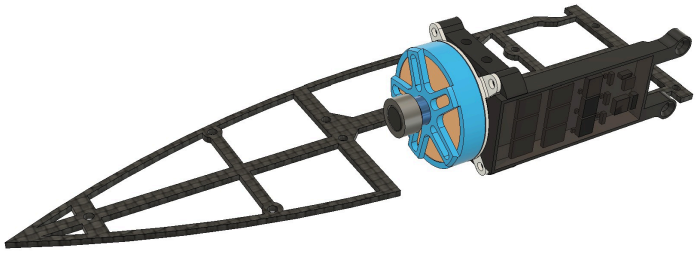


Figure 3.2: Motor and ESC

3.7 Solder the motor wires to the Electronic Speed Controller

Since the pads are large, make sure to use enough heat / large tip on the soldering iron. The order of the cables UVW do not matter.

Watch this before picking up the iron

Soldering Crash Course: Basic Techniques, Tips and Advice

Checkpoint

Shaft seated with the sun gear on it, the rotor spinning freely by hand with no wobble, the magnet bonded concentric to within 0.5 mm, and the motor bolted to its bracket and mounted on the plate - still turning freely once bolted down.

4. Module 3 — Motor driver, sensor and serial connection

4.1 Summary

Let's drive our motor! We aim to get a flashed G431 ESC talking to a laptop via a microcontroller, with the angular sensor wired on SPI and the motor spinning under commander control. Lots of soldering.

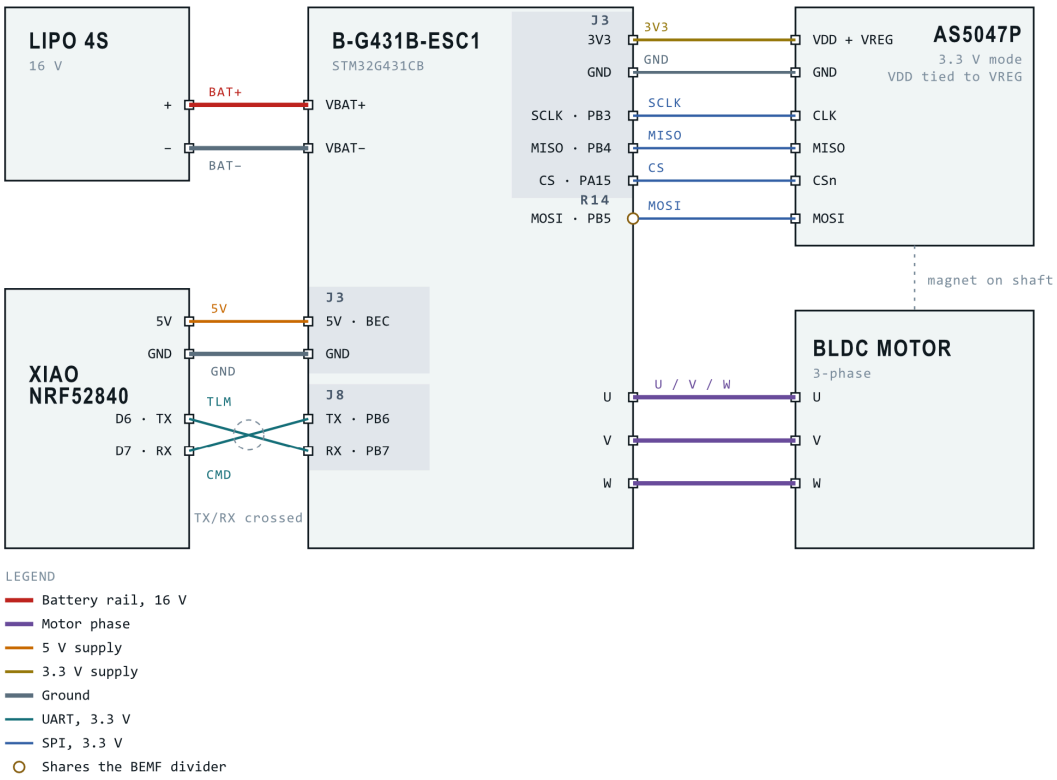


Figure 4.1: How the battery, ESC, encoder, motor and microcontroller connect. The XIAO nRF52840 shown here is the separate-microcontroller option for serial described below — note that TX and RX are crossed. SPI3 and UART pin assignments match the rework in Table 4.1 and *ST-Link serial*.

Work through the module with this diagram open: every step below either wires one of these links or configures it in firmware.

4.2 Requirements

Parts needed	B-G431B-ESC1 board, AS5047P encoder, encoder mount, cables

Tools	Soldering iron, tweezers, micro-USB cable, power source
Read	This page, plus Design notes on why we use an FOC ESC

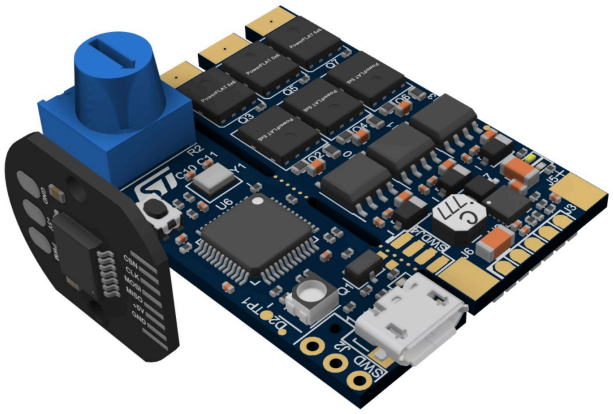


Figure 4.2: ESC running SimpleFOC and the angular sensor. The six MOSFETs are the large flat packages, arranged as three half-bridges — one per motor phase, each with a high-side and a low-side switch. The three copper tabs on the left are the U, V and W outputs the motor is soldered to below.

4.3 Electrical connections

Figure 4.3 is the same set of connections as Figure 4.1, drawn on the actual boards rather than as blocks. Use Figure 4.1 for the pin names, and this one for locating the pad.

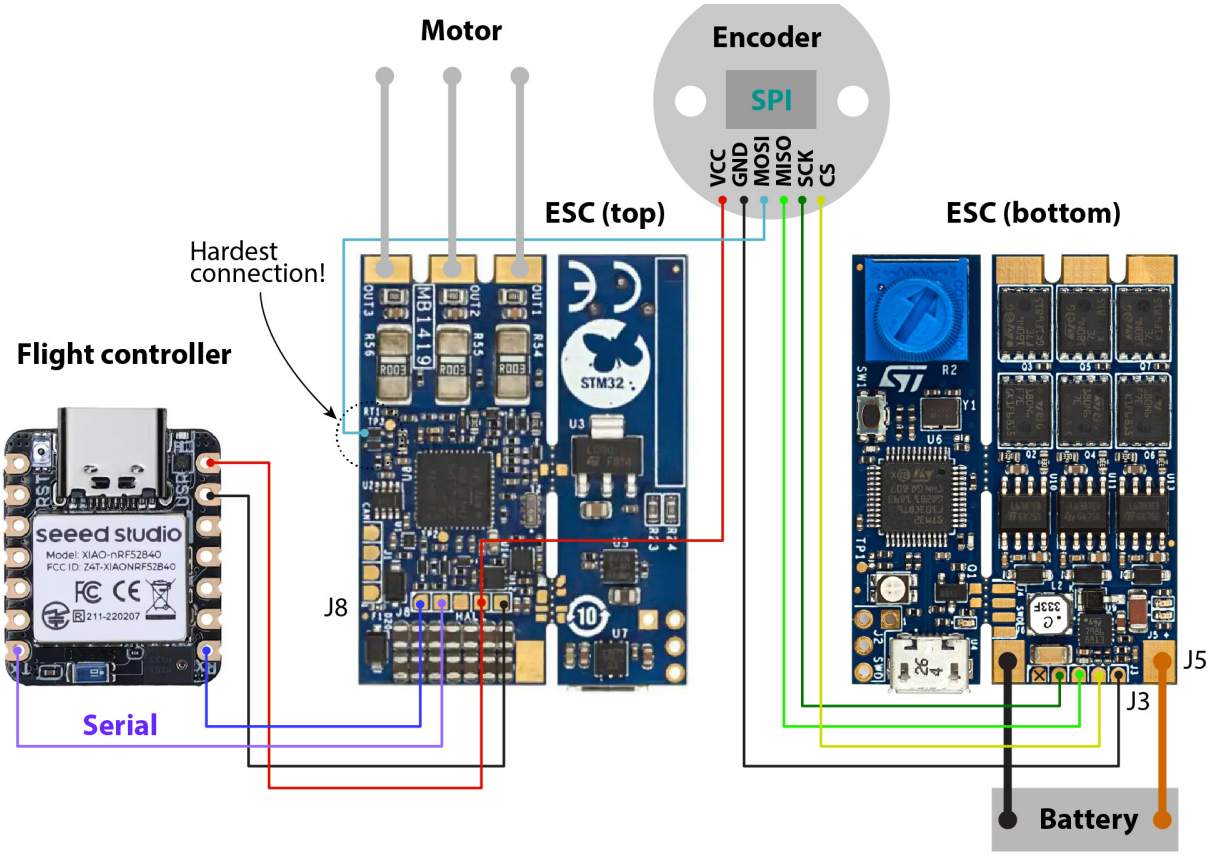


Figure 4.3: The complete electrical system. The 4S battery enters the ESC at **J5**, the three phase wires leave from the large **OUT1–3** tabs to the motor, the AS5047P encoder returns angle over SPI, and the XIAO nRF52840 talks to the ESC over serial. Note that the encoder and the flight controller share the same supply. The **MOSI** tap on **R14**, marked *Hardest connection!*, is the one to leave until last - see Table 4.1.

4.4 Electronic Speed Controller

The **B-G431B-ESC1** is ST's reference three-phase motor driver: a complete ESC on one small board, sold as an evaluation kit. It contains: - **An STM32G431 microcontroller.** A 170 MHz Cortex-M4 with hardware floating point. Motor control recomputes the field orientation every control loop. This MCU is the reason we can. - **A three-phase inverter.** Six power MOSFETs drive the three motor phases. - **A detachable ST-Link programmer (the daughterboard).** The small daughter board is how we program the MCU over USB, and it also carries a serial port back to the laptop. When snapped-off, the MCU cannot be reprogramed without physically resoldering it.

It also brings out many input/outputs (for example**J8**), a CAN transceiver and a potentiometer input, none of which we use as intended. In this build J8 gets repurposed for serial, and the encoder arrives on SPI instead. Both of those reworks are below. The board is rated well above what the wing motor draws (40A), so current is not the constraint here. Get familiar with every component on the board, how six MOSFETs turn one DC rail into three rotating phases, what current it can actually deliver, and why the programmer is a separate snap-off board under The G431 ESC board.

4.5 Flight controller microcontroller

We will use a **Seeeduino XIAO nRF52840 Sense** to send commands to the ESC and record information from the ESC. Why?

- It is small and light. 21 × 17.5 mm and 2.4 g. On a robot that has to move, every gram saved matters.
- It has wireless communication out of the box. The nRF52840 is a Bluetooth Low Energy chip and a microcontroller. Once the robot is sealed in Module 10 BLE becomes the only way commands to interact with the robot during operation, which is exactly how a run is retrieved in Module 11.

- It has somewhere to put the data. 256 kB of RAM and 1 MB of flash on the chip itself are the two logging destinations used during wet testing. No SD card, no extra memory chip, nothing else to waterproof.
- Onboard IMU to log the attitude of the robot without additional components.
- It costs 20$. In case a failure, it can be replaced.

It programs from the Arduino IDE like any other Arduino board, but we highly recommend using **Visual Studio Code + PlatformIO**. The reason for PlatformIO is that it handles multiple-file projects much better, allows git versioning and handles libraries better. It also provides a more performant editor.



Figure 4.4: The Seeeduino XIAO nRF52840. **TX** and **RX** are the two pads at the bottom corners — those are the ones to solder to, and they cross over to the ESC's RX and TX respectively. The board is 21 × 17.5 mm, which is why it can ride on the robot at all.

1. Solder the Seeeduino and the ESC's **Serial1**: TX, RX and **GND** lines. In Serial communication, TX and RX are **crossed**, each board's transmit line goes to the other's receive line, as drawn in the wiring diagram in Module 3. GND is not optional: without a shared reference the two boards have no agreed voltage for what counts as a high or low bit.
2. Load the barebone Arduino sketch onto the Seeeduino, see Software for the repository. This requires Visual Studio Code and the PlatformIO plugin installed.
3. Solder the power connection to the ESC and connect 15V from a power source.
4. Modify the sketch to turn the LED on the **ESC** on and off via commander instructions. This confirms three things at once:
   a. The Seeeduino can be flashed.
   b. The Seeeduino can be reached over serial.
   c. The Seeeduino can communicate both ways over serial.

4.6 Encoder (or Angular sensor)

4.6.1 First, why does the motor need an encoder?

Field-Oriented Control works by holding the stator's magnetic field roughly 90° ahead of the rotor's magnets, which is the orientation that produces the most torque per amp. To place the field there, the controller has to know where the rotor is **right now**.

Ordinary drone ESCs infer this from back-EMF, i.e the voltage the spinning rotor induces in the phase that is not currently being driven (Equation (3.2) in Module 2). That voltage is proportional to speed, so as the motor slows the signal sinks into the noise and the estimate falls apart. This causes *loss of synchronisation at low speed* described in Design notes. The AS5047P removes the guess. It measures the field of the magnet bonded to the shaft end and reports the **absolute** angle — valid at standstill just as much as at 15 000 rpm, and correct immediately at power-on with no homing move.

4.6.2 What SPI is, and why we run it at 10 MHz

We will use an AS5047P encoder. The AS5047P reports angle over SPI, a four-wire synchronous bus: the controller drives the clock (**SCLK**), data goes out on **MOSI** and comes back on **MISO**, and **CS** selects the chip. Transfer speed is limited only by how fast the two ends can shift bits. We use SPI because it offers **10 MHz** communication. The reason speed matters is that the angle has to be re-read every single control loop, and a stale angle is bad: the controller ends up placing the stator field where the rotor **was**, not where it is. That error shows up as wasted current and audible noise. The same 10 MHz clock is why the wiring has to stay short, see below.

4.6.3 Wire it to the board

There is no SPI link exposed directly on the ESC board. The solution is to use the **SPI3 bus**, exposed through a few hardware modifications and matching software changes. Figure 4.1 shows the four signals in context, including the MOSI tap on R14.

> ⚠ The micro-USB serial link is lost
>
> Serial2, used by the daughterboard for serial communication will not work anymore as we are using those pins for SPI3 for the encoder instead. Flashing the ESC still works (programming runs over SWD, on different pins) but every command and every value read back now has to pass through serial1.

The encoder needs power as well as the four bus signals — six wires in total:

Table 4.1: SPI3 connections on the G431. * This connection is on the outward side of the resistor.

	SCLK	MISO	MOSI	CS	5V	GND
MCU GPIO	PB3	PB4	PB5	PA15	—	—
G431B pin	J3	J3	R14*	J3	J8	J3

Note that **3.3 V and GND come from different connectors**. J3 carries the three bus signals and a ground, but its only supply pin is **5 V** from the break-away BEC — too high for the AS5047P. The 3.3 V rail is exposed on **J4**, the SWD header, alongside SWDIO and SWCLK. Take power from there and ground from J3, and check both against Figure 4.5 before soldering.

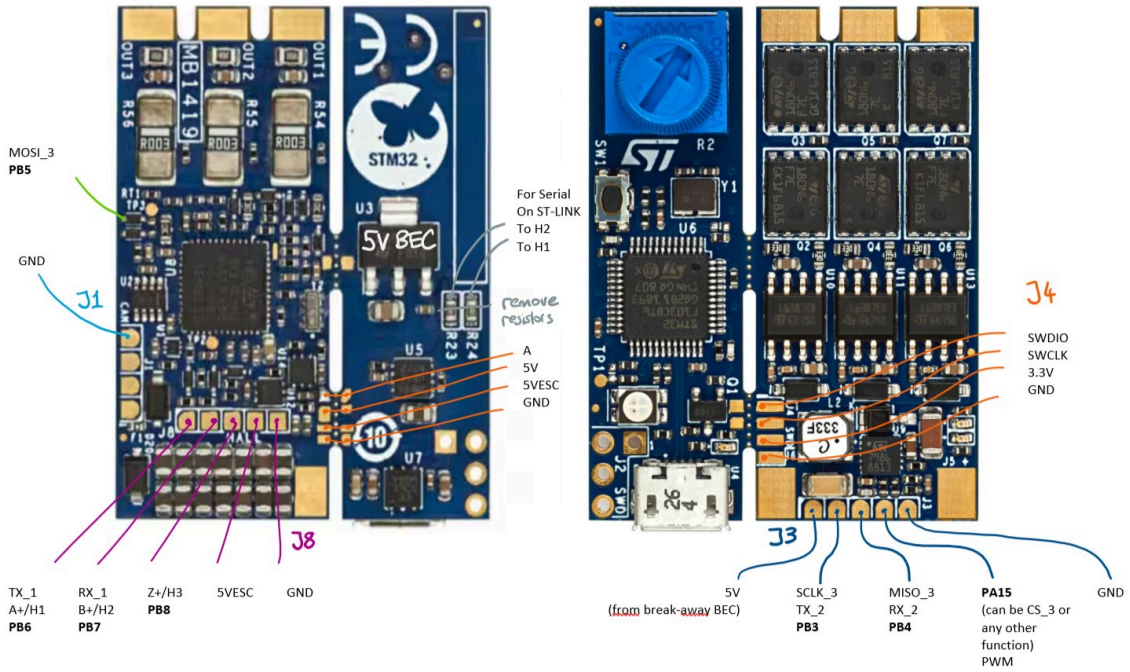


Figure 4.5: GPIOs of the G431B-ESC1 board. J3 carries SCLK, MISO, PA15 and GND; the 3.3 V rail is on the J4 SWD header.

⚠ Keep the SPI cables under 8 cm

Cables between encoder and ESC need to be **less than 8 cm**. At 10 MHz longer runs start corrupting angle readings, and the symptom is a motor that behaves erratically rather than a sensor that obviously fails. Check the length that is needed.

Next, use M2 screws to mount the encoder on the 3D printed bracket that sits around the motor. Check that the distance between sensor and magnet is 0.5 mm, and centered.

4.7 Mounting

1. Install the Seeeduino in its 3D-printed bracket and into the robot
2. Install the encoder in its 3D-printed bracket
3. Install the ESC in its 3D-printed bracket
4. All mounted to the bottom fuselage plate

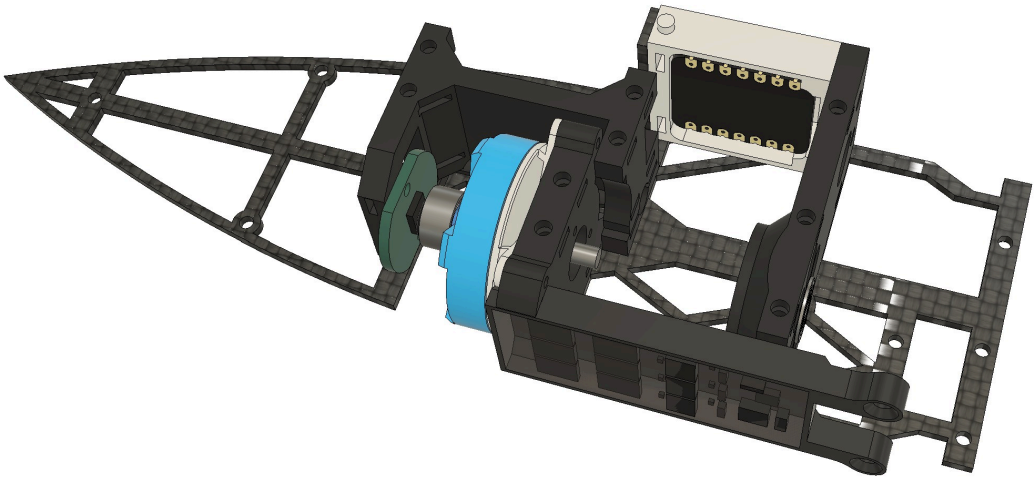


Figure 4.6: Assembled motor-esc

! To be prepared by the instructor before the session

Prepare a power source 15V 5A over USB-C. Calibration stand / code

5. Module 4 — Closed-loop control and tuning

5.1 Summary

The gearbox installed with a marker flag on the output, the Seeeduino wired in and commanding the ESC untethered, running continuously, then holding position, then tracking a velocity setpoint with a tuned loop.

5.2 Requirements

Parts	Motor with shaft and sun gear from Module 2, Faulhaber 23.04:1 gearbox, M2.5×10 screws, 3D-printed plates, second vertical bracket, 3× M2.5 and 3× M2 screws, ESC from Module 3, 4x8 mm flanged bearing, Seeeduino XIAO nRF52840, its 3D-printed bracket, 3 wires
Tools	Bench supply with current limit, tachometer or camera, soldering iron
Read	This page in full - the speed limits below explain most of what comes up

5.3 Reduction

The motor is connected via a custom shaft to a gearbox with a **23.04:1** reduction by Faulhaber.[1] Both parts are held in place by 3D-printed plates. The output shaft of the gearbox has its own bearing on the inside of the gearbox, and is also supported mid-way on the shaft by a 4×8 mm flanged bearing. This leaves **5 mm of shaft length free** for the crank to be mounted on. A flat on the shaft helps lock the rotation of the M3 screw extending through the crank.

[1] Faulhaber gearhead reduction ratios (accessed 20.02.2024).

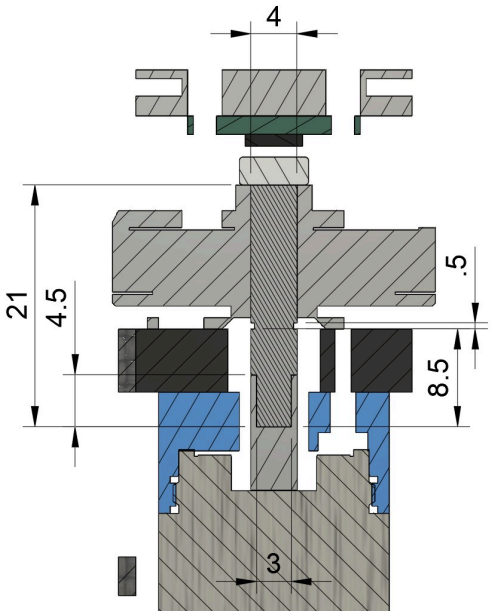


Figure 5.1: Motor shaft



Figure 5.2: Faulhaber gearbox

5.4 How to program the ESC

With the encoder and motor connected to the ESC, we can start programing the ESC! Remap the pins in software for SPI use: in `platformio.ini` via `build_flags`, and by overwriting the `WEAK PinMaps` in `pinmap_custom.h`. See commit `18520ac` on GitHub for details.

5.5 Firmware

The ESC is pre-flashed. Code for the B-G431B-ESC1 motor controller, using the SimpleFOC library, is in the lab repository: FAAV-G431-ESC. See Software for all repositories.

Before changing anything in there, read How SimpleFOC works. It covers the two nested loops, what the FOC maths does each iteration, why the motor twitches at power-on, and which settings in the sketch matter — enough to read the firmware rather than guess at it.

5.6 Calibration

5.7 Commanding and monitoring

This is a high-level summary of the SimpleFOC communication docs. Communication with the ESC is over **serial**, via a separate microcontroller board.

Once serial communication is established, the ESC is driven through the **commander**, a practical interface for setting and getting values (instructions). Ask the commander for available commands with `?`. Commands available:

Command	Effect
`M`	Full motor configuration
`F`	Get the main loop frequency
`L`	Turn the onboard LED on and off (useful as a comms check)
`T`	Set the target value — rad, rad/s or N/m depending on control mode

Command	Effect
`W`	Watchdog on/off. If no new target arrives for 1 s, target is set to zero. **On by default**
`R`	`R0`/`R1` disable/enable a linear ramp when changing setpoint. `RD1000` sets ramp duration to 1000 ms (default 1000 ms). Off by default

⚠ Careful when changing control mode

`T` means something different in each mode, position, velocity, or torque. Sending a velocity setpoint while in torque mode will do something unintended, with the wings attached. BE VERY CAREFUL ABOUT THIS.

i Checkpoint

Commander responds to `?` over serial at 115200 baud, `L` toggles the onboard LED, the sensor returns a plausible angle through a full manual rotation, and the motor spins under a `T` command.

! To be completed by the instructor

Which repository holds the barebone Seeeduino sketch, and on which branch. The nRF52 repositories currently in Software are marked outdated, so students following this page have nothing to clone.

5.8 Task sequence

1. Mount a small flag on the gearbox output so rotation is visible and countable.
2. Achieve continuous spinning at low speed.
3. Achieve position control - the output holds against a hand disturbance.
4. Tune the loop and characterise the maximum usable speed.

! To be completed by the instructor

The specific PID tuning exercise, the target performance, and the sign-off criteria are course material and are not in the manufacturing guide.

5.9 Why low speed is the hard part

Regular drone ESCs start **losing synchronisation at low speed**, which is exactly the regime used for water propulsion. That is the reason this course uses an FOC ESC rather than a hobby unit - see Design notes.

5.9.1 Going beyond 600 rad/s

Two issues limit speed: the micro-controller loop rate, and delays from the rotation sensor. Using SPI at 10 MHz and an AS5047P sensor rated for 28kRPM speeds are the required hardware changes that improves on delay. But at very high speeds, sensor lag still becomes the binding constraint, and shows up as high current draw and noise. We need to update the sensor electrical angle offset as a function of speed. Compensating sensor lag as speed increases is necessary to go above 600 rad/s without wasting current. This is automated by ramping through the speeds and minimising phase current. This SimpleFOC forum thread is useful on the topic.

i Checkpoint

Continuous rotation resulting in frequencies of 1 Hz all the way to 8 Hz without loss of synchronisation, position hold against a hand disturbance, and a recorded loop frequency from F. Do not exceed 8 Hz.

6. Module 5 — Frame, crank, linkage and gears

6.1 Summary

We assemble the carbon frame, the CNC-cut crank and linkage, the gears, and the full mechanical integration that turns motor rotation into flapping. Flapping amplitude is fixed by this design to **60 degrees**[2] — 34° up and 26° down, as laid out in Figure 6.2.

6.2 Requirements

Parts	5 mm aluminium link and crank, 2 gears, bearings, M2×4 screws
Tools	drill press, metal glue
Read	This page

6.3 Main body

The main body is a carbon sandwich, spaced **24 mm** apart. The plates are CNC-cut from woven 1.5 mm plates. The top and bottom plates are identical, except for the chamfers needed for the M2 screws. The screws holding plate to plate are **M2×4**, screwing into brass inserts.

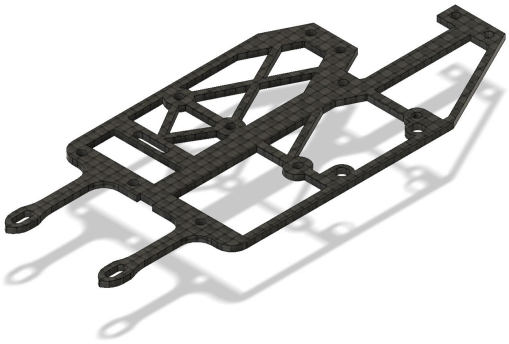


Figure 6.1: Main carbon frame

6.4 Reduction

Our sun gear is already pressed onto the motor shaft from Module 2. What is left is mating the gearbox to the motor and fixing the pair to the plates.

1. Slide the gearbox onto the motor shaft so the sun gear engages the planets. It should seat with light hand pressure, if it resists, back off and check the sun gear is square on the shaft rather than forcing it.
2. Fix the blue part of the gearbox: the custom screws that come with the gearbox on one side, and **M2.5×10** screws on the other.

[2] Lapsansky AB, Zatz D, Tobalske BW (2020). Alcids 'fly' at efficient Strouhal numbers in both air and water but vary stroke velocity and angle. *eLife* **9**:e55774.

3. Check the output turns freely by hand through a full revolution before applying power.
4. Close the gearbox: the **silver part threads onto the blue part**. Don't tighten it.
5. Attach the **second vertical bracket** to the silver part of the gearbox with **3 × M2.5** screws.
6. Secure that bracket to the **bottom fuselage plate** with **3 × M2** screws. The motor bracket from Module 2 is already on the same plate, so between them the two brackets set the alignment of the whole drivetrain. Check the output still turns freely once both are bolted down.

6.5 Crank and linkage

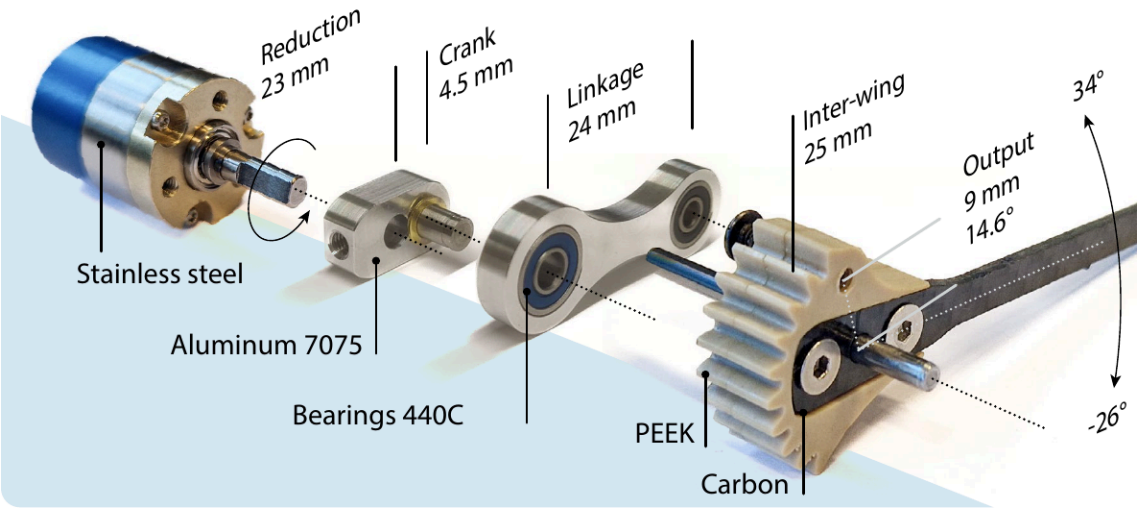


Figure 6.2: The transmission, exploded, with the length that matters and the material for each part. Follow it left to right: the gearbox output turns the crank, the crank drives the linkage, and the linkage swings the inter-wing gear. The **34°** up and **−26°** down at the right are where the 60° flapping amplitude comes from — it is set here, by these lengths, and cannot be changed in software.

The dimensions called out in Figure 6.2 are the ones to cut to:

Table 6.1: Crank–linkage dimensions


	Crank-linkage dimensions
Crank radius	4.5 mm
Linkage length	24 mm
Crank–linkage shaft diameter	4 mm
Bearing, crank side	10×4×4
Bearing, wing side	8×3×4 flanged

Both the crank and linkage are CNC-cut in a 5 mm aluminium plate.


1. Press the bearings into the linkage. They may need to be bonded with metal glue if the press fit is not good enough.
2. Join the crank and linkage with a short 4 mm shaft, cut to **10.5 mm**. The bearing is kept from coming out with a circlip.

> ⚠ Alignment of the linkage, perpendicular to the shafts, is extremely important
>
> An offset of **1 mm** is sufficient to destroy the crank-link in a few strokes.

Figure 6.3 shows how the four shafts for the FAAV3.2 should be manufactured. Nothing exotic, but they need to be accurate.

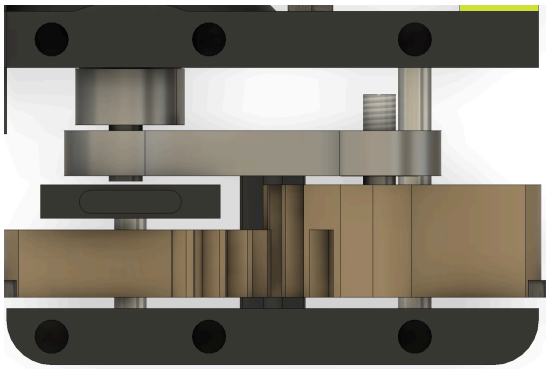

(a) Transmission, top view

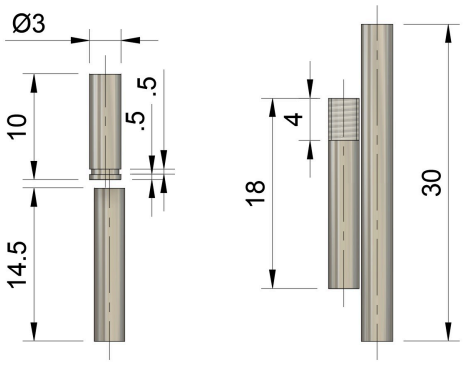

(b) Shaft dimensions

Figure 6.3:

The 3 mm shafts are pressed through the two gears' centre holes. Should be a mildly tight fit at minimum, otherwise glue the shaft. Same for the linkage shaft (also 3 mm).

Between the gears, a clearance of **0.4 mm** (inter-axis spacing of 25.4 mm) ensures proper operation without too much backlash.

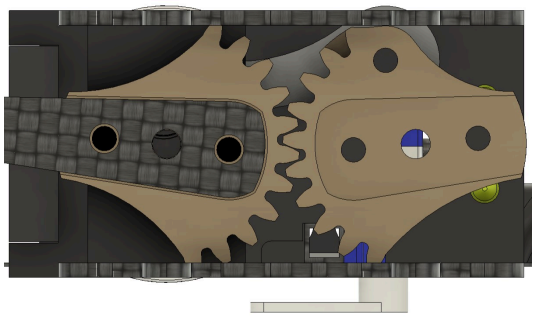


Figure 6.1: Transmission assembled

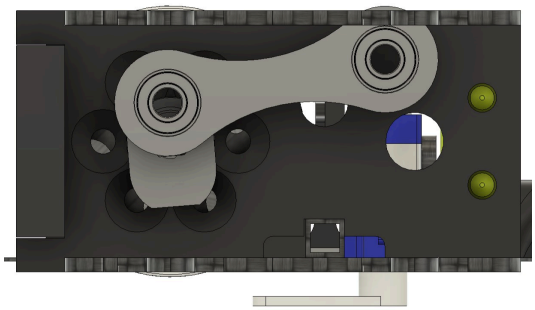


Figure 6.2: Transmission, second view

> ℹ Checkpoint
>
> Frame assembled, crank–linkage rotating freely through a full cycle with no binding, linkage visibly perpendicular to the shafts, and gear backlash checked. Flapping shown at 1-5 Hz.

TODO: buy circlip 4mm

7. Module 6 — Flapping simulation (Ptera)

7.1 Summary

The wing and tail geometry are chosen here. Candidate geometries are simulated in Ptera, and the one giving the best thrust profile when compounded with the provided motor power curve is selected. Modules 7 and 8 build whatever is decided here.

7.2 Requirements

Bring	Laptop with Ptera installed, the measured loop performance from Module 4
Read	This page

7.3 Deliverable

A wing planform and a tail geometry, with the simulation output that justifies them, carried forward into Module 7 and Module 8.

! To be written by the instructor

This module has **no counterpart in the manufacturing guide** — the guide documents the research robot's final geometry, not the design exercise. The following need to be written from course material:

- Ptera installation and a worked example
- The provided motor power curve, and its format
- What "most efficient thrust profile" means quantitatively here, and how it is scored
- Constraints the students must respect so their geometry remains buildable with the frame from Module 5 — span limits, root fitting, mass budget
- Whether teams may deviate from the reference wing, and by how much

i Checkpoint — TA sign-off

A geometry chosen, with simulation evidence, and confirmed buildable against the frame and wing-root hardware.

8. Module 7 — Wing fabrication

8.1 Summary

Both wings: carbon skeleton, membrane cut to the geometry chosen in Module 6, bonded and stitched at the load-bearing points.

8.2 Requirements

Parts	Carbon rods and strips, wing roots, 2× nylon adapters per wing, ripstop nylon membrane, 3M tape, superglue, thread
Tools	Cutting mat, steel rule, scalpel, needle, printed full-size template of the chosen geometry
Bring	The Module 6 geometry, printed 1:1

8.3 Wing roots

The wing roots are carbon, drilled to mate with the gears from Module 5.

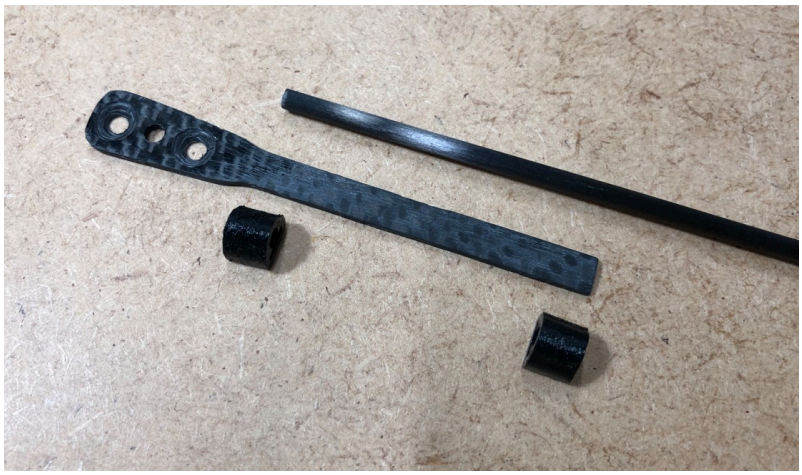


Figure 8.1: Wing root parts and spar stock

8.4 Building the wing

The whole wing is built **over the printed pattern**, working from the leading edge outwards. Everything is cut oversize and trimmed to the outline at the very end — margin is easy to remove and impossible to add back.

1. **Decide on the shape** and print the pattern on paper. Print it **1:1** — check the scale before cutting anything, by measuring a known dimension on the printout against a rule. Printer drivers scale to fit by default, and a pattern that came out at 97% quietly discards the geometry chosen in Module 6.
2. **Cut two membranes** with a **3 cm margin** all round the pattern. Use the ripstop nylon listed in Parts.

3. **Bond the leading edge.** Lay a strip of **3M tape** along the leading-edge region of the membrane, press the leading-edge rod down onto the tape, and wrap the membrane around the rod. This joint carries the highest load of any on the wing — everything downstream pulls against it.
4. **Lay out the carbon strips.** Cut each to approximate length **plus 3 cm**, position them on the membrane over the pattern, and bond them with **superglue**.
5. **Stitch the strips down**, at minimum at every **intersection point** and at the **extremities**. Superglue alone will peel off the membrane under repeated flapping; the stitches are what keep the skeleton attached once the glue starts to fail.
6. **Trim the excess** beyond the outline with a blade, cutting on the mat.

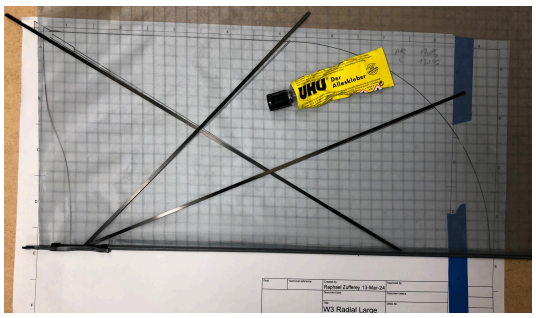


Figure 8.1: Strips laid out and bonded over the template

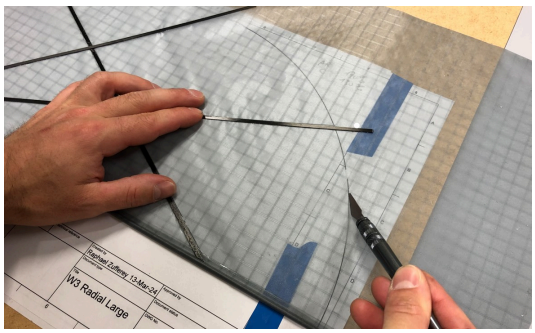


Figure 8.2: Trimming the membrane to the outline

Repeat for the second wing, and remember that it is flipped.

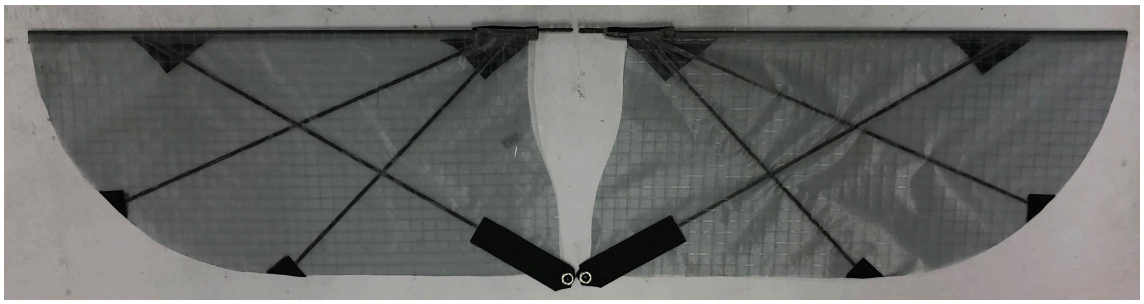


Figure 8.2: Completed wing pair

8.5 Assembly

1. Mount each wing in its **wing root** using the **two nylon adapters**.
2. Mount the wing roots in the robot, onto the gears from Module 5.
3. **Check that it flaps.** Run it slowly first and watch both wings through a full cycle before going any faster.

> ⚠ Both wings must match
>
> Asymmetry between left and right shows up as a roll bias that may not be possible to correct later. See Module 11 for trimming out. Weigh both wings and compare spar positions against the template before bonding.

! To be completed by the instructor

Still missing from the procedure above:

- Which 3M tape — the parts list says VHB, the width and where exactly it lands on the leading edge are not recorded
- Spar layup: rod and strip diameters, and where the diagonals attach
- What to stitch with — thread type and stitch spacing
- Numerical tolerance between left and right wing, for the check below

i Checkpoint

Both wings complete, matched in mass and geometry, mounted in their roots and fitted to the robot, and flapping through a full cycle without binding.

9. Module 8 — Tail

9.1 Summary

The passive tail, cut to the shape the simulation produced and mounted on its rod and the trailing edge mount ## Requirements

Parts	Carbon sheet and tail rod, foam stock (XPS or closed-cell PE), epoxy
Tools	Foam cutter, scalpel
Bring	The Module 6 tail geometry, printed 1:1

9.2 Tail

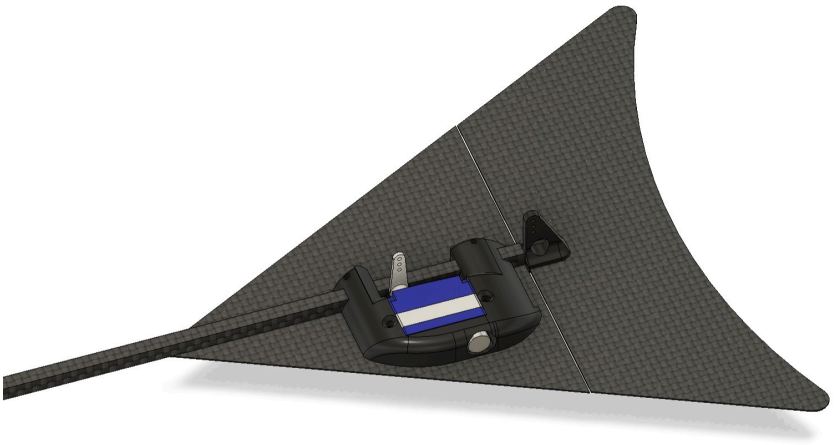


Figure 9.1: Tail assembly

! TBC

As with the wings, the guide contains **only the photograph above** for the tail. Still needed: sheet material and thickness, rod diameter, how the tail mounts to the boom, and the incidence setting. The project plan also notes tail actuation is optional if time permits — decide before the semester whether that is in scope.

9.3 Trailing edge holder

The wing root is driven by the gears and sweeps through the full **60°** set in Module 5. The trailing edge is not driven. It is anchored to the **tail tube**, and that anchor is what makes the membrane twist as the wing sweeps. It sets the angle of attack the wing sees through the stroke. Move it and the wing behaves differently. So this part is a trim adjustment as much as it is a mount, which is why both its positions have to stay changeable after the robot is built.

This part is a design exercise. The requirements are fixed; the mechanism is not.

Table 9.1: What the trailing edge holder has to do

Requirement	Why
Rotates with the wing through the whole stroke	The root swings 34° up and 26° down. An anchor that cannot follow loads the membrane in the one direction it cannot take.
Adjustable **longitudinally**, along the tube	Fore/aft position sets wing twist. This is the trim actually reached for in Module 11.
Each Wing mounts can change **laterally and longitudinally**	Sets how far the anchor stands off the boom, and is how left and right are matched.
Wing comes off without dismantling anything	Wings get swapped, damaged and rebuilt. Nothing about this joint may be permanent.
Survives repeated wet cycling	To not fail at competition

9.3.1 Find a solution

Both flexible and rigid solutions are possible. For a rigid solution, the mount half is straightforward: a **split collar** that slides along the 5 mm tube and clamps with an M2 screw into a square half nut, per the house convention in Design notes. Sliding it gives the longitudinal adjustment, rotating it about the tube gives some of the lateral, and a slotted arm gives the rest.

The design must be justified against Table 9.1, and the choices defended.

9.3.2 Print it

1. 3D-print the part with the material required.

9.3.3 Insert it on the tube

Slide the collar onto the tail tube and set it to the starting station. Measure from a fixed datum, write the number down, and set the second one to the same number.

9.3.4 Attach the wing

Connect each wing's trailing edge to its holder.

> ⚠ Both sides must be set identically
>
> Different longitudinal stations left and right means different twist left and right, which is a roll bias -the same failure mode as mismatched wings in Module 7, arriving by a different route and just as hard to trim out in Module 11.

> ℹ Checkpoint
>
> Tail mounted, wings attached to tail.

10. Module 9 — Flight controller, PCB and dry testing

10.1 Summary

The custom PCB assembled and validated, the flight controller flashed and talking to the ESC, and the robot flapping in air under wireless control.

10.2 Requirements

Parts	Seeeduino XIAO, connectors, battery
Tools	Hotplate, tweezers, multimeter, bench supply with current limit
Read	This page

10.3 Flight controller



Figure 10.1: Microcontroller in its waterproofing box

Firmware lives in FAAV-Flight-Controller

10.4 Dry testing

! TBC

The dry-test protocol is course material, not in the guide. Needed: what the robot is mounted on while flapping in air, the flap frequency sweep, what is measured, the wireless control setup students reprogram to, and abort criteria.

i Checkpoint

Flight controller commanding the ESC over serial, and a supervised flapping run in air.

11. Module 10 — Waterproofing

11.1 Summary

A potted PCB, a lubricated and sealed gearbox, and a robot that survives a static immersion test.

> ⚠ Silicone cure time gates this module
>
> The PCB potting takes **12–24 hours** to cure because of the depth. Plan the module so potting happens first and soldering happens after the cure, or across two sittings.

11.2 Requirements

Parts	Waterproofing box, Kapton tape, silicone sealant, USB-C cable, CorrosionX, white lithium grease
Tools	Needle, soldering iron
Read	This whole page before starting — the ordering matters

11.3 Flight controller waterproofing

First ensure that the FC fits within the 3D box before anything else.

1. Fill the bottom of the box with silicone sealant until it reaches the USB port hole.
2. *Carefully* slide the assembly in, with the Seeeduino facing the bottom of the box.
3. **Very important!** Insert a USB-C cable into the port. This keeps the sealant from flowing into the port, and the cable is a convenient point to hold the assembly by.
4. Add sealant along the three free edges to fill any gaps, until the sealant reaches the level of the top side of the PCB.
5. Let the silicone cure - because of the depth this takes about 12–24 h.

11.4 ESC waterproofing

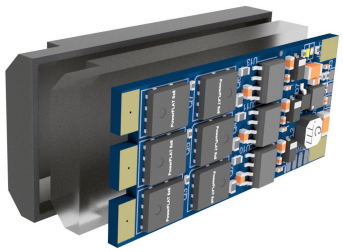


Figure 11.1: The B-G431B-ESC1 assembly.

The ESC is potted the same way as the flight controller: it sits in its own 3D-printed frame, which is then filled with **Silcoset** so only the wire exits remain open. Figure 11.2 shows the three pieces together - motor, bare ESC, and the potted frame.

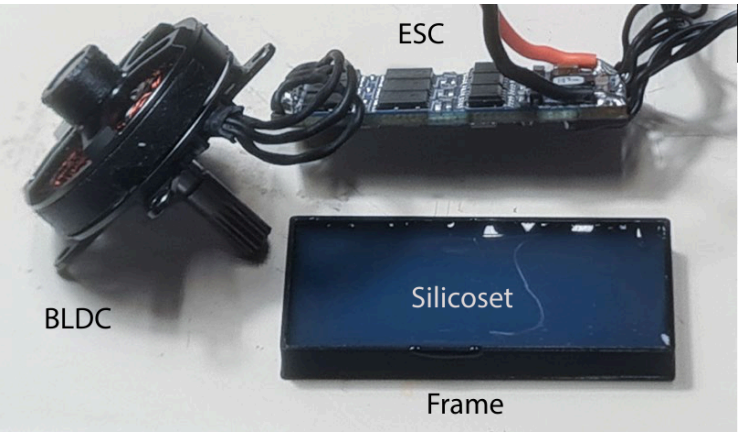


Figure 11.2: The motor, the ESC and the potted frame. The dark block is the frame filled with Silcoset; the ESC drops into it before the fill so the board ends up fully encapsulated with only the phase and signal wires leaving.

11.5 Battery waterproofing

TBC ## Battery connector waterproofing TBC ## Spend time discussing COT and measurement TBC

11.6 Gearbox

By default the gearbox on the FAAV4 robot is **not waterproof at all**, and it is normal for it to end up completely filled with water once submerged. Over years of use the gearbox proved resistant to fresh water with the factory lubricant. If that is removed/cleaned, then use the right lubricant below. The best is to avoid opening the gearbox and cleaning the gears.

> ⚠ Use the right lubricant
>
> A mix of **CorrosionX and white lithium grease**. Several dives have since been performed with the same gearbox that previously corroded, and it now runs smoothly.

Parts that rust: **sun gear, planet gears, ring gear, planet shafts.** Parts that do not: screws, motor shaft, washers, body, circlip.

> ℹ Checkpoint
>
> Flight controller and ESC fully cured and potted, static immersion test passed with no ingress. Robot cleaned with IPA after each immersion.

12. Module 11 — Wet testing

12.1 Summary

Immersion, underwater runs, wing and tail trim, and a logged cost-of-transport measurement.

12.2 Requirements

Bring	Fully waterproofed robot from Module 10, charged 4S pack, spare crank–linkage shaft
Tools	Retrieval poles and towels are at the tank — see Tank rules
Read	This page, and the notes from Module 4

12.3 Pre-immersion checks

- ☐ Static immersion test from Module 10 passed
- ☐ Connector closed. USB-C port sealed
- ☐ Watchdog enabled on the ESC (`W`) - target drops to zero if commands stop
- ☐ Robot floats level. If not, add floats.

12.4 The tank

Testing happens in the AURA Lab tank. The gantry along the near rail and the cameras overhead are part of the measurement setup, not scenery — the ceiling cameras are what track the robot for the cost-of-transport number below.

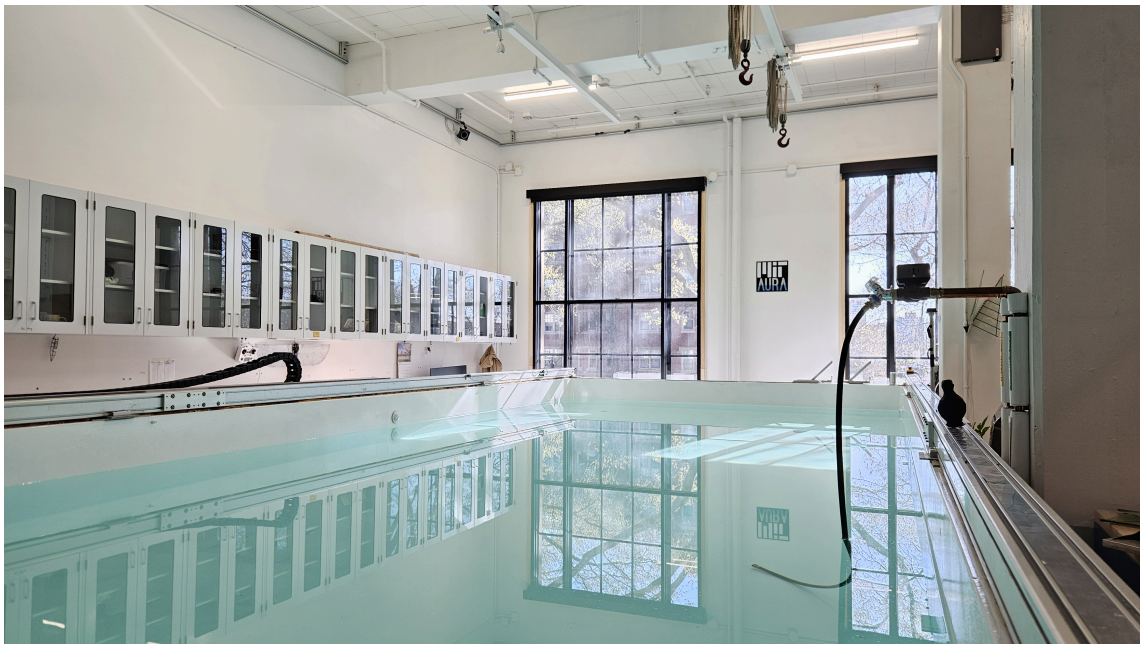


Figure 12.1: The AURA Lab tank. The rail and gantry run the length of the near side; the tracking cameras are mounted overhead.

⚠ Tank rules

Nobody gets in the tank. Not to retrieve a robot, not to reposition it, not for a moment. Use the **poles** to fish the robot back to the edge.

Keep water off the floor. Water on the floor sets off an alarm, which ends the session for everyone. Lift the robot out over the tank and let it drain there rather than carrying it dripping, and keep **towels** to hand for what gets past. Dry the floor immediately if it happens.

12.5 What to log

Every run should record, at minimum:

- **Power consumption** — the numerator of cost of transport
- **IMU data** — attitude and acceleration through the run
- **Flapping frequency** — the input being varied

Since underwater we lose wireless communication, the data needs to be recorded and streamed back wirelessly after the run. There are two places to record data on the flight controller, and the choice matters more than it looks:

	RAM	Flash
Survives power loss	No	Yes
Speed	Fast, no wear	Slower, finite write cycles
Use it for	The normal case	Runs that cannot afford to be repeated

The normal workflow is **log to RAM during the run, then broadcast over BLE once the robot is out of the water**. Nothing has to be opened and nothing has to be plugged in, which is the whole point: the board is potted from Module 10 and there is no connector to reach.

⚠ RAM is lost the moment power goes

A brownout, a watchdog reset, or an accidental disconnect takes the whole run with it. Broadcast the data before changing the battery, not after - and if a run is expensive to repeat, write it to flash instead.

12.6 Housing

Design and 3D-print an exterior housing to ensure neutral buoyancy as needed. Foam can also be used.

12.7 Trim

Two independent adjustments, both mechanical. Change **one at a time** with a run between them, otherwise there is no telling which one did what.

12.7.1 Wing trim

Wing trim is adjusted at the **trailing edge**.

! To be completed by the instructor

The trailing-edge trim part itself is not designed yet — decide what it is, how it mounts, and what range of adjustment it gives. Until then this step cannot be written as a procedure, and students have nothing to adjust against.

12.7.2 Tail trim

Tail trim is manual: **bend and twist the tail by hand**. Bending sets pitch, twisting sets roll. Work in small increments and expect to go back and forth - there is no scale and no reference mark, so the logged runs are the only feedback available.

12.8 Cost of transport

Cost of transport is the score in Module 12, so measure it the same way every time:

$$\mathrm{COT} = \frac{P}{m\,g\,v} \tag{12.1}$$

with P the average electrical power over the run, m the robot's mass, and v its average forward speed. It is dimensionless, and lower is better.

The two halves come from two different places:

- **Power, onboard.** From the logged consumption above, averaged over the steady part of the run — not the acceleration at the start.
- **Speed, from the ceiling cameras.** The overhead tracking in Figure 12.1 gives position against time, which is the honest way to get v; timing it by eye across the tank is not good enough for a scored number.

Take both from the *same* window of the same run. Averaging power over one interval and speed over another is the most common way this number comes out wrong.

> ! TBC
>
> Still missing from the protocol:
>
> - **Run profile** — depth, duration, and the flap-frequency sweep to cover
> - **Abort procedure** — what conditions end a run early, and what the student does at the tank edge when they do
> - **Camera tracking, practically** — how a team starts a capture, and in what form the position data comes back

> i Checkpoint
>
> A completed underwater run with power, IMU and flapping frequency logged and successfully retrieved over BLE, no water ingress on inspection afterwards, and a cost-of-transport figure computed from Equation (12.1) with the camera-derived speed.

13. Module 12 — Competition

13.1 Summary

Robots are scored in two categories: **most efficient** and **fastest**.

13.2 The competition rules

13.3 Requirements

Bring	Robot, spare crank–linkage shaft, spare wing, charged packs, the logged cost-of-transport data

! TBC

Competition format is course material, not in the manufacturing guide. Needed:

- Course layout and run rules for each category
- How cost of transport is computed and normalised across teams with different masses
- Number of attempts, and repair rules between attempts
- How the competition contributes to the grade
- What happens to robots afterwards

13.4 Feedback

The final module is a recap and feedback round. This manual is rebuilt each year from what students report -if something in it cost time, say so. Corrections made during this semester are listed in the Changelog.

II Reference

14 Parts list 51
15 Brushless motors 55
16 The G431 ESC board 59
17 How SimpleFOC works 63
18 Software 67
19 CNC — Stepcraft D660 69
20 Design notes 71
21 Changelog 73

14. Parts list

Table 14.1: List of components, after Table S1

Category	Component	Material/ Model	Nb	Mass [g]	Total [g]
Structure	Frame	Carbon 1.5mm plate (swiss-composite)	2	4.7	9.4
	Vertical panels	Onyx with CF (Markforged)	2	6.2	12.4
	Motor holder	Onyx with CF (Markforged)	1	4.3	4.3
	Battery holder	Onyx with CF (Markforged)	1	1.1	1.1
	Tail holder	Onyx with CF (Markforged)	1	4.3	4.3
	Screws	M2 Stainless	40	0.13	5.2
Tail	Tail	Carbon 0.5 mm plate (Swiss-composite)	1	22.2	22.2
Propulsion	Crank	Al 7075	1	1.3	1.3
	Linkage	Al 7075, with bearings	1	4.3	4.3
	Reduction	Series 20/1R 1:23 (Faulhaber)	1	38	38
	Right plate	Carbon 1.5mm plate	1	1.5	1.5
	Left wing gear	Onyx with CF (Markforged)	1	2.8	2.8
	Right wing gear	Onyx with CF (Markforged)	1	6.7	6.7
Electronics	Flight controller	Seeeduino NRF52840	1	2.4	2.4
	Motor	AS2303 1500kV (T-Motors)	1	17	17
	Hall sensor	AS5047P (ams-OSRAM) at 10 MHz SPI	1	1.2	1.2
Battery proof.	[illegible]	[illegible]	2	[illegible]	[illegible]

! To be completed before the semester

This is the published list for the paper's robot, not the current build. Items the modules rely on that are **not** in it and need adding: 4 mm steel rod for the motor shaft, the 6 × 2.5 mm diametric sensor magnet and its printed bracket, 5 mm PEEK stock.

15. Brushless motors

Background for Module 2. For understanding why the motor behaves the way it does when you push it in Module 4.

15.1 Start with the brushed DC motor

Every result you need for a brushless motor is easier to see in a brushed one first, because the two obey the same electrical physics. The difference is *how* the windings get switched, not what the machine does once they are.

A DC motor is described by two constants and one resistance. Spinning the rotor induces a back-EMF proportional to speed, and passing current through the windings produces torque proportional to current:

$$U_{\text{emf}} = \frac{\omega}{k_V} \qquad \tau = k_T\, I \tag{15.1}$$

These are the same k_V and k_T derived in Module 2 — inverses of each other, not independent choices. The supply voltage splits between the back-EMF and the ohmic drop across the winding resistance R:

$$U = \frac{\omega}{k_V} + R\, I \tag{15.2}$$

Substitute $I = \tau / k_T$ and rearrange for torque, and the whole behaviour of the motor falls out as a **straight line**:

$$\tau = k_T \frac{U}{R} - \frac{k_T}{k_V R}\,\omega \tag{15.3}$$

15.1.1 Reading the torque-speed line

That line is the motor's entire steady-state character, and it is fixed by the applied voltage. Two points define it:

- **Stall torque** $\tau_{\text{stall}} = k_T U / R$, at $\omega = 0$. The rotor is held still, there is no back-EMF, and the only thing limiting current is the winding resistance. This is the largest torque the motor can produce and also the fastest way to destroy it - see Thermal limits.
- **No-load speed** $\omega_0 = k_V U$, at $\tau = 0$. The rotor spins fast enough that the back-EMF nearly cancels the supply, so almost no current flows.

Everything the motor can do at that voltage lies on the line between them. Mechanical power is $P = \tau\omega$, the product of a falling line and a rising one, so it is a parabola peaking at **half the no-load speed** with half the stall torque. Efficiency peaks somewhere else entirely — much closer to ω_0, because the copper loss that dominates at low speed scales with I^2 while the useful output only scales with I.

(The web version of this page carries an interactive plot of these three curves. See the manual online.)

> **i** The useful consequence
>
> Raising the voltage shifts the line outwards without changing its slope: more speed *and* more torque, same trade-off between them. That is why speed control is voltage control, and why a "faster" motor at fixed voltage is a lower-torque one.

(Online, this section carries a voltage slider showing the line sweeping outwards.)

15.2 What changes with a brushless motor

In a brushed motor the commutator and brushes are a mechanical switch riding on the rotor: they physically reconnect the windings as it turns, so the current always flows in whichever coil is best placed to produce torque. It works without any electronics at all, and it wears out, arcs, and limits how fast the motor can safely spin.

A **BLDC** motor deletes that switch. The permanent magnets go on the rotor, the windings stay on the stator in three phases, and an external controller decides which phases to energise based on where the rotor currently is. The motor becomes inseparable from its driver — this is why Module 3 exists, and why the rotor position measurement matters so much.

What this does **not** change is Equation (15.3). The torque and speed constants have the same meaning, the line has the same shape, and you size the motor the same way. What changes is that the line is no longer the whole story:

	Brushed	Brushless
Commutation	Mechanical, self-acting	Electronic, needs rotor position
Torque–speed line	The real limit	The *ideal* limit, then clipped by the driver
Wear	Brushes are consumable	Bearings only
Speed ceiling	Brush arcing and bounce	Commutation rate and sensor lag
Torque ripple	Smoothed by many commutator segments	Depends on drive scheme (trapezoidal vs FOC)

15.2.1 The envelope, not the line

The straight line assumes the supply can deliver whatever current the equations ask for. It cannot. At stall, Equation (15.2) gives $I = U/R$, and with the sub-ohm winding resistance of a small outrunner that is a number in the hundreds of amps — far beyond both the ESC and the motor itself.

So the driver enforces a **current limit**, and because $\tau = k_T I$ that is directly a torque limit. The usable region becomes:

- a **constant-torque region** at low speed, flat at whatever current limit you set, because the ESC is holding current rather than letting the line dictate it;
- a **corner speed** where the back-EMF has risen enough that the supply can no longer push that current;
- above it, the original Equation (15.3) line, falling to ω_0.

The flat part is not physics, it is a decision. On our robot it is the decision that keeps the motor alive at the low speeds used for swimming, where the torque–speed line alone would happily draw enough current to cook the windings.

15.3 Thermal limits

Nothing in Equation (15.3) knows about heat, which is why the equations cheerfully predict operating points that will destroy the motor in seconds.

Almost all the loss you care about is **copper loss** in the windings:

$$P_{\text{copper}} = I^2 R \tag{15.4}$$

The square is what makes this the binding constraint. Doubling the torque doubles the current and **quadruples** the heating. A motor comfortable at its rated current will not survive twice that for long, even though the torque equation says it is only a factor of two.

Three practical consequences:

1. **Stall is the worst case, not the best.** At $\omega = 0$ there is maximum current and no rotation, so no airflow and no useful output — all the input power becomes heat in the windings. A motor held at stall can burn out without the shaft moving at all.

2. **Continuous and peak ratings are different numbers.** A peak rating assumes seconds; a continuous rating assumes thermal equilibrium. Flapping is a *reciprocating* load, so the current is far from constant — what matters for heating is the **RMS** current over the cycle, not the peak you see on the bench supply.
3. **Iron losses grow with speed.** Hysteresis and eddy-current losses in the stator scale with electrical frequency, so at the 1700 rad/s discussed in Module 4 the copper is no longer the only thing getting warm.

(Online, this section carries sliders for the ESC current limit and the motor's continuous rating, showing how the two clip the torque–speed line.)

> ⚠ Heat is cumulative and invisible
>
> Current is the only symptom you can see, and it appears instantly, while the temperature it causes lags behind by tens of seconds. A run that looks fine on the ammeter can still be depositing heat faster than the motor sheds it. When tuning in Module 4, stop and touch the motor.

15.4 Measured behaviour of the AS2303

Everything above is the model. The plot below is where the **test-stand measurements** go, so you can see how far the straight line actually holds for the motor on your bench.

> ! To be completed by the instructor
>
> Two things, and the second depends on the first:
>
> 1. The measured winding resistance of the AS2303, its continuous current rating, and the current limit configured on the ESC. These turn every equation on this page into numbers students can check against — the plots above currently run on a **placeholder** R.
> 2. The test-stand data itself. Paste it into the `MEASURED` array in the script block at the bottom of `reference/bldc.qmd`; the schema and an example row are in the comment there. The plot switches from its empty state to a measured-versus-model comparison as soon as the array is non-empty.

15.5 Why an outrunner

Brushless motors come in two arrangements. An **inrunner** spins a magnet rotor inside a stationary stator, the familiar shape from a drill. An **outrunner** inverts it: the stator sits still in the middle and the magnets are carried on a bell that rotates around the outside. Ours is an outrunner — it is the bell you machine and press the shaft into in Module 2.

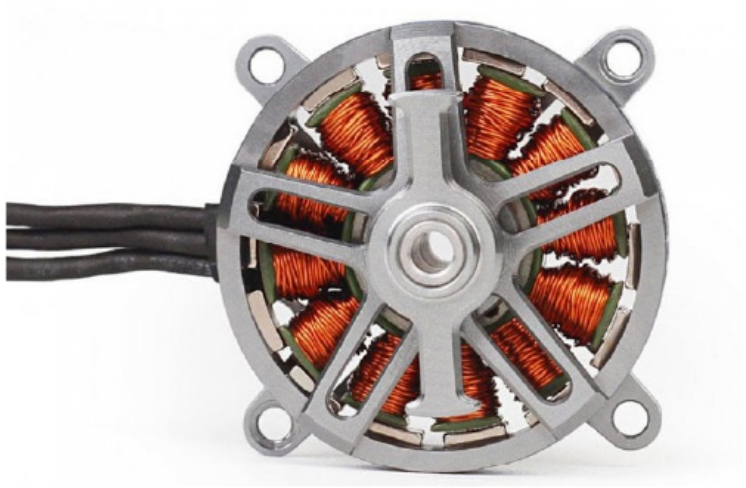


Figure 15.1: An outrunner seen from the back. The copper windings are the **stator** and do not move; the dark magnet segments around the rim are carried on the rotating bell. Note how far out the magnets sit — that radius is the lever arm in Equation (15.5), and it is the whole reason for this arrangement. Note also that the heat is generated in the middle, wrapped inside the part that spins.

The reason is torque. Torque is force times radius, and in an outrunner the magnets sit at the *largest* radius the motor's diameter allows, rather than the smallest:

$$\tau = F \times r \tag{15.5}$$

The same tangential force from the same windings acts on a longer lever arm. It also leaves room for more magnet poles around the circumference. Together these raise k_T for a motor of the same mass, which by Equation (15.1) means a **lower KV** — more torque per amp, less speed per volt.

That is the right trade for us. The wings need torque at low speed, through a gearbox that is already multiplying by 23.04:1, and the alternative is either a larger reduction or more current for the same result. Two secondary properties help as well:

- **Rotor inertia.** The rotating mass is at a large radius, so the bell has significant inertia and acts as a flywheel. Against a reciprocating flapping load that smooths the speed variation over a cycle. It also means the motor cannot change speed quickly, which is a real cost during transients.
- **Something to attach to.** The bell is a large-diameter rotating surface, which is what makes the shaft press-fit in Module 2 mechanically sensible in the first place.

The costs are real: outrunners spin more slowly for a given voltage, the exposed rotating bell is a hazard and an ingress path, and cooling is worse because the heat-producing stator is wrapped inside the rotor rather than mounted against the case. The last point ties directly back to Thermal limits — an outrunner's stator sheds heat mainly through its mount, which on our robot is a 3D-printed plate.

16. The G431 ESC board

Background on the **B-G431B-ESC1**, the board you rework and flash in Module 3. What is on it, how it turns a DC battery into three moving phases, what it can drive, and why it arrives in two pieces.

16.1 What it is

ST sells this as a *Discovery kit*: a reference design showing what their STM32G431 can do in a motor-control role, in the physical form of a drone ESC. That origin explains most of its oddities. A hobby ESC exposes a signal wire and two power leads because that is all a flight controller needs; this board brings out a CAN bus, a potentiometer input, a hall-sensor connector and a debug header, because its job is to demonstrate everything the chip supports.

For us the consequence is good and bad in equal measure. Good: the silicon is open, we can run our own firmware (SimpleFOC) and we get real current sensing. Bad: several connectors are wired for uses we do not want, which is why Module 3 spends its time repurposing them.

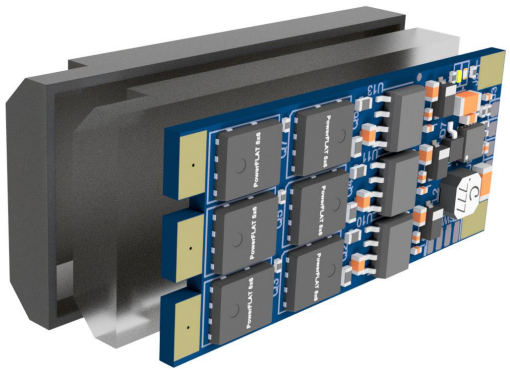


Figure 16.1: The power stage. The six large flat packages are the MOSFETs, in three pairs; the copper tabs on the left are the U, V and W phase outputs.

16.2 The parts that matter

Block	Part	Notes
Microcontroller	**STM32G431CB**	170 MHz Cortex-M4 with FPU, 128 kB flash, 32 kB RAM
Power switches	**6 × STL180N6F7**	60 V N-channel MOSFETs, very low on-resistance
Gate drivers	**L6387**	Three half-bridge drivers, one per phase
Current sensing	**Three shunts**	Low-side, amplified into the MCU's ADCs
Programmer	**ST-LINK/V2-1**	On the detachable daughter-board

Sources: ST's product page and data brief.

The MCU is the interesting choice. FOC recomputes the field orientation every control loop, and each iteration costs a handful of trigonometric evaluations (see How SimpleFOC works). At 170 MHz with hardware floating point that fits comfortably inside a 10 kHz loop. A hobby ESC's 8-bit microcontroller could not do this arithmetic in the time available, which is precisely why hobby ESCs use the cruder back-EMF scheme instead.

16.3 How the three phases are generated

The battery supplies one DC voltage. The motor needs three voltages that vary smoothly and stay 120° apart. The bridge between the two is built from three identical circuits.

One half-bridge per phase. Each phase output connects to two MOSFETs in series across the battery: a **high-side** switch to the positive rail and a **low-side** switch to ground. Closing the high side pulls that phase to battery voltage; closing the low side pulls it to zero. Three phases, three pairs, six transistors — the six packages in Figure 16.1.

PWM makes the intermediate values. A switch is either on or off, so a half-bridge can only output the full rail or nothing. Switching between them tens of thousands of times a second and varying the *fraction* of time spent high produces any average voltage in between. 50% duty gives half the rail. The motor's own winding inductance does the smoothing: it resists rapid current changes, so it responds to the average and largely ignores the switching.

Three of them, offset, make a rotating field. Drive the three duty cycles as sinusoids 120° apart and the three phase voltages produce a magnetic field that sweeps steadily around the stator. Advance the sinusoids faster and the field rotates faster. This is what `driver.setPwm(Ua, Ub, Uc)` at the bottom of SimpleFOC's inner loop is ultimately setting.

> ⚠ Both switches in a pair must never be on together
>
> High and low side closed at once is a direct short across the battery through two transistors — called **shoot-through**, and it destroys the pair in microseconds. The hardware inserts a **dead time**: a brief interval where both are off during every transition. It is handled by the gate drivers and the MCU's timer, so you will not code it, but it is why the two switches of a pair are never driven by a single signal.

Current sensing closes the loop. A small-value **shunt resistor** sits in each phase's low-side return path. The voltage across it is proportional to the current through that phase; the MCU amplifies and samples it. Three shunts mean all three phase currents are visible, which is what makes true FOC current control possible rather than voltage-mode approximation. Without this measurement you can ask for a torque; with it you can *regulate* one.

16.4 What it can drive

Input voltage	**3S to 6S** LiPo (roughly 11–25 V)
Peak current	**40 A**, with forced-air cooling
Protection	Overcurrent, overvoltage and thermal, on-board

Two cautions about that 40 A. It is a **peak** figure, and it assumes **forced air** — a fan, or a drone's propwash. Our robot has neither, and it spends much of its life underwater with the board sealed inside potting compound (Module 10), so heat leaves slowly and only by conduction. Treat 40 A as a number describing the silicon, not a budget you may spend.

In practice this is not the binding constraint. The wing motor draws far less than the board can supply, so the limits you will actually meet are the motor's own thermal limit and sensor lag, not the ESC's. The relevant discussion is in Brushless motors and Module 4.

16.5 Why there is a daughterboard

The small board at the end is a complete **ST-LINK/V2-1** programmer and debug probe. It is separated from the power board by a line of perforations and is meant to be snapped off.

That design makes sense for ST's intended user: develop with the programmer attached, then break it away so the flight-ready ESC is smaller and lighter, and reuse the same programmer on the next board. It carries two things:

- **SWD** — the debug and programming interface, used to flash the MCU
- **A virtual COM port** — a USB serial bridge onto one of the MCU's UARTs

> ! Do not snap it off
>
> Once separated, reprogramming needs an external programmer wired to the SWD pads by hand. We keep it attached for the whole course. This is also why the board is larger than a hobby ESC of equivalent power — roughly half of what you are holding is the programmer.

The virtual COM port is where Module 3 runs into trouble. Out of the box it is wired to the MCU's **USART2**, on pins that the board also uses for the hall-sensor connector. Those same pins are the SPI3 bus we need for the AS5047P encoder, and an encoder is not optional for FOC. So the pins go to the encoder, USART2 stops being reachable over USB, and serial has to be re-routed — either onto USART1 by rework, or off-board entirely to the Seeeduino. Flashing is unaffected throughout, because SWD runs on different pins.

16.6 What we do not use

- **CAN transceiver.** Present and functional; our robot uses BLE from the flight controller instead.
- **Potentiometer input.** An analog throttle knob for bench demonstrations.
- **Hall-sensor connector (J8).** Intended for the three digital hall sensors built into many BLDC motors. Ours has none, and hall sensors would be too coarse anyway — six positions per electrical revolution, against the AS5047P's continuous absolute angle. The connector gets repurposed for serial.

Sources: ST B-G431B-ESC1 product page, data brief.

17. How SimpleFOC works

The firmware in FAAV-G431-ESC is a SimpleFOC application. This page is what you need to read that firmware and change it with confidence: what the library computes, in what order, and where your settings enter. It is background for Module 3 and Module 4, not a procedure.

17.1 The problem it solves

A brushless motor has three windings and no brushes, so nothing decides on its own which winding should be energised. Something has to look at where the rotor is and energise the windings to put the stator's magnetic field about **90° ahead** of the rotor's magnets, the orientation that produces the most torque per amp. Do that continuously and the motor behaves like a brushed DC motor: torque proportional to current, no commutator to wear out. That is **Field-Oriented Control**, and it is why Module 2's $\tau = k_T I$ is usable at all.

The awkward part is that "90° ahead" is a statement about a *rotating* frame, while the three phase currents live in a *stationary* one. FOC is mostly the bookkeeping that moves between the two.

17.2 Three objects, and what links them

The SimpleFOC architecture is built around three objects, each wrapping one piece of hardware:

Object	Wraps	Our hardware
`MagneticSensorSPI`	The angle sensor	AS5047P on SPI3
`BLDCDriver6PWM`	The inverter	Six MOSFETs on the G431
`BLDCMotor`	The control maths	—

`BLDCMotor` owns the algorithm and is told about the other two with `linkSensor()` and `linkDriver()`. Nothing else connects them, which is why a missing `link` call produces a motor that initialises cleanly and then does nothing sensible.

17.3 The two loops

Every iteration runs **two nested controllers**, and keeping them straight is most of understanding the library:

- `motor.loopFOC()` — the **inner** loop. Reads the angle, works out where the field should point, and sets the PWM duty cycles. It runs as fast as you can call it (above 10 kHz), and its rate is the loop frequency you read back with the commander's `F` command.
- `motor.move(target)` — the **outer** loop. Turns your setpoint (a position, a speed, or a torque) into the q-axis demand the inner loop chases.

The inner loop is where speed matters; the outer loop is where tuning matters.

> ⚠ Both must be called every iteration
>
> `loopFOC()` without `move()` holds whatever demand it last had. `move()` without `loopFOC()` updates a number nothing acts on. Anything blocking in `loop()` - a `delay()`, a slow `print` - drops the inner-loop rate and shows up as a motor that runs rough at speed.

17.4 What the inner loop actually computes

Distilled from the library, with the bookkeeping removed:

```
void loopFOC() {
  sensor.update();

  // 1. Mechanical angle -> electrical angle.
  //    A motor with p pole pairs turns through p electrical revolutions
  //    for every mechanical one. zero_electric_angle comes from initFOC().
  float angle_el = normalizeAngle(sensor.getAngle() * pole_pairs
                                  - zero_electric_angle);

  switch (torque_controller) {

    case TorqueControlType::voltage:
      // No current measurement. Ask for a voltage and hope; cheap and
      // adequate at low speed. This is where you start.
      Uq = target_voltage_q;
      Ud = 0;
      break;

    case TorqueControlType::foc_current:
      // 2. Measure two phase currents; the third follows from ia+ib+ic = 0.
      PhaseCurrent_s c = current_sense.getPhaseCurrents();

      // 3. Clarke (abc -> alpha/beta) then Park (alpha/beta -> d/q),
      //    using angle_el. The output is two DC values, not sinusoids.
      DQCurrent_s i = current_sense.getFOCCurrents(angle_el);

      // 4. Two independent PI controllers on those DC values.
      //    q is torque-producing; d is pure flux and is driven to zero
      //    because it costs current and produces nothing.
      Uq = PID_current_q(target_current_q - i.q);
      Ud = PID_current_d(0.0f - i.d);
      break;
  }

  setPhaseVoltage(Uq, Ud, angle_el);
}
```

The Park transform is the trick worth internalising. In the stationary frame the phase currents are three sinusoids and there is nothing steady to control. Rotating the frame with the rotor turns them into **two constants**, i_d and i_q, and a constant is something an ordinary PI controller can hold. Then you rotate back:

```
void setPhaseVoltage(float Uq, float Ud, float angle_el) {
  // Inverse Park: back to the stationary frame
  float Ualpha = Ud * cos(angle_el) - Uq * sin(angle_el);
  float Ubeta  = Ud * sin(angle_el) + Uq * cos(angle_el);

  // Inverse Clarke: two axes back to three phases
  float Ua = Ualpha;
  float Ub = -0.5f * Ualpha + _SQRT3_2 * Ubeta;
  float Uc = -0.5f * Ualpha - _SQRT3_2 * Ubeta;

  // Shift to sit around mid-rail, since the inverter cannot output
  // a negative voltage, then hand duty cycles to the hardware.
  driver.setPwm(Ua + Udc/2, Ub + Udc/2, Uc + Udc/2);
}
```

Setting $U_d = 0$ and driving only U_q is exactly "put the field 90° ahead", expressed in coordinates. Everything above is the machinery for saying it in terms the three phases understand.

17.5 What the outer loop computes

`move()` is a cascade, and which stages run depends on `motor.controller`:

```
void move(float target) {
  switch (controller) {
    case MotionControlType::angle:
      // position -> velocity -> current, all three stages
      shaft_velocity_sp = P_angle(target - shaft_angle);
      target_current_q  = PID_velocity(shaft_velocity_sp - shaft_velocity);
      break;

    case MotionControlType::velocity:
      target_current_q  = PID_velocity(target - shaft_velocity);
      break;

    case MotionControlType::torque:
      target_current_q  = target;   // straight through
      break;
  }
}
```

This is why the commander's `T` means something different in each mode — it is the input to whichever stage is outermost. It is also why tuning proceeds inside-out in Module 4: the velocity PI has to be right before the position P above it can be.

17.6 Alignment, and why the motor twitches at power-on

`motor.initFOC()` performs the one calibration FOC cannot do without. The sensor reports *some* absolute angle, but nothing tells it how that number relates to the motor's magnetic poles - that depends on how the magnet was glued on and how the phase wires happened to be soldered. So `initFOC()` drives a known field, watches which way the rotor moves and where it settles, and stores two things:

- **`zero_electric_angle`** - the offset between sensor zero and electrical zero
- **sensor direction** - whether the sensor counts up or down relative to the motor's positive rotation

That is the twitch you see at every power-on. If it is skipped or wrong, the field is placed at the wrong angle and the motor draws current while producing little torque, or runs away.

> **i** Why the UVW order does not matter
>
> Module 3 says you can solder the phase wires in any order. Swapping two phases reverses the motor's direction, and `initFOC()` measures direction rather than assuming it - so the calibration simply comes out with the other sign. The cost of getting it "wrong" is a stored constant, not a rework.

17.7 The main ESC code

Setup is configuration; the loop is two calls. Trimmed to the parts that matter:

```
#include <SimpleFOC.h>

BLDCMotor motor = BLDCMotor(7);                 // pole pairs
BLDCDriver6PWM driver = BLDCDriver6PWM(A_PHASE_UH, A_PHASE_UL,
                                       A_PHASE_VH, A_PHASE_VL,
                                       A_PHASE_WH, A_PHASE_WL);
MagneticSensorSPI sensor = MagneticSensorSPI(AS5047_SPI, PA15);

float target = 0;

void setup() {
```

```
  sensor.init();
  motor.linkSensor(&sensor);

  driver.voltage_power_supply = 14.8;
  driver.init();
  motor.linkDriver(&driver);

  motor.foc_modulation = FOCModulationType::SpaceVectorPWM;
  motor.controller     = MotionControlType::velocity;

  motor.PID_velocity.P = 0.2;
  motor.PID_velocity.I = 20;
  motor.LPF_velocity.Tf = 0.01;   // velocity is differentiated, so filtered
  motor.voltage_limit   = 6;      // the safety net -- set it low first

  motor.init();
  motor.initFOC();                // alignment happens here
}

void loop() {
  motor.loopFOC();
  motor.move(target);
}
```

The pole-pair count must match the motor or every angle in the chain is wrong by a fixed ratio, and the symptom is a motor that vibrates instead of turning. `voltage_limit` is the one setting to get right before the first spin-up: it caps what the inner loop can ask for regardless of what the outer loop demands.

17.8 Where to look next

- SimpleFOC communication docs — the commander interface used all through Module 3
- Commander motor reference — every letter the commander accepts
- The G431 ESC board — what `driver.setPwm()` is actually driving

18. Software

18.1 ESC

Code for the B-G431B-ESC1 motor controller using the SimpleFOC library: FAAV-G431-ESC.
Used in Module 3 and Module 4.

18.2 Flight controller

- **Current** — ESP32, based on FreeRTOS tasks: FAAV-Flight-Controller

Outdated versions, kept for reference:

- Old EPFL code for NRF52: FAAV-Seeeduino
- Old MIT code for NRF52/ESP32: FAAV-AUK

18.3 PCB

- FAAV-PCB-v3 — current board, including the BOM in the Manufacturing/Assembly folder

18.4 External documentation

- SimpleFOC communication
- SimpleFOC commander
- XIAO ESP32S3 getting started

> ! Access
>
> Confirm before the semester that students have read access to these repositories, and pin the branch or tag each module expects. “Latest main” changing under a cohort mid-semester is the most likely way this manual goes stale without anyone noticing.

19. CNC — Stepcraft D660

Used in Module 5 for the carbon frame, the aluminium crank and linkage

19.1 Material-specific notes

Material	Thickness	Notes
Woven carbon	1.5 mm (varies 1.5–1.6)	Body plates, top and bottom identical except chamfers
Aluminium	5 mm	Crank and linkage. Linkage faced down from 5 to 4 mm. Use a 2 mm endmill, flood the part

! MIT manufacturing

Central shop?

20. Design notes

Why the robot is built the way it is and latest changes

20.1 Log of 2026 changes

- Front of gears: exactly 1 mm spacing for washer. Back of gears (towards tail) has builtin 3D-printed spacers that press against inner bearing. Printing them will not use support
- All 3D printed cross fixing is now done with M2 square half nuts (stainless). Takes less space and less work than heat inserts. 3D printed plates are all 4 mm thick.
- Tail tube is now 5/3 round instead of square. The bracket (tail rigidifier) adapted in consequence.
- Left gear extended and wraps around the linkage for better support.
- Crank-link shaft is now 10.5 mm to have enough space to fit a circlip.
- Linkage bearings are now 4x10x4 on input and 3x8x4 on output. MAX static loading of 130 N.
- ESC box is now screwed against right bearing holder
- Front dome mounts to front plate
- Micro-controller box: to be printed transparent, no more window. Square nut assembly. USB-C port sits closer to edge of part, should give a better connection to program.
- Gear shafts bearings changed to 3x7x3 flanged, with the flange now inserting into part.
- All parts relabeled

20.2 Gearbox corrosion

By default the gearbox on the FAAV4 is not waterproof at all, and it is normal for it to fill completely with water once submerged. This is considered acceptable: over more than a year of repeated use in water, including in lakes, a gearbox was opened and showed no sign of corrosion.

Proper lubrication: a mix of **CorrosionX and white lithium grease** - help with corrosion problems. The practical procedure is in Module 10.

21. Changelog

Corrections and additions published during the semester, newest first.

If you are working from a printed copy, check this page before each module. Changes that affect a step you may already have completed are marked in **bold**.

> For maintainers
>
> One row per change: date, page, what changed, and whether teams need to redo anything. Do not edit a step silently — a dated entry is what lets a student at the bench trust the rest of the page.

21.1 fall-2026

Date	Page	Change	Action needed
—	—	Manual published for the Fall 2026 cohort, derived from *FAAV Manufacturing Guide* v4.0	—