FAAV Build Manual

MIT AURA Lab — 2026 v4.0

MIT AURA Lab

Contents

1 FAAV Build Manual . . . 7
1.1 How this manual is organised . . . 7
1.2 Semester map . . . 7
1.3 Conventions . . . 8
1.4 Robot architecture in one paragraph . . . 9
1.5 Versioning . . . 9

I Build modules

2 Module 1 — Orientation . . . 13
2.1 The robot . . . 13
2.2 Electronic architecture . . . 13

3 Module 2 — Motor and transmission shaft . . . 15
3.1 What you build today . . . 15
3.2 Before you arrive . . . 15
3.3 The motor — AS2303 KV1500 . . . 15
3.4 Motor shaft . . . 17
3.5 Sensor magnet . . . 18
3.6 Mounting the motor . . . 18
3.7 Solder the motor wires to the Electronic Speed Controller . . . 19

4 Module 3 — Motor driver, sensor and serial . . . 21
4.1 What you build today . . . 21
4.2 Before you arrive . . . 22
4.3 Electrical connections . . . 22
4.4 Electronic Speed Controller . . . 23
4.5 Flight controller microcontroller . . . 24
4.6 Encoder (or Angular sensor) . . . 25
4.7 How to program the ESC . . . 27
4.8 Firmware . . . 27

5 Module 4 — Closed-loop control and tuning . . . 29
5.1 What you build today . . . 29
5.2 Before you arrive . . . 29
5.3 Reduction . . . 29
5.4 Commanding and monitoring . . . 30
5.5 Task sequence . . . 31

5.6 Why low speed is the hard part . . . 31
5.7 Going beyond 600 rad/s . . . 32

6 Module 5 — Frame, crank, linkage and gears . . . 33
6.1 What you build today . . . 33
6.2 Before you arrive . . . 33
6.3 Main body . . . 33
6.4 Crank and linkage . . . 34

7 Module 6 — Flapping simulation (Ptera) . . . 37
7.1 What you do today . . . 37
7.2 Before you arrive . . . 37
7.3 Deliverable . . . 37

8 Module 7 — Wing fabrication . . . 39
8.1 What you build today . . . 39
8.2 Before you arrive . . . 39
8.3 Wing roots . . . 39
8.4 Building the wing . . . 39
8.5 Assembly . . . 40

9 Module 8 — Tail and housing . . . 43
9.1 What you build today . . . 43
9.2 Before you arrive . . . 43
9.3 Tail . . . 43
9.4 Trailing edge holder . . . 44
9.5 Housing . . . 44

10 Module 9 — Flight controller, PCB and dry testing . . . 45
10.1 What you build today . . . 45
10.2 Before you arrive . . . 45
10.3 Electronic architecture . . . 45
10.4 Flight controller . . . 45
10.5 Assembling the PCB . . . 46
10.6 Taking the PCB into operation . . . 46
10.7 Connectors . . . 47
10.8 Dry testing . . . 48

11 Module 10 — Waterproofing . . . 49
11.1 What you build today . . . 49
11.2 Before you arrive . . . 49
11.3 Flight controller waterproofing . . . 49
11.4 ESC waterproofing . . . 50
11.5 Battery waterproofing . . . 51

11.6 Battery connector waterproofing . . . 51
11.7 Gearbox . . . 51

12 Module 11 — Wet testing . . . 53
12.1 What you do today . . . 53
12.2 Before you arrive . . . 53
12.3 Pre-immersion checks . . . 53
12.4 The tank . . . 53
12.5 What to log . . . 54
12.6 Trim . . . 55
12.7 Cost of transport . . . 55

13 Module 12 — Competition . . . 57
13.1 What happens today . . . 57
13.2 The competition rules . . . 57
13.3 Before you arrive . . . 57
13.4 Feedback . . . 57

II Reference

14 Parts list . . . 61

15 Brushless motors . . . 65
15.1 Start with the brushed DC motor . . . 65
15.2 What changes with a brushless motor . . . 66
15.3 Thermal limits . . . 67
15.4 Measured behaviour of the AS2303 . . . 68
15.5 Why an outrunner . . . 68

16 The G431 ESC board . . . 71
16.1 What it is . . . 71
16.2 The parts that matter . . . 71
16.3 How the three phases are generated . . . 72
16.4 What it can drive . . . 73
16.5 Why there is a daughterboard . . . 73
16.6 What we do not use . . . 74

17 How SimpleFOC works . . . 75
17.1 The problem it solves . . . 75
17.2 Three objects, and what links them . . . 75
17.3 The two loops . . . 76
17.4 What the inner loop actually computes . . . 76
17.5 What the outer loop computes . . . 78
17.6 Alignment, and why the motor twitches at power-on . . . 78

17.7 The main ESC code . . . 79
17.8 Where to look next . . . 80

18 Software . . . 81
18.1 ESC . . . 81
18.2 Flight controller . . . 81
18.3 PCB . . . 81
18.4 External documentation . . . 81

19 PCB revisions . . . 83
19.1 v3.0 overview . . . 83
19.2 v1.0 — EPFL . . . 83
19.3 v2.0 — MIT . . . 86

20 CNC — Stepcraft D660 . . . 89
20.1 Full guide . . . 89
20.2 Cutpath generation . . . 89
20.3 Material-specific notes . . . 90

21 Design notes . . . 91
21.1 Why an FOC ESC . . . 91
21.2 Speed ceiling and sensor lag . . . 91
21.3 Gearbox corrosion . . . 91
21.4 Housing material tradeoff . . . 92

22 Changelog . . . 93
22.1 fall-2026 . . . 93

3.1 Stock bell . . . 20
3.2 Bring diameter down to 6 mm . . . 20
3.3 Bring the length down to 2.5 mm . . . 20
5.1 Motor shaft . . . 30
5.2 Faulhaber gearbox . . . 30
6.1 Transmission assembled . . . 35
6.2 Transmission, second view . . . 35
8.1 Strips laid out and bonded over the template . . . 40
8.2 Trimming the membrane to the outline . . . 40
10.1 Tape blank PCBs around the PCB to assemble . . . 46
10.2 Align the stencil on top and tape it, making sure it sits flat . . . 46
10.3 Wipe down solder paste with a blade in one firm pass . . . 46
10.4 Place the assembled PCB on the hot plate . . . 46
19.1 v1.0 . . . 83
19.2 v2.0 . . . 83
19.3 v3.0 . . . 83

1. FAAV Build Manual

MIT AURA Lab — 2026 v4.0

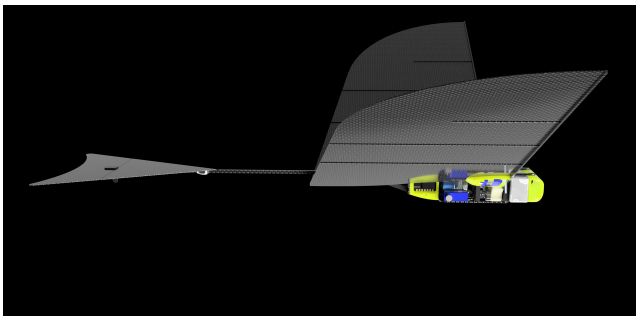


Figure 1.1: The FAAV3.2

Over the semester you build a **flapping aerial-aquatic vehicle**: a robot that with the right design can fly, land on water, swim by flapping the same wings, and takes off again. The aim of this project is to demonstrate swimming behavior. This manual is the build side of the course. It is sequenced to the weekly modules, and each page covers exactly what you do in that module.

1.1 - How this manual is organised

Build modules are cumulative and in order. Each one opens with what you are building that day.

Reference holds the material you consult rather than follow: the parts list, the firmware repositories, the PCB revisions, the CNC guide, and the design notes explaining why the robot is the way it is.

1.2 - Semester map

Module	Week	Build	Paired lecture
1	Sep 9	Orientation, teams, the robot	Intro to robotic locomotion
2	Sep 14	Motor and transmission shaft	Reaction forces in fluids

Module	Week	Build	Paired lecture
3	Sep 21	Motor driver, sensor, serial	Bird-scale flapping design
4	Sep 28	Closed-loop control and tuning	Swimming robots I
5	Oct 5	Frame, crank, linkage, gears	Undulatory locomotion
—	Oct 12	*No module*	—
6	Oct 19	Flapping simulation (Ptera)	Insect-scale flapping
7	Oct 26	Wing fabrication	Swimming robots II
8	Nov 2	Tail and housing	Multimodal locomotion
9	Nov 9	Flight controller, PCB, dry testing	The future of actuation
10	Nov 16	Waterproofing	Multirotors
11	Nov 23	Wet testing	Fixed-wing flyers
12	Nov 30	Competition	Pair presentations

1.3 - Conventions

> ⚠ Warning
>
> An operation whose likely failure mode destroys a part or injures you. Read it twice before acting.

> ℹ Checkpoint
>
> Do not proceed past this without having completed all the tasks listed.

> **Why**
>
> Design rationale.

1.4 - Robot architecture in one paragraph

One 4S battery (16.8 V max) feeds a custom PCB that steps VBAT down to 5 V to power the flight controller, which in turn generates a 3v3 rail for the sensors on that PCB. Battery power passes through a shunt for current sensing, then out to the ESC. The flight controller commands the ESC over serial. The ESC drives a brushless motor through a 23.04:1 gearbox, and a crank–linkage converts that rotation into wing flapping.

1.5 - Versioning

This is version **fall-2026**. Corrections published during the semester are dated in the Changelog. If a step here contradicts what a TA tells you at the bench, the TA is right and this page is stale — report it so the next team does not lose time to it.

I Build modules

2 Module 1 — Orientation 13

3 Module 2 — Motor and transmission shaft 15

4 Module 3 — Motor driver, sensor and serial 21

5 Module 4 — Closed-loop control and tuning 29

6 Module 5 — Frame, crank, linkage and gears 33

7 Module 6 — Flapping simulation (Ptera) 37

8 Module 7 — Wing fabrication 39

9 Module 8 — Tail and housing 43

10 Module 9 — Flight controller, PCB and dry testing 45

11 Module 10 — Waterproofing 49

12 Module 11 — Wet testing 53

13 Module 12 — Competition 57

2. Module 1 — Orientation

Week of Sep 9 · Paired lecture: *Intro to robotic locomotion* · Teams formed today

2.1 - The robot

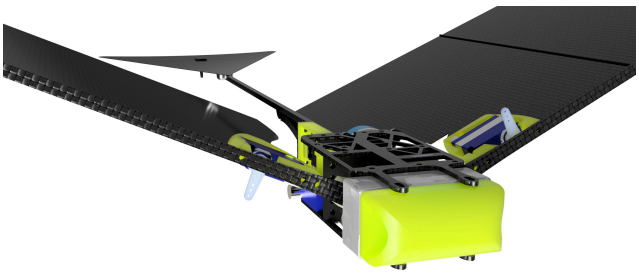


Figure 2.1: The FAAV3.2

We will develop, plan and optimize a vehicle with powerful custom actuation for flapping locomotion. The build divides into four subsystems, and the modules follow that order:

1. **Transmission** — motor, custom shaft, gearbox, crank and linkage (Modules 2, 5)
2. **Electronics** — ESC, angular sensor, flight controller, custom PCB (Modules 3, 4, 9)
3. **Aero/hydro surfaces** — wings, tail (Modules 6–8)
4. **Waterproofing and testing** — potting, immersion, tuning (Modules 10–12)

2.2 - Electronic architecture

One 4S battery (max 16.8 V) powers the motor electronic speed controller (ESC). The motor controller generates a 3.3V rail for the encoder and a 5V rail for the flight controller. The flight controller sends commands to the ESC over serial.

! To be completed by the instructor

Shop safety requirements, machine access and booking procedure, team size and formation rules, and where the parts crib is. These are institution-specific and are not carried over from the manufacturing guide.

> **i** Checkpoint
>
> Kit checked against the parts list, and every member has completed the required training.

3. Module 2 — Motor and transmission shaft

Week of Sep 14 · Paired lecture: *Reaction forces in fluids*

3.1 - What you build today

A brushless motor with a custom shaft pressed into its rotor bell, with the sun gear and the sensor magnet installed, bolted to its bracket and mounted on the motor plate. The motor is soldered to the electronic speed controller. The gearbox itself goes on in Module 4.

3.2 - Before you arrive

Parts	AS2303 KV1500 motor with pre-machined bell, custom motor shaft, sun gear from the Faulhaber 23.04:1 gearbox, 6 × 2.5 mm diametric magnet, 3D-printed magnet bracket, vertical nylon motor bracket, bottom fuselage plate, mounting screws
Tools	Circlip pliers, manual arbor press, superglue, hex drivers
Read	This page, and the *Motor shaft* section below in full before touching the motor. Brushless motors for the background

3.3 - The motor — AS2303 KV1500

The AS2303 is a **brushless outrunner**. Read Brushless motors first.



We use the AS2303 KV1500 motor throughout the course. Its propeller horn **cannot** be separated from the bell, it has to be machined off in a lathe. That work, and the custom shaft, are prepared for you before the session.

3.3.1 - What the KV rating means

KV is the motor's *velocity constant*, quoted in rpm per volt. It says how fast the rotor spins per volt applied, **with no load on the shaft**:

$$\omega_0 = k_V \, U \tag{3.1}$$

The constant is not a marketing number — it falls out of the motor's physics. As the rotor turns, its magnets sweep past the windings and induce a voltage that opposes the supply (the *back-EMF*):

$$U_{\text{emf}} = \frac{\omega}{k_V} \tag{3.2}$$

The supply voltage splits between this back-EMF and the ohmic drop across the winding resistance R, so $U = U_{\text{emf}} + R\,I$ and the speed under load becomes

$$\omega = k_V (U - R\,I) \tag{3.3}$$

which is why Equation (3.1) only holds at $I \approx 0$. Draw current and the motor slows down.

The same constant fixes the torque. Electrical power in equals mechanical power out, $U_{\text{emf}} I = \tau \omega$, and substituting Equation (3.2) gives $\tau = I / k_V$ in SI units. Converting k_V from rpm/V to rad/s/V:

$$k_T = \frac{60}{2\pi\, k_V} \approx \frac{9.55}{k_V} \qquad \text{with} \qquad \tau = k_T \, I \tag{3.4}$$

with k_T in N·m/A when k_V is in rpm/V. **Torque and speed constants are inverses of each other.** A high-KV motor spins fast but gives little torque per amp; a low-KV motor of the same size and mass does the opposite. You cannot buy both — you choose where on that trade-off to sit, and then recover the missing torque with a reduction.

3.3.2 - What this means for our robot

With $k_V = 1500$ rpm/V and a 4S LiPo at its 14.8 V nominal voltage:

$$\omega_0 = 1500 \times 14.8 = 22\,200 \text{ rpm} \qquad k_T = \frac{9.55}{1500} = 6.4 \text{ mN·m/A} \tag{3.5}$$

6.4 mN·m/A is very little torque, too little to drive the wings directly, which is exactly why the 23.04:1 Faulhaber gearbox is there. It multiplies torque by 23.04 and divides speed by the same factor. One revolution of the gearbox output is one full flapping cycle, so

$$f_{\text{flap}} = \frac{\omega}{60\,r} = \frac{22\,200}{60 \times 23.04} = 16.1 \text{ Hz} \tag{3.6}$$

at no load. Under real aerodynamic and hydrodynamic loading the drive tops out near 15 200 rpm, i.e. about **11 Hz** of flapping, the figure you will see again in Module 4.

3.4 - Motor shaft

To pair the motor with the gearbox, the stock shaft of the brushless motor is replaced by a custom one. You will be handed a **machined bell** and a **finished shaft** — both are prepared before the session. What is left to you is the disassembly and the press fit, which is still a delicate operation: the motor's structure is mostly aluminium and quite thin, for weight savings.

1. Remove the circlip on the shaft with the special pliers. **Don't lose it, nor the brass ring.**
2. Separate the rotor from the stator delicately, by hand.
3. Press the stock shaft out of the rotor bell.

> ⚠ Never load the bell radially
>
> Press the shaft out very carefully, making sure to never apply forces radially on the bell. Use the manual press with appropriate support below the bell to avoid deforming the dome shape. **Do not squeeze the bell with a vice, or even by hand.**

4. Press the sun gear onto the new shaft.

> ⚠ Sun gear first — this order cannot be undone
>
> The sun gear goes on **while the shaft is still free**. Once the shaft is pressed into the bell you can no longer support the shaft properly to press the gear on.

5. Press the new shaft into the bell, making sure not to press on the dome-shaped part of the bell without appropriate support underneath. It is a **tight fit** on the bell and a **clearance fit** through the bearings.

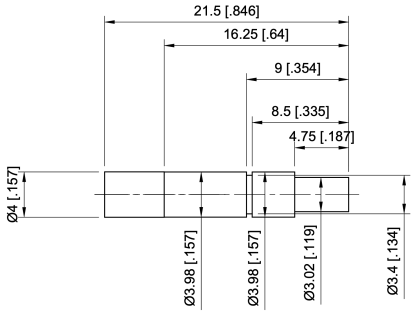


Figure 3.1: Motor shaft dimensions

3.5 - Sensor magnet

The AS5047P encoder you wire up in Module 3 does not touch the shaft. It reads the direction of the magnetic field from a small magnet rotating in front of it, so the magnet has to go on the motor.

Use a **6 × 2.5 mm diametrically magnetised disc magnet**. *Diametrically* magnetised is the part that matters: the poles are across the diameter, not through the thickness, so the field seen by the sensor sweeps through a full rotation as the shaft turns. An ordinary axially magnetised disc of identical size presents the same pole to the sensor all the way round and gives no angle at all.

1. Drop the magnet into its recess in the 3D-printed bracket. It should sit flat, fully seated, with no rocking.
2. **Centre it on the axis of rotation.** The bracket locates it, but check. Keep the magnet concentric with the shaft to within **0.5 mm**.
3. Bond it with **a single drop of superglue**. One drop is enough.
4. Turn the assembly through a full revolution by hand and watch the magnet. Any visible wobble means it is off-centre or not seated.

> ⚠ Off-centre magnets are hard to diagnose later
>
> An eccentric magnet may still produces a perfectly plausible angle reading at times.

3.6 - Mounting the motor

With the shaft and the magnet done, the motor goes onto the robot. This happens in two stages: motor to bracket, then bracket to plate.

1. Fix the motor to the vertical **3D-printed nylon bracket** using **four screws M2x5 mm** through the mounting holes in the motor base. Don't over tighten. Check that the rotor still turns freely by hand. Nylon is compliant, and overtightening can pull the bracket

out of flat enough to preload the bearings. A motor that spun freely on the bench and feels stiff once bolted down is telling you to back the screws off and retighten more gently.

2. Mount the bracket to the **bottom fuselage plate**. Before tightening, check the orientation: the shaft and sun gear must point towards the front of the robot.

3.7 - Solder the motor wires to the Electronic Speed Controller

Since the pads are large, make sure to use enough heat / large tip on the soldering iron. The order of the cables UVW do not matter.

> Watch this before you pick up the iron
>
> Soldering Crash Course: Basic Techniques, Tips and Advice

> Checkpoint
>
> Shaft seated with the sun gear on it, the rotor spinning freely by hand with no wobble, the magnet bonded concentric to within 0.5 mm, and the motor bolted to its bracket and mounted on the plate — still turning freely once bolted down.

! To be prepared by the instructor before the session

Both the bells and the shafts must be prepared ahead of time, one set per student. Neither fits in the session: the lathe work is on thin-walled aluminium that is easy to ruin, and there is not enough machine time for the whole cohort.

Machine the bells. Clamp the bell in the lathe using its stock shaft, then take the propeller horn off by bringing the diameter down to **6 mm** and the length to **2.5 mm**.

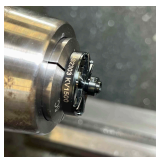


Figure 3.1: Stock bell

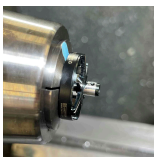


Figure 3.2: Bring diameter down to 6 mm

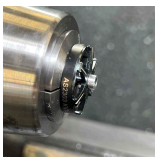


Figure 3.3: Bring the length down to 2.5 mm

Turn the shafts from 4 mm steel rod to the dimensions in Figure 3.1 — clearance fit through the bearings, tight fit on the bell. The 21.5 mm total assumes the motor and gearbox are separated by a **5.5 mm-thick wall**; for a 4 mm wall, shorten the 8.5 mm segment to 7 mm, giving 20 mm overall.

Prepare spares of both — a deformed bell cannot be recovered.

4. Module 3 — Motor driver, sensor and serial

Week of Sep 21 · Paired lecture: *Bird-scale flapping design*

4.1 - What you build today

Let's drive our motor! We aim to get a flashed G431 ESC talking to your laptop via a microcontroller, with the angular sensor wired on SPI and the motor spinning under commander control. Lots of soldering.

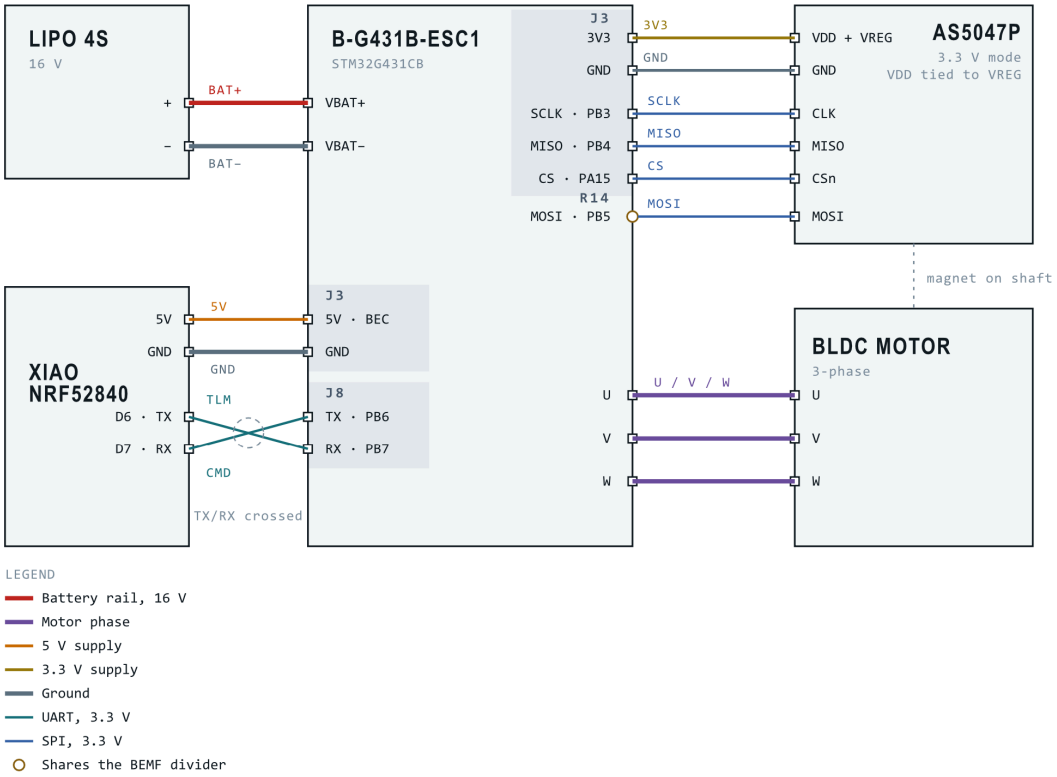


Figure 4.1: How the battery, ESC, encoder, motor and microcontroller connect. The XIAO nRF52840 shown here is the separate-microcontroller option for serial described below — note that TX and RX are crossed. SPI3 and UART pin assignments match the rework in Table 4.1 and *ST-Link serial*.

Work through the module with this diagram open: every step below either wires one of these links or configures it in firmware.

4.2 - Before you arrive

Parts needed	1 × 4431B-ESC1 board, AS5047P encoder, encoder mount, cables
Tools	Soldering iron, tweezers, micro-USB cable, power source
Read	This page, plus Design notes on why we use an FOC ESC

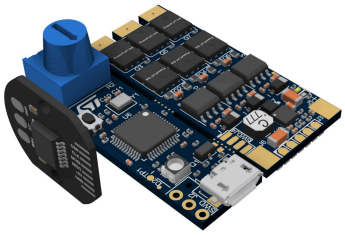


Figure 4.2: ESC running SimpleFOC and the angular sensor. The six MOSFETs are the large flat packages, arranged as three half-bridges — one per motor phase, each with a high-side and a low-side switch. The three copper tabs on the left are the U, V and W outputs you solder the motor to below.

4.3 - Electrical connections

Figure 4.3 is the same set of connections as Figure 4.1, drawn on the actual boards rather than as blocks. Use Figure 4.1 when you need the pin names, and this one when you need to find the pad.

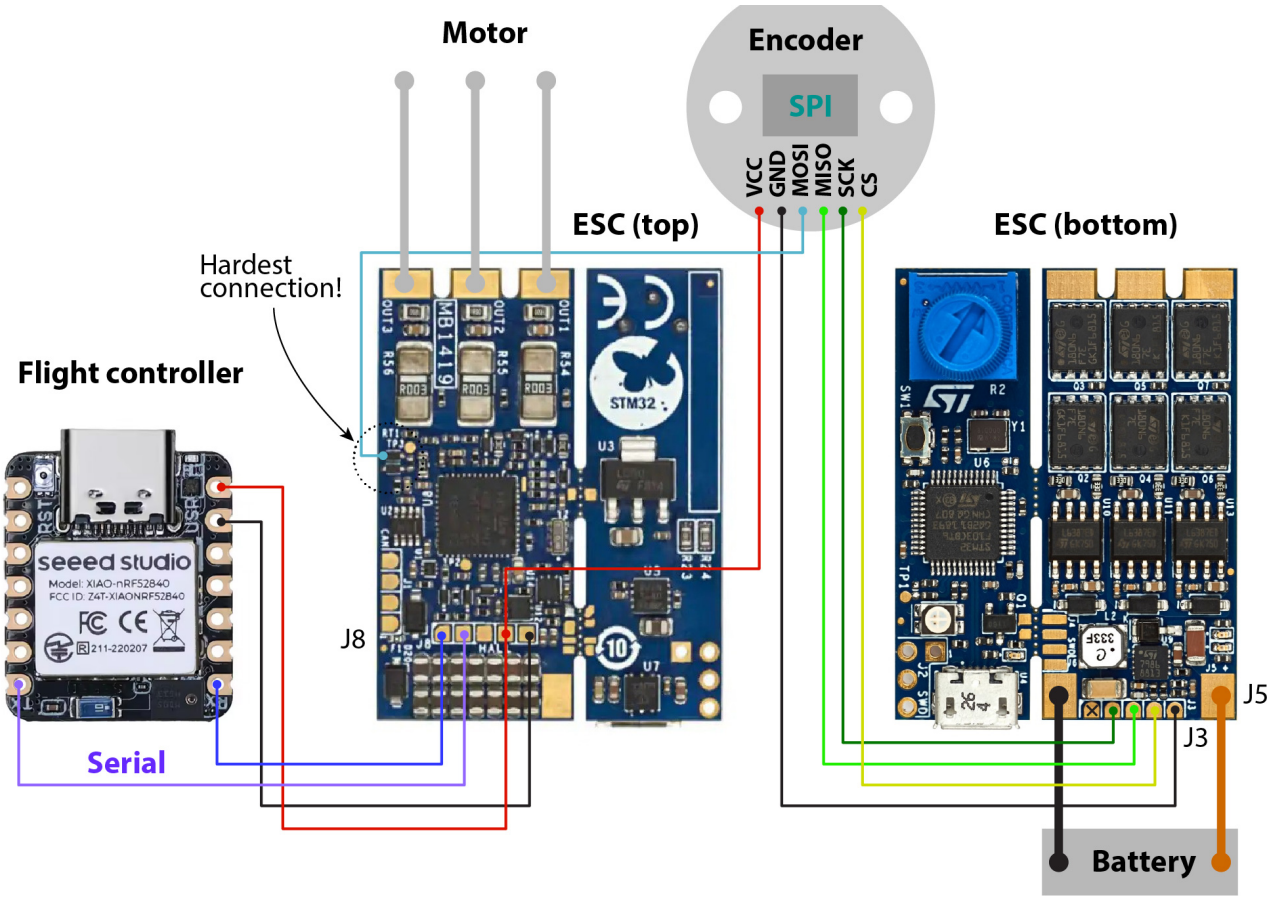


Figure 4.3: The complete electrical system. The 4S battery enters the ESC at **J5**, the three phase wires leave from the large **OUT1–3** tabs to the motor, the AS5047P encoder returns angle over SPI, and the XIAO nRF52840 talks to the ESC over serial. Note that the encoder and the flight controller share the same supply. The **MOSI** tap on **R14**, marked *Hardest connection!*, is the one to leave until last - see Table 4.1.

4.4 - Electronic Speed Controller

The **B-G431B-ESC1** is ST's reference three-phase motor driver: a complete ESC on one small board, sold as an evaluation kit. It contains: - **An STM32G431 microcontroller.** A 170 MHz Cortex-M4 with hardware floating point. Motor control recomputes the field orientation every control loop. This MCU is the reason we can. - **A three-phase inverter.** Six power MOSFETs drive the three motor phases. - **A detachable ST-Link programmer (the daughterboard).** The small daughter board is how we program the MCU over USB, and it also carries a serial port back to your laptop. When snapped-off, the MCU cannot be reprogramed without physically resoldering it.

It also brings out many input/outputs (for example**J8**), a CAN transceiver and a potentiometer input, none of which we use as intended. In this build J8 gets repurposed for serial, and the encoder arrives on SPI instead. Both of those reworks are below. The board is rated well above what the wing motor draws (40A), so current is not the constraint here. Get familiar with every component on the board, how six MOSFETs turn one DC rail into three rotating

phases, what current it can actually deliver, and why the programmer is a separate snap-off board under The G431 ESC board.

4.5 - Flight controller microcontroller

We will use a **Seeeduino XIAO nRF52840 Sense** to send commands to the ESC and record information from the ESC. Why?

- **It is small and light.** 21 × 17.5 mm and **2.4 g**. On a robot that has to move, every gram saved matters.
- **It has wireless communication out of the box.** The nRF52840 is a Bluetooth Low Energy chip and a microcontroller. Once the robot is sealed in Module 10 BLE becomes the only way commands to interact with the robot during operation, which is exactly how you retrieve a run in Module 11.
- **It has somewhere to put the data.** 256 kB of RAM and 1 MB of flash on the chip itself are the two logging destinations used during wet testing. No SD card, no extra memory chip, nothing else to waterproof.
- **Onboard IMU** to log the attitude of the robot without additional components.
- **It costs 20$**. In case a failure, it can be replaced.

It programs from the Arduino IDE like any other Arduino board, but we highly recommend using Visual Studio Code + PlatformIO. The reason we use PlatformIO is that it handles multiple file projects much betters, lets you use git versioning and handles library better. You also you a more peformant editor.



Figure 4.4: The Seeeduino XIAO nRF52840. **TX** and **RX** are the two pads at the bottom corners — those are the ones you solder to, and they cross over to the ESC's RX and TX respectively. The board is 21 × 17.5 mm, which is why it can ride on the robot at all.

1. Solder the Seeeduino and the ESC's **Serial1**: TX, RX and **GND** lines. In Serial communication, TX and RX are **crossed**, each board's transmit line goes to the other's receive line, as drawn in the wiring diagram in Module 3. GND is not optional: without a shared reference the two boards have no agreed voltage for what counts as a high or low bit. To do this step, you will need to desolder the existing Serial1 TX RX lines to the daughterboard.
2. Install the Seeeduino in its 3D-printed bracket and into the robot.

3. Load the barebone Arduino sketch onto the Seeeduino, see Software for the repository. First, you need Visual Studio Code and the plugin PlatformIO installed.
4. Modify the sketch to turn the LED on the **ESC** on and off via commander instructions. This confirms three things at once:
   a. You can flash the Seeeduino.
   b. You can communicate with the Seeeduino over serial.
   c. The Seeeduino can communicate both ways over serial.

4.6 - Encoder (or Angular sensor)

4.6.1 - First, why does the motor need an encoder?

Field-Oriented Control works by holding the stator's magnetic field roughly 90° ahead of the rotor's magnets, which is the orientation that produces the most torque per amp. To place the field there, the controller has to know where the rotor is **right now**.

Ordinary drone ESCs infer this from back-EMF, i.e the voltage the spinning rotor induces in the phase that is not currently being driven (Equation (3.2) in Module 2). That voltage is proportional to speed, so as the motor slows the signal sinks into the noise and the estimate falls apart. This causes *loss of synchronisation at low speed* described in Design notes. The AS5047P removes the guess. It measures the field of the magnet bonded to the shaft end and reports the **absolute** angle — valid at standstill just as much as at 15 000 rpm, and correct immediately at power-on with no homing move.

4.6.2 - What SPI is, and why we run it at 10 MHz

We will use an AS5047P encoder. The AS5047P reports angle over SPI, a four-wire synchronous bus: the controller drives the clock (**SCLK**), data goes out on **MOSI** and comes back on **MISO**, and **CS** selects the chip. Transfer speed is limited only by how fast the two ends can shift bits. We use SPI because it offers **10 MHz** communication. The reason speed matters is that the angle has to be re-read every single control loop, and a stale angle is bad: the controller ends up placing the stator field where the rotor **was**, not where it is. That error shows up as wasted current and audible noise. The same 10 MHz clock is why the wiring has to stay short, see below.

4.6.3 - Wire it to the board

There is no SPI link exposed directly on the ESC board. The solution is to use the **SPI3 bus**, exposed through a few hardware modifications and matching software changes. Figure 4.1 shows the four signals in context, including the MOSI tap on R14.

> ⚠ You lose the micro-USB serial link
>
> Serial2, used by the daughterboard for serial communication will not work anymore as we are using those pins for SPI3 for the encoder instead. Flashing the ESC still works (programming runs over SWD, on different pins) but every command and every value you read back now has to pass through serial1.

The encoder needs power as well as the four bus signals — six wires in total:

Table 4.1: SPI3 connections on the G431. * This connection is on the outward side of the resistor.

	SCLK	MISO	MOSI	CS	5V	GND
MCU GPIO	PB3	PB4	PB5	PA15	—	—
G431B pin	J3	J3	R14*	J3	J8	J3

Note that **3.3 V and GND come from different connectors**. J3 carries the three bus signals and a ground, but its only supply pin is **5 V** from the break-away BEC — too high for the AS5047P. The 3.3 V rail is exposed on **J4**, the SWD header, alongside SWDIO and SWCLK. Take power from there and ground from J3, and check both against Figure 4.5 before soldering.

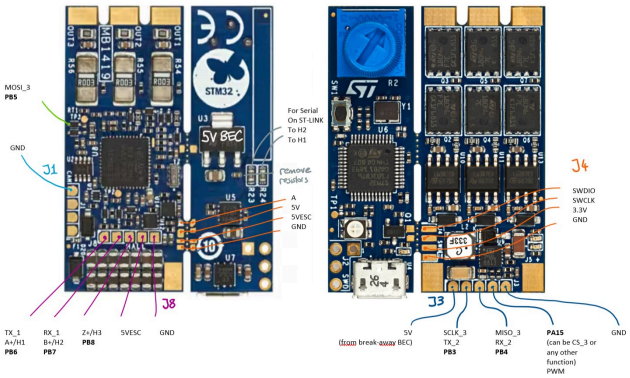


Figure 4.5: GPIOs of the G431B-ESC1 board. J3 carries SCLK, MISO, PA15 and GND; the 3.3 V rail is on the J4 SWD header.

⚠ Keep the SPI cables under 8 cm

Cables between encoder and ESC need to be **less than 8 cm**. At 10 MHz longer runs start corrupting angle readings, and the symptom is a motor that behaves erratically rather than a sensor that obviously fails.

Next, use M2 screws to mount the encoder on the 3D printed bracket that sits around the motor. Check that the distance between sensor and magnet is 0.5 mm, and centered.

4.7 - How to program the ESC

With the encoder and motor connected to the ESC, we can start programing the ESC! Remap the pins in software for SPI use: in `platformio.ini` via `build_flags`, and by overwriting the `WEAK PinMaps` in `pinmap_custom.h`. See commit `18520ac` on GitHub for details.

4.8 - Firmware

The ESC is pre-flashed for you Code for the B-G431B-ESC1 motor controller, using the SimpleFOC library, is in the lab repository: FAAV-G431-ESC. See Software for all repositories.

Before you change anything in there, read How SimpleFOC works. It covers the two nested loops, what the FOC maths does each iteration, why the motor twitches at power-on, and which settings in the sketch matter — enough to read the firmware rather than guess at it.

⚠ Careful when changing control mode

`T` means something different in each mode, position, velocity, or torque. Sending a velocity setpoint while in torque mode will do something you did not intend, with the wings attached. BE VERY CAREFUL ABOUT THIS.

ℹ Checkpoint

Commander responds to `?` over serial at 115200 baud, `L` toggles the onboard LED, the sensor returns a plausible angle through a full manual rotation, and the motor spins under a `T` command.

! To be prepared by the instructor before the session

Pre-flahs Prepare a power source 15V 5A over USB-C.

5. Module 4 — Closed-loop control and tuning

Week of Sep 28 · Paired lecture: *Swimming robots I*

5.1 - What you build today

The gearbox installed with a marker flag on the output, the Seeeduino wired in and commanding the ESC untethered, running continuously, then holding position, then tracking a velocity setpoint with a tuned loop.

5.2 - Before you arrive

Parts	Motor with shaft and sun gear from Module 2, Faulhaber 23.04:1 gearbox, M2.5×10 screws, 3D-printed plates, second vertical bracket, 3× M2.5 and 3× M2 screws, ESC from Module 3, 4x8 mm flanged bearing, Seeeduino XIAO nRF52840, its 3D-printed bracket, 3 wires
Tools	Bench supply with current limit, tachometer or camera, soldering iron
Read	This page in full - the speed limits below explain most of what you will hit

5.3 - Reduction

The motor is connected via a custom shaft to a gearbox with a **23.04:1** reduction by Faulhaber.[1] Both parts are held in place by 3D-printed plates. The output shaft of the gearbox has its own bearing on the inside of the gearbox, and is also supported mid-way on the shaft by a 4×8 mm flanged bearing. This leaves **5 mm of shaft length free** for the crank to be mounted on. A flat on the shaft helps lock the rotation of the M3 screw extending through the crank.

[1] Faulhaber gearhead reduction ratios (accessed 20.02.2024).

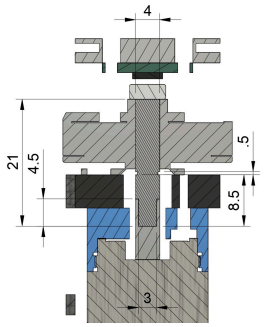


Figure 5.1: Motor shaft



Figure 5.2: Faulhaber gearbox

5.4 - Commanding and monitoring

This is a high-level summary of the SimpleFOC communication docs. Communication with the ESC is over **serial**, via a separate microcontroller board.

Once serial communication is established, you interact with the ESC through the **commander**, a practical interface for setting and getting values (instructions). Ask the commander for available commands with `?`. Commands available:

Command	Effect
`M`	Full motor configuration
`F`	Get the main loop frequency
`L`	Turn the onboard LED on and off (useful as a comms check)
`T`	Set the target value — rad, rad/s or N/m depending on control mode
`W`	Watchdog on/off. If no new target arrives for 1 s, target is set to zero. **On by default**
`R`	`R0`/`R1` disable/enable a linear ramp when changing setpoint. `RD1000` sets ramp duration to 1000 ms (default 1000 ms). Off by default

5.4.1 - Installing the reduction

Our sun gear is already pressed onto the motor shaft from Module 2. What is left is mating the gearbox to the motor and fixing the pair to the plates.

1. Slide the gearbox onto the motor shaft so the sun gear engages the planets. It should seat with light hand pressure, if it resists, back off and check the sun gear is square on the shaft rather than forcing it.
2. Fix the blue part of the gearbox: the custom screws that come with the gearbox on one side, and **M2.5×10** screws on the other.
3. Check the output turns freely by hand through a full revolution before applying power.
4. Close the gearbox: the **silver part threads onto the blue part**. Don't tighten it.
5. Attach the **second vertical bracket** to the silver part of the gearbox with **3 × M2.5** screws.
6. Secure that bracket to the **bottom fuselage plate** with **3 × M2** screws. The motor bracket from Module 2 is already on the same plate, so between them the two brackets set the alignment of the whole drivetrain. Check the output still turns freely once both are bolted down.

> ! To be completed by the instructor
>
> Which repository holds the barebone Seeeduino sketch, and on which branch. The nRF52 repositories currently in Software are marked outdated, so students following this page have nothing to clone.

5.5 - Task sequence

1. Mount a small flag on the gearbox output so rotation is visible and countable.
2. Achieve continuous spinning at low speed.
3. Achieve position control - the output holds against a hand disturbance.
4. Tune the loop and characterise your maximum usable speed.

> ! To be completed by the instructor
>
> The specific PID tuning exercise, the target performance, and the sign-off criteria are course material and are not in the manufacturing guide.

5.6 - Why low speed is the hard part

Regular drone ESCs start **losing synchronisation at low speed**, which is exactly the regime used for water propulsion. That is the reason this course uses an FOC ESC rather than a hobby unit — see Design notes.

5.7 - Going beyond 600 rad/s

Two issues limit speed: the micro-controller loop rate, and delays from the rotation sensor. Using SPI at 10 MHz and an AS5047P sensor rated for 28kRPM speeds are the required hardware changes that improves on delay. But at very high speeds, sensor lag still becomes the binding constraint, and shows up as high current draw and noise. We need to update the sensor electrical angle offset as a function of speed.

5.7.1 - Sensor lag

Compensating sensor lag as speed increases is necessary to go above 600 rad/s without wasting current. It is currently hand-tuned every 100 rad/s, and a fitted function is used on the robot. This could be automated by ramping through the speeds and minimising phase current — future work. This SimpleFOC forum thread is useful on the topic.

> **i** Checkpoint
>
> Continuous rotation resulting in frequencies of 1 Hz all the way to 8 Hz without loss of synchronisation, position hold against a hand disturbance, and a recorded loop frequency from `F`. Do not exceed 8 Hz.

5.7.2 - MCU speed

The goal is to maximise main loop frequency, which reached **13 kHz**. Read the current loop frequency with the commander's `F` command.

Change	Effect
`motor.motion_downsample = 3`	+0.8 kHz loop frequency
Disable monitoring	+0.2 kHz
Switch to SVPWM	No improvement observed. May help, unconfirmed
`L = 0.0001`	Tuning the inductance value helped — made voltage mode work much better

6. Module 5 — Frame, crank, linkage and gears

Week of Oct 5 · Paired lecture: *Modelling of undulatory locomotion*

6.1 - What you build today

We assemble the carbon frame, the CNC-cut crank and linkage, the gears, and the full mechanical integration that turns motor rotation into flapping. Flapping amplitude is fixed by this design to **60 degrees**[2] — 34° up and 26° down, as laid out in Figure 6.2.

6.2 - Before you arrive

Parts	5 mm aluminium link and crank, 2 gears, bearings, M2×4 screws
Tools	drill press, metal glue
Read	This page

6.3 - Main body

The main body is a carbon sandwich, spaced **24 mm** apart. The plates are CNC-cut from woven 1.5 mm plates. The top and bottom plates are identical, except for the chamfers needed for the M2 screws. The screws holding plate to plate are **M2×4**, screwing into brass inserts.

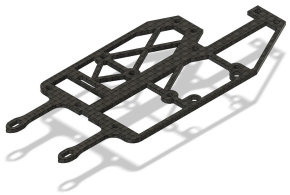


Figure 6.1: Main carbon frame

[2] Lapsansky AB, Zatz D, Tobalske BW (2020). Alcids 'fly' at efficient Strouhal numbers in both air and water but vary stroke velocity and angle. *eLife* **9**:e55774.

6.4 - Crank and linkage

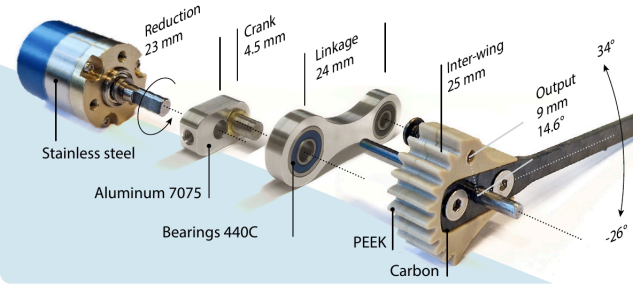


Figure 6.2: The transmission, exploded, with the length that matters and the material for each part. Follow it left to right: the gearbox output turns the crank, the crank drives the linkage, and the linkage swings the inter-wing gear. The **34**° up and **−26**° down at the right are where the 60° flapping amplitude comes from — it is set here, by these lengths, and cannot be changed in software.

The dimensions called out in Figure 6.2 are the ones you cut to:

Table 6.1: Crank–linkage dimensions

	Crank-linkage dimensions
Crank radius	4.5 mm
Linkage length	24 mm
Crank–linkage shaft diameter	4 mm
Bearing, crank side	10×4×4
Bearing, wing side	8×3×4 flanged

Both the crank and linkage are CNC-cut in a 5 mm aluminium plate.

Once cut:

1. Carefully tap an **M3** thread. Use cutting oil and make sure to break off the chips.


   > ⚠ This thread carries high forces
   >
   > It **must** be done carefully, keeping the alignment between hole and tap.

2. Press the bearings into the linkage. They may need to be bonded with metal glue if the press fit is not good enough.


3. Join the crank and linkage with a short 4 mm shaft, cut to **9.5 mm**. The bearing is kept from coming out with a pointy indent on the shaft end. *(To be improved.)*

> ⚠ Alignment of the linkage, perpendicular to the shafts, is extremely important
>
> An offset of **1 mm** is sufficient to destroy the crank-link in a few strokes.

Figure 6.3 shows how the four shafts for the FAAV3.2 should be manufactured. Nothing exotic, but they need to be accurate.

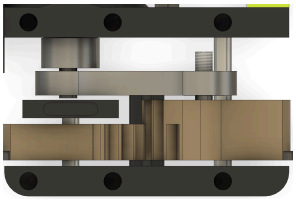

(a) Transmission, top view

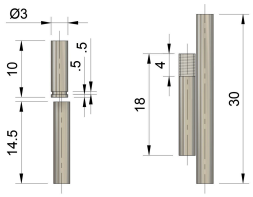

(b) Shaft dimensions

Figure 6.3:

The 3 mm shafts are pressed through the two gears' centre holes. Should be a mildly tight fit at minimum, otherwise glue the shaft. Same for the linkage shaft (also 3 mm).

Between the gears, a clearance of **0.4 mm** (inter-axis spacing of 25.4 mm) ensures proper operation without too much backlash.

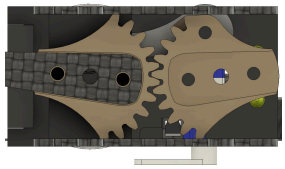


Figure 6.1: Transmission assembled

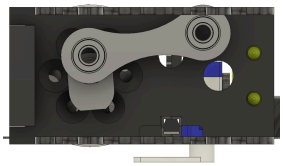


Figure 6.2: Transmission, second view

> ℹ Checkpoint
>
> Frame assembled, crank–linkage rotating freely through a full cycle with no binding, linkage visibly perpendicular to the shafts, and gear backlash checked. Flapping shown at 1-5 Hz.

7. Module 6 — Flapping simulation (Ptera)

Week of Oct 19 · Paired lecture: *Insect-scale flapping* · No module Oct 12

7.1 - What you do today

Choose your wing and tail geometry. You simulate candidate geometries in Ptera and pick the one that gives the best thrust profile when compounded with the provided motor power curve. Modules 7 and 8 build whatever you decide here.

7.2 - Before you arrive

Bring	Laptop with Ptera installed, your measured loop performance from Module 4
Read	This page

7.3 - Deliverable

A wing planform and a tail geometry, with the simulation output that justifies them, carried forward into Module 7 and Module 8.

! To be written by the instructor

This module has **no counterpart in the manufacturing guide** — the guide documents the research robot's final geometry, not the design exercise. The following need to be written from course material:

- Ptera installation and a worked example
- The provided motor power curve, and its format
- What "most efficient thrust profile" means quantitatively here, and how it is scored
- Constraints the students must respect so their geometry remains buildable with the frame from Module 5 — span limits, root fitting, mass budget
- Whether teams may deviate from the reference wing, and by how much

i Checkpoint — TA sign-off

A geometry chosen, with simulation evidence, and confirmed buildable against the frame and wing-root hardware.

8. Module 7 — Wing fabrication

Week of Oct 26 · Paired lecture: *Swimming robots II*

8.1 - What you build today

Both wings: carbon skeleton, membrane cut to the geometry you chose in Module 6, bonded and stitched at the load-bearing points.

8.2 - Before you arrive

Parts	Carbon rods and strips, wing roots, 2× nylon adapters per wing, ripstop nylon membrane, 3M tape, superglue, thread
Tools	Cutting mat, steel rule, scalpel, needle, printed full-size template of your geometry
Bring	Your Module 6 geometry, printed 1:1

8.3 - Wing roots

The wing roots are carbon, drilled to mate with the gears from Module 5.

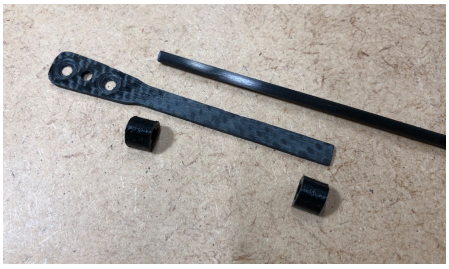


Figure 8.1: Wing root parts and spar stock

8.4 - Building the wing

The whole wing is built **over the printed pattern**, working from the leading edge outwards. Everything is cut

oversize and trimmed to the outline at the very end — margin is easy to remove and impossible to add back.

1. **Decide on the shape** and print the pattern on paper. Print it **1:1** — check the scale before you cut anything, by measuring a known dimension on the printout against a rule. Printer drivers scale to fit by default, and a pattern that came out at 97% quietly discards the geometry you chose in Module 6.
2. **Cut two membranes** with a **3 cm margin** all round the pattern. Use the ripstop nylon listed in Parts.
3. **Bond the leading edge.** Lay a strip of **3M tape** along the leading-edge region of the membrane, press the leading-edge rod down onto the tape, and wrap the membrane around the rod. This joint carries the highest load of any on the wing — everything downstream pulls against it.
4. **Lay out the carbon strips.** Cut each to approximate length **plus 3 cm**, position them on the membrane over the pattern, and bond them with **superglue**.
5. **Stitch the strips down**, at minimum at every **intersection point** and at the **extremities**. Superglue alone will peel off the membrane under repeated flapping; the stitches are what keep the skeleton attached once the glue starts to fail.
6. **Trim the excess** beyond the outline with a blade, cutting on the mat.

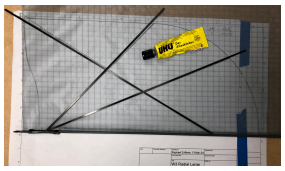


Figure 8.1: Strips laid out and bonded over the template

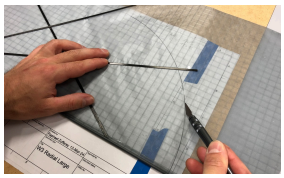


Figure 8.2: Trimming the membrane to the outline

Repeat for the second wing, and remember that it is flipped.

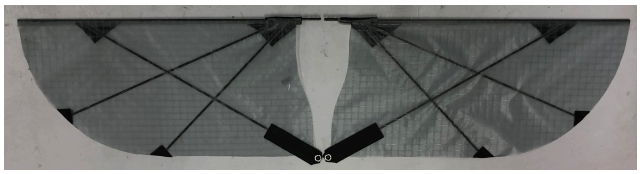


Figure 8.2: Completed wing pair

8.5 - Assembly

1. Mount each wing in its **wing root** using the **two nylon adapters**.
2. Mount the wing roots in the robot, onto the gears from Module 5.

3. **Check that it flaps.** Run it slowly first and watch both wings through a full cycle before going any faster.

> ⚠ Both wings must match
>
> Asymmetry between left and right shows up as a roll bias that may not be possible to correct later. See Module 11 for trimming out. Weigh both wings and compare spar positions against the template before bonding.

> ! To be completed by the instructor
>
> Still missing from the procedure above:
>
> - Which 3M tape — the parts list says VHB, the width and where exactly it lands on the leading edge are not recorded
> - Spar layup: rod and strip diameters, and where the diagonals attach
> - What to stitch with — thread type and stitch spacing
> - Numerical tolerance between left and right wing, for the check below

> i Checkpoint
>
> Both wings complete, matched in mass and geometry, mounted in their roots and fitted to the robot, and flapping through a full cycle without binding.

9. Module 8 — Tail and housing

Week of Nov 2 · Paired lecture: *Multi-modal locomotion*

9.1 - What you build today

The passive tail, cut to the shape your simulation produced and mounted on its rod, plus the foam housing that protects the robot and keeps it afloat.

9.2 - Before you arrive

Parts	Carbon sheet and tail rod, foam stock (XPS or closed-cell PE), epoxy
Tools	Foam cutter, scalpel
Bring	Your Module 6 tail geometry, printed 1:1

9.3 - Tail

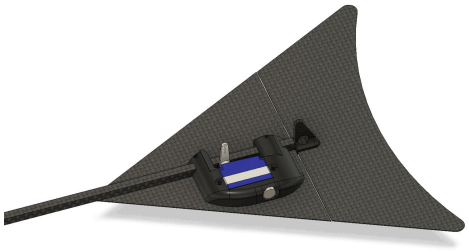


Figure 9.1: Tail assembly

> ! To be written by the instructor
>
> As with the wings, the guide contains **only the photograph above** for the tail. Still needed: sheet material and thickness, rod diameter, how the tail mounts to the boom, and the incidence setting. The project plan also notes tail actuation is optional if time permits — decide before the semester whether that is in scope.

9.4 - Trailing edge holder

Insert part on tube.

9.5 - Housing

Use a foam cutter to cut an exterior housing for the FAAV. This is an important step for external tests: it adds a layer of protection and ensures the FAAV floats. Leave space for GPS and antenna insertions if you are using them.

To keep the FAAV level when floating — which helps visibility and getting it out of the water — it is recommended to put a certain amount of foam on the tail.

9.5.1 - Choosing a foam

Various foams have been tested, with tradeoffs:

Foam	Floatability	Absorption	Impact behaviour
Extruded polystyrene (XPS)	Best, low density	Zero	Relatively brittle; little help damping landings
Closed-cell polyethylene (PE)	Decent, relatively low density	Light	Much more compliant; usable as protection

If someone ever has time, a multi-material housing could have its use cases.

> ⚠ Check solvent compatibility before painting or gluing foam
>
> Some foams are very sensitive to solvents. Epoxy is inert and can act as glue.

> ℹ Checkpoint — TA sign-off
>
> Tail mounted and aligned, housing fitted with clearance for the wings through the full flap cycle, and the assembled robot floating level in the test tank.

10. Module 9 — Flight controller, PCB and dry testing

Week of Nov 9 · Paired lecture: *The future of actuation*

10.1 - What you build today

The custom PCB assembled and validated, the flight controller flashed and talking to the ESC, and the robot flapping in air under wireless control.

10.2 - Before you arrive

Parts	FAAV PCB v3.0, stencil, solder paste, XIAO ESP32S3, JST connectors, battery
Tools	Hotplate, tweezers, multimeter, bench supply with current limit
Read	This page and PCB revisions

10.3 - Electronic architecture

One 4S (max 16.8 V) battery is connected to a custom PCB that steps VBAT down to 5 V to power the flight controller. The flight controller generates a 3v3 rail to power the sensors on the custom PCB. Battery power goes through a shunt for sensing on the custom PCB, then back out to power the ESC. The flight controller sends commands to the ESC over serial.

10.4 - Flight controller



Figure 10.1: Microcontroller in its waterproofing box

Firmware lives in FAAV-Flight-Controller (ESP32, FreeRTOS tasks). See Software for older variants.

10.5 - Assembling the PCB

As of April 2026 the current board is **v3.0**: 4 layers, 21 × 28.5 mm, 34 components. The complete BOM is in the Manufacturing/Assembly folder of the FAAV-PCB-v3 repository.

The simplest way to assemble a FAAV PCB is with a stencil, solder paste applied with a cutter blade, then reflow on the hotplate.

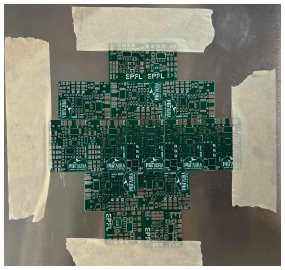


Figure 10.1: Tape blank PCBs around the PCB to assemble



Figure 10.2: Align the stencil on top and tape it, making sure it sits flat

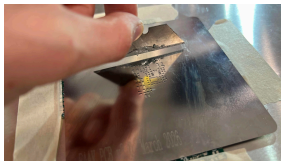


Figure 10.3: Wipe down solder paste with a blade in one firm pass



Figure 10.4: Place the assembled PCB on the hot plate

10.6 - Taking the PCB into operation

Once assembled, solder power wires for VBAT and GND at the input side of the board. Follow these steps **before powering the PCB for the first time**:

1. Check that there is no short circuit between GND and 5V / 3.3V / VBAT.
2. Connect a **15 V supply with a 100 mA current limit** to the battery pads and check that it does not draw excessive current.
3. Check with a multimeter that the buck regulator outputs 5 V from the 15 V input. The MCU should be on by then.

With the MCU powered, flash your test firmware and check the connection to all sensors. Table 10.1 gives the I²C addresses.

Table 10.1: I²C addresses

Component	I²C address (bin)	I²C address (hex)
Pressure sensor	`0b1110110`	`0x76`
IMU	`0b1101000`	`0x68`
INA228 power monitor	`0b0101000`	`0x40`

Verify:

- ☐ Voltage, current and temperature readings from the INA228
- ☐ IMU readings
- ☐ Pressure sensor readings
- ☐ RGB LED control

Once all the hardware on the board is validated, solder the power wires at the output side of the board to the ESC, and the UART wires.

> ⚠ TX to RX
>
> The **TX** output of the PCB has to be connected to the **RX** pin of the ESC, and vice versa.

10.7 - Connectors

The waterproof connector is the JST 8-pin 08R-JWPF-VSLE-D / 08T-JWPF-VSLE-D. All pins marked `_b` are used for balancing the battery during recharge. For use on the robot, connect at least **Vbat** and **GND**; to allow higher currents, connect **Vbat_b** and **GND_b** as well.

> ⚠ Seal the unused cable slots
>
> Do not forget to seal the back of the connector for the unused cable slots — this is a water ingress path straight into the electronics.

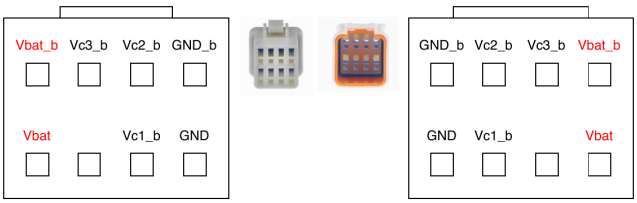


Figure 10.2: Connector wiring scheme. Left: battery connector. Right: connector on the robot / for recharging the battery.

10.8 - Dry testing

> ! To be written by the instructor
>
> The dry-test protocol is course material, not in the guide. Needed: what the robot is mounted on while flapping in air, the flap frequency sweep, what is measured, the wireless control setup students reprogram to, and abort criteria.

> i Checkpoint — TA sign-off
>
> PCB validated against all four sensor checks, flight controller commanding the ESC over serial, and a supervised flapping run in air.

11. Module 10 — Waterproofing

Week of Nov 16 · Paired lecture: *Multirotors*

11.1 - What you build today

A potted PCB, a lubricated and sealed gearbox, and a robot that survives a static immersion test.

> ⚠ Silicone cure time gates this module
>
> The PCB potting takes **12–24 hours** to cure because of the depth. Plan the module so potting happens first and soldering happens after the cure, or across two sittings.

11.2 - Before you arrive

Parts	Waterproofing box, Kapton tape, silicone sealant, USB-C cable, CorrosionX, white lithium grease
Tools	Needle, soldering iron
Read	This whole page before starting — the ordering matters

11.3 - Flight controller waterproofing

First ensure that the FC fits within the 3D box before anything else.

1. Tape the bottom side of the box with Kapton.
2. Fill the bottom of the box with silicone sealant until it reaches the USB port hole.
3. *Carefully* slide the PCB assembly in, with the Seeeduino facing the bottom of the box.
4. **Very important!** Insert a USB-C cable into the port. This keeps the sealant from flowing into the port, and the cable is a convenient point to hold the assembly by.
5. Add sealant along the three free edges to fill any gaps, until the sealant reaches the level of the top side of the PCB. **The PCB components and contacts should be left exposed.**

6. Let the silicone cure — because of the depth this takes about 12–24 h.
7. Solder the wires and contacts.
8. Solder the voltage regulator.
9. Seal the top side of the PCB. The best method here is unclear. Tested solutions:
   - Nail polish
   - Silicone sealant
   - 422C silicone conformal coating (datasheet)

11.4 - ESC waterproofing



Figure 11.1: The B-G431B-ESC1 assembly.

The ESC is potted the same way as the flight controller: it sits in its own 3D-printed frame, which is then filled with **Silcoset** so only the wire exits remain open. Figure 11.2 shows the three pieces together — motor, bare ESC, and the potted frame.

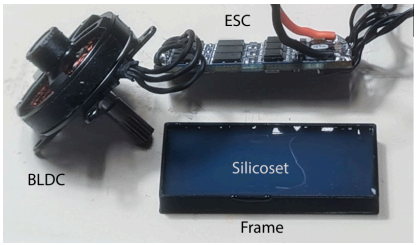


Figure 11.2: The motor, the ESC and the potted frame. The dark block is the frame filled with Silcoset; the ESC drops into it before the fill so the board ends up fully encapsulated with only the phase and signal wires leaving.

> ! To be completed by the instructor
>
> The written procedure for this step, to the level of detail the flight controller has above: fill order, how the phase wires are held clear while the compound cures, cure time for this depth, and whether the ESC is potted before or after the motor wires are soldered in Module 3.

11.5 - Battery waterproofing

11.6 - Battery connector waterproofing

11.7 - Gearbox

By default the gearbox on the FAAV4 robot is **not waterproof at all**, and it is normal for it to end up completely filled with water once submerged. Over years of use the gearbox proved resistant to fresh water with the factory lubricant. If that is removed/cleaned, then use the right lubricant below. The best is to avoid opening the gearbox and cleaning the gears.

> ⚠ Use the right lubricant
>
> A mix of **CorrosionX and white lithium grease**. Several dives have since been performed with the same gearbox that previously corroded, and it now runs smoothly.

Parts that rust: **sun gear, planet gears, ring gear, planet shafts.** Parts that do not: screws, motor shaft, washers, body, circlip.

> ℹ Checkpoint
>
> PCB fully cured and potted with contacts exposed, gearbox lubricated and reassembled with the shaft bearing fitted, connector back-shell sealed, and a static immersion test passed with no ingress.

12. Module 11 — Wet testing

Week of Nov 23 · Paired lecture: *Fixed-wing flyers*

12.1 - What you do today

Immersion, underwater runs, wing and tail trim, and a logged cost-of-transport measurement.

12.2 - Before you arrive

Bring	Fully waterproofed robot from Module 10, charged 4S pack, spare crank–linkage shaft
Tools	Retrieval poles and towels are at the tank — see Tank rules
Read	This page, and your notes from Module 4

12.3 - Pre-immersion checks

- ☐ Static immersion test from Module 10 passed, robot opened and inspected dry
- ☐ Connector back-shell sealed on all unused slots
- ☐ Watchdog enabled on the ESC (`W`) — target drops to zero if commands stop
- ☐ Robot floats level

> **Low speed is where normal ESCs fail**
>
> Water propulsion runs the motor in exactly the regime where synchronisation is lost. If the drive stutters underwater, stop and check sensor lag compensation before increasing current — see Module 4.

12.4 - The tank

Testing happens in the AURA Lab tank. The gantry along the near rail and the cameras overhead are part of the measurement setup, not scenery — the ceiling cameras are what track your robot for the cost-of-transport number below.



Figure 12.1: The AURA Lab tank. The rail and gantry run the length of the near side; the tracking cameras are mounted overhead.

> ⚠ Tank rules
>
> **Nobody gets in the tank.** Not to retrieve a robot, not to reposition it, not for a moment. Use the **poles** to fish the robot back to the edge.
>
> **Keep water off the floor.** Water on the floor sets off an alarm, which ends the session for everyone. Lift the robot out over the tank and let it drain there rather than carrying it dripping, and keep **towels** to hand for what gets past you. Dry the floor immediately if it happens.

12.5 - What to log

Every run should record, at minimum:

- **Power consumption** — the numerator of cost of transport
- **IMU data** — attitude and acceleration through the run
- **Flapping frequency** — the input you are varying

Since underwater we lose wireless communication, the data needs to be recorded and streamed back wirelessly after the run. You have two places to record data on the flight controller, and the choice matters more than it looks:

	RAM	Flash
Survives power loss	No	Yes
Speed	Fast, no wear	Slower, finite write cycles
Use it for	The normal case	Runs you cannot afford to repeat

The normal workflow is **log to RAM during the run, then broadcast over BLE once the robot is out of the water**. Nothing has to be opened and nothing has to be

plugged in, which is the whole point: the board is potted from Module 10 and there is no connector to reach.

> ⚠ RAM is lost the moment power goes
>
> A brownout, a watchdog reset, or an accidental disconnect takes the whole run with it. Broadcast the data before you change the battery, not after — and if a run is expensive to repeat, write it to flash instead.

12.6 - Trim

Two independent adjustments, both mechanical. Change **one at a time** and do a run between them, or you will not know which one did what.

12.6.1 - Wing trim

Wing trim is adjusted at the **trailing edge**.

> ! To be completed by the instructor
>
> The trailing-edge trim part itself is not designed yet — decide what it is, how it mounts, and what range of adjustment it gives. Until then this step cannot be written as a procedure, and students have nothing to adjust against.

12.6.2 - Tail trim

Tail trim is manual: **bend and twist the tail by hand**. Bending sets pitch, twisting sets roll. Work in small increments and expect to go back and forth — there is no scale and no reference mark, so your own logged runs are the only feedback you have.

12.7 - Cost of transport

Cost of transport is the score in Module 12, so measure it the same way every time:

$$\mathrm{COT} = \frac{P}{m\,g\,v} \tag{12.1}$$

with P the average electrical power over the run, m the robot's mass, and v its average forward speed. It is dimensionless, and lower is better.

You get the two halves from two different places:

- **Power, onboard.** From the logged consumption above, averaged over the steady part of the run — not the acceleration at the start.
- **Speed, from the ceiling cameras.** The overhead tracking in Figure 12.1 gives position against time, which is the honest way to get v; timing it by eye across the tank is not good enough for a scored number.

Take both from the *same* window of the same run. Averaging power over one interval and speed over another is the most common way this number comes out wrong.

! To be written by the instructor

Still missing from the protocol:

- **Run profile** — depth, duration, and the flap-frequency sweep to cover
- **Abort procedure** — what conditions end a run early, and what the student does at the tank edge when they do
- **Camera tracking, practically** — how a team starts a capture, and in what form the position data comes back

i Checkpoint — TA sign-off

A completed underwater run with power, IMU and flapping frequency logged and successfully retrieved over BLE, no water ingress on inspection afterwards, and a cost-of-transport figure computed from Equation (12.1) with the camera-derived speed.

13. Module 12 — Competition

Week of Nov 30 · Paired lecture: *Pair presentations*

13.1 - What happens today

Robots are scored in two categories: **most efficient** and **fastest**.

13.2 - The competition rules

13.3 - Before you arrive

Bring	Robot, spare crank–linkage shaft, spare wing, charged packs, your logged cost-of-transport data

! To be written by the instructor

Competition format is course material, not in the manufacturing guide. Needed:

- Course layout and run rules for each category
- How cost of transport is computed and normalised across teams with different masses
- Number of attempts, and repair rules between attempts
- How the competition contributes to the grade
- What happens to robots afterwards

13.4 - Feedback

The final module is a recap and feedback round. This manual is rebuilt each year from what students report - if something in it cost you time, say so. Corrections made during this semester are listed in the Changelog.

II Reference

14 Parts list 61

15 Brushless motors 65

16 The G431 ESC board 71

17 How SimpleFOC works 75

18 Software 81

19 PCB revisions 83

20 CNC — Stepcraft D660 89

21 Design notes 91

22 Changelog 93

14. Parts list

Table 14.1: List of components, after Table S1

Category	Component	Material/Model	Nb	Mass [g]	Total [g]
Structure	Frame	Carbon 1.5mm plate (swiss-composite)	2	4.7	9.4
	Vertical panels	Onyx with CF (Markforged)	2	6.2	12.4
	Motor holder	Onyx with CF (Markforged)	1	4.3	4.3
	Battery holder	Onyx with CF (Markforged)	1	1.1	1.1
	Tail holder	Onyx with CF (Markforged)	1	4.3	4.3
	Screws	M2 Stainless	40	0.13	5.2
Tail	Tail	Carbon 0.5 mm plate (Swiss-composite)	1	22.2	22.2
Propulsion	Crank	Al 7075	1	1.3	1.3
	Linkage	Al 7075, with bearings	1	4.3	4.3
	Reduction	Series 20/1R 1:23 (Faulhaber)	1	38	38
	Right plate	Carbon 1.5mm plate	1	1.5	1.5
	Left	Onyx	1	2.8	2.8
[illegible]	[illegible]	[illegible]	62	[illegible]	[illegible]
ics		LiPo [illegible] iron-			

! To be completed before the semester

This is the published list for the paper's robot, not the current build. Items the modules rely on that are **not** in it and need adding: the AS2303 motor (the list still shows the older AT2303), the ST-Link programmer, the FAAV PCB v3.0 and its BOM, 4 mm steel rod for the motor shaft, the 6 × 2.5 mm diametric sensor magnet and its printed bracket, 5 mm PEEK stock, foam and CorrosionX.

15. Brushless motors

Background for Module 2. Not needed at the bench — useful for your report, and for understanding why the motor behaves the way it does when you push it in Module 4.

15.1 - Start with the brushed DC motor

Every result you need for a brushless motor is easier to see in a brushed one first, because the two obey the same electrical physics. The difference is *how* the windings get switched, not what the machine does once they are.

A DC motor is described by two constants and one resistance. Spinning the rotor induces a back-EMF proportional to speed, and passing current through the windings produces torque proportional to current:

$$U_{\text{emf}} = \frac{\omega}{k_V} \qquad \tau = k_T\, I \tag{15.1}$$

These are the same k_V and k_T derived in Module 2 — inverses of each other, not independent choices. The supply voltage splits between the back-EMF and the ohmic drop across the winding resistance R:

$$U = \frac{\omega}{k_V} + R\, I \tag{15.2}$$

Substitute $I = \tau / k_T$ and rearrange for torque, and the whole behaviour of the motor falls out as a **straight line**:

$$\tau = k_T \frac{U}{R} - \frac{k_T}{k_V R}\,\omega \tag{15.3}$$

15.1.1 - Reading the torque–speed line

That line is the motor's entire steady-state character, and it is fixed by the applied voltage. Two points define it:

- **Stall torque** $\tau_{\text{stall}} = k_T U / R$, at $\omega = 0$. The rotor is held still, there is no back-EMF, and the only thing limiting current is the winding resistance. This is the largest torque the motor can produce and also the fastest way to destroy it — see Thermal limits.
- **No-load speed** $\omega_0 = k_V U$, at $\tau = 0$. The rotor spins fast enough that the back-EMF nearly cancels the supply, so almost no current flows.

Everything the motor can do at that voltage lies on the line between them. Mechanical power is $P = \tau\omega$, the product of a falling line and a rising one, so it is a parabola peaking at **half the no-load speed** with half the stall torque. Effi-

ciency peaks somewhere else entirely — much closer to ω_0, because the copper loss that dominates at low speed scales with I^2 while the useful output only scales with I.

(The web version of this page carries an interactive plot of these three curves. See the manual online.)

> **i** The useful consequence
>
> Raising the voltage shifts the line outwards without changing its slope: more speed *and* more torque, same trade-off between them. That is why speed control is voltage control, and why a "faster" motor at fixed voltage is a lower-torque one.

(Online, this section carries a voltage slider showing the line sweeping outwards.)

15.2 - What changes with a brushless motor

In a brushed motor the commutator and brushes are a mechanical switch riding on the rotor: they physically reconnect the windings as it turns, so the current always flows in whichever coil is best placed to produce torque. It works without any electronics at all, and it wears out, arcs, and limits how fast the motor can safely spin.

A **BLDC** motor deletes that switch. The permanent magnets go on the rotor, the windings stay on the stator in three phases, and an external controller decides which phases to energise based on where the rotor currently is. The motor becomes inseparable from its driver — this is why Module 3 exists, and why the rotor position measurement matters so much.

What this does **not** change is Equation (15.3). The torque and speed constants have the same meaning, the line has the same shape, and you size the motor the same way. What changes is that the line is no longer the whole story:

	Brushed	Brushless
Commutation	Mechanical, self-acting	Electronic, needs rotor position
Torque–speed line	The real limit	The *ideal* limit, then clipped by the driver
Wear	Brushes are consumable	Bearings only
Speed ceiling	Brush arcing and bounce	Commutation rate and sensor lag
Torque ripple	Smoothed by many commutator segments	Depends on drive scheme

	Brushed	Brushless
		(trapezoidal vs FOC)

15.2.1 - The envelope, not the line

The straight line assumes the supply can deliver whatever current the equations ask for. It cannot. At stall, Equation (15.2) gives $I = U/R$, and with the sub-ohm winding resistance of a small outrunner that is a number in the hundreds of amps — far beyond both the ESC and the motor itself.

So the driver enforces a **current limit**, and because $\tau = k_T I$ that is directly a torque limit. The usable region becomes:

- a **constant-torque region** at low speed, flat at whatever current limit you set, because the ESC is holding current rather than letting the line dictate it;
- a **corner speed** where the back-EMF has risen enough that the supply can no longer push that current;
- above it, the original Equation (15.3) line, falling to ω_0.

The flat part is not physics, it is a decision. On our robot it is the decision that keeps the motor alive at the low speeds used for swimming, where the torque–speed line alone would happily draw enough current to cook the windings.

15.3 - Thermal limits

Nothing in Equation (15.3) knows about heat, which is why the equations cheerfully predict operating points that will destroy the motor in seconds.

Almost all the loss you care about is **copper loss** in the windings:

$$P_{\text{copper}} = I^2 R \tag{15.4}$$

The square is what makes this the binding constraint. Doubling the torque doubles the current and **quadruples** the heating. A motor comfortable at its rated current will not survive twice that for long, even though the torque equation says it is only a factor of two.

Three practical consequences:

1. **Stall is the worst case, not the best.** At $\omega = 0$ there is maximum current and no rotation, so no airflow and no useful output — all the input power becomes heat in the windings. A motor held at stall can burn out without the shaft moving at all.
2. **Continuous and peak ratings are different numbers.** A peak rating assumes seconds; a continuous rating assumes thermal equilibrium. Flapping is a *reciprocating* load, so the current is far from constant — what matters for heating is the **RMS** current over the cycle, not the peak you see on the bench supply.

3. **Iron losses grow with speed.** Hysteresis and eddy-current losses in the stator scale with electrical frequency, so at the 1700 rad/s discussed in Module 4 the copper is no longer the only thing getting warm.

(Online, this section carries sliders for the ESC current limit and the motor's continuous rating, showing how the two clip the torque–speed line.)

> ⚠ Heat is cumulative and invisible
>
> Current is the only symptom you can see, and it appears instantly, while the temperature it causes lags behind by tens of seconds. A run that looks fine on the ammeter can still be depositing heat faster than the motor sheds it. When tuning in Module 4, stop and touch the motor.

15.4 - Measured behaviour of the AS2303

Everything above is the model. The plot below is where the **test-stand measurements** go, so you can see how far the straight line actually holds for the motor on your bench.

> ! To be completed by the instructor
>
> Two things, and the second depends on the first:
>
> 1. The measured winding resistance of the AS2303, its continuous current rating, and the current limit configured on the ESC. These turn every equation on this page into numbers students can check against — the plots above currently run on a **placeholder** R.
> 2. The test-stand data itself. Paste it into the `MEASURED` array in the script block at the bottom of `reference/bldc.qmd`; the schema and an example row are in the comment there. The plot switches from its empty state to a measured-versus-model comparison as soon as the array is non-empty.

15.5 - Why an outrunner

Brushless motors come in two arrangements. An **inrunner** spins a magnet rotor inside a stationary stator, the familiar shape from a drill. An **outrunner** inverts it: the stator sits still in the middle and the magnets are carried on a bell that rotates around the outside. Ours is an outrunner — it is the bell you machine and press the shaft into in Module 2.

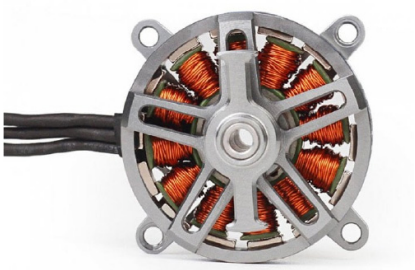


Figure 15.1: An outrunner seen from the back. The copper windings are the **stator** and do not move; the dark magnet segments around the rim are carried on the rotating bell. Note how far out the magnets sit — that radius is the lever arm in Equation (15.5), and it is the whole reason for this arrangement. Note also that the heat is generated in the middle, wrapped inside the part that spins.

The reason is torque. Torque is force times radius, and in an outrunner the magnets sit at the *largest* radius the motor's diameter allows, rather than the smallest:

$$\tau = F \times r \tag{15.5}$$

The same tangential force from the same windings acts on a longer lever arm. It also leaves room for more magnet poles around the circumference. Together these raise k_T for a motor of the same mass, which by Equation (15.1) means a **lower KV** — more torque per amp, less speed per volt.

That is the right trade for us. The wings need torque at low speed, through a gearbox that is already multiplying by 23.04:1, and the alternative is either a larger reduction or more current for the same result. Two secondary properties help as well:

- **Rotor inertia.** The rotating mass is at a large radius, so the bell has significant inertia and acts as a flywheel. Against a reciprocating flapping load that smooths the speed variation over a cycle. It also means the motor cannot change speed quickly, which is a real cost during transients.
- **Something to attach to.** The bell is a large-diameter rotating surface, which is what makes the shaft press-fit in Module 2 mechanically sensible in the first place.

The costs are real: outrunners spin more slowly for a given voltage, the exposed rotating bell is a hazard and an ingress path, and cooling is worse because the heat-producing stator is wrapped inside the rotor rather than mounted against the case. The last point ties directly back to Thermal limits — an outrunner's stator sheds heat mainly through its mount, which on our robot is a 3D-printed plate.

16. The G431 ESC board

Background on the **B-G431B-ESC1**, the board you rework and flash in Module 3. What is on it, how it turns a DC battery into three moving phases, what it can drive, and why it arrives in two pieces.

16.1 - What it is

ST sells this as a *Discovery kit*: a reference design showing what their STM32G431 can do in a motor-control role, in the physical form of a drone ESC. That origin explains most of its oddities. A hobby ESC exposes a signal wire and two power leads because that is all a flight controller needs; this board brings out a CAN bus, a potentiometer input, a hall-sensor connector and a debug header, because its job is to demonstrate everything the chip supports.

For us the consequence is good and bad in equal measure. Good: the silicon is open, we can run our own firmware (SimpleFOC) and we get real current sensing. Bad: several connectors are wired for uses we do not want, which is why Module 3 spends its time repurposing them.

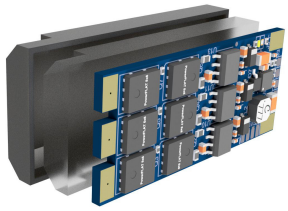


Figure 16.1: The power stage. The six large flat packages are the MOSFETs, in three pairs; the copper tabs on the left are the U, V and W phase outputs.

16.2 - The parts that matter

Block	Part	Notes
Microcontroller	**STM32G431CB**	170 MHz Cortex-M4 with FPU, 128 kB flash, 32 kB RAM
Power switches	**6 × STL180N6F7**	60 V N-channel MOSFETs,

Block	Part	Notes
		very low on-resistance
Gate drivers	**L6387**	Three half-bridge drivers, one per phase
Current sensing	**Three shunts**	Low-side, amplified into the MCU's ADCs
Programmer	**ST-LINK/V2-1**	On the detachable daughterboard

Sources: ST's product page and data brief.

The MCU is the interesting choice. FOC recomputes the field orientation every control loop, and each iteration costs a handful of trigonometric evaluations (see How SimpleFOC works). At 170 MHz with hardware floating point that fits comfortably inside a 10 kHz loop. A hobby ESC's 8-bit microcontroller could not do this arithmetic in the time available, which is precisely why hobby ESCs use the cruder back-EMF scheme instead.

16.3 - How the three phases are generated

The battery supplies one DC voltage. The motor needs three voltages that vary smoothly and stay 120° apart. The bridge between the two is built from three identical circuits.

One half-bridge per phase. Each phase output connects to two MOSFETs in series across the battery: a **high-side** switch to the positive rail and a **low-side** switch to ground. Closing the high side pulls that phase to battery voltage; closing the low side pulls it to zero. Three phases, three pairs, six transistors — the six packages in Figure 16.1.

PWM makes the intermediate values. A switch is either on or off, so a half-bridge can only output the full rail or nothing. Switching between them tens of thousands of times a second and varying the *fraction* of time spent high produces any average voltage in between. 50% duty gives half the rail. The motor's own winding inductance does the smoothing: it resists rapid current changes, so it responds to the average and largely ignores the switching.

Three of them, offset, make a rotating field. Drive the three duty cycles as sinusoids 120° apart and the three phase voltages produce a magnetic field that sweeps steadily around the stator. Advance the sinusoids faster and the field rotates faster. This is what `driver.setPwm(Ua, Ub, Uc)` at the bottom of SimpleFOC's inner loop is ultimately setting.

> ⚠ Both switches in a pair must never be on together
>
> High and low side closed at once is a direct short across the battery through two transistors — called **shoot-through**, and it destroys the pair in microseconds. The hardware inserts a **dead time**: a brief interval where both are off during every transition. It is handled by the gate drivers and the MCU's timer, so you will not code it, but it is why the two switches of a pair are never driven by a single signal.

Current sensing closes the loop. A small-value **shunt resistor** sits in each phase's low-side return path. The voltage across it is proportional to the current through that phase; the MCU amplifies and samples it. Three shunts mean all three phase currents are visible, which is what makes true FOC current control possible rather than voltage-mode approximation. Without this measurement you can ask for a torque; with it you can *regulate* one.

16.4 - What it can drive

Input voltage	**3S to 6S** LiPo (roughly 11–25 V)
Peak current	**40 A**, with forced-air cooling
Protection	Overcurrent, overvoltage and thermal, on-board

Two cautions about that 40 A. It is a **peak** figure, and it assumes **forced air** — a fan, or a drone's propwash. Our robot has neither, and it spends much of its life underwater with the board sealed inside potting compound (Module 10), so heat leaves slowly and only by conduction. Treat 40 A as a number describing the silicon, not a budget you may spend.

In practice this is not the binding constraint. The wing motor draws far less than the board can supply, so the limits you will actually meet are the motor's own thermal limit and sensor lag, not the ESC's. The relevant discussion is in Brushless motors and Module 4.

16.5 - Why there is a daughterboard

The small board at the end is a complete **ST-LINK/V2-1** programmer and debug probe. It is separated from the power board by a line of perforations and is meant to be snapped off.

That design makes sense for ST's intended user: develop with the programmer attached, then break it away so the flight-ready ESC is smaller and lighter, and reuse the same programmer on the next board. It carries two things:

- **SWD** — the debug and programming interface, used to flash the MCU
- **A virtual COM port** — a USB serial bridge onto one of the MCU's UARTs

> ! Do not snap it off
>
> Once separated, reprogramming needs an external programmer wired to the SWD pads by hand. We keep it attached for the whole course. This is also why the board is larger than a hobby ESC of equivalent power — roughly half of what you are holding is the programmer.

The virtual COM port is where Module 3 runs into trouble. Out of the box it is wired to the MCU's **USART2**, on pins that the board also uses for the hall-sensor connector. Those same pins are the SPI3 bus we need for the AS5047P encoder, and an encoder is not optional for FOC. So the pins go to the encoder, USART2 stops being reachable over USB, and serial has to be re-routed — either onto USART1 by rework, or off-board entirely to the Seeeduino. Flashing is unaffected throughout, because SWD runs on different pins.

16.6 - What we do not use

- **CAN transceiver.** Present and functional; our robot uses BLE from the flight controller instead.
- **Potentiometer input.** An analog throttle knob for bench demonstrations.
- **Hall-sensor connector (J8).** Intended for the three digital hall sensors built into many BLDC motors. Ours has none, and hall sensors would be too coarse anyway — six positions per electrical revolution, against the AS5047P's continuous absolute angle. The connector gets repurposed for serial.

Sources: ST B-G431B-ESC1 product page, data brief.

17. How SimpleFOC works

The firmware in FAAV-G431-ESC is a SimpleFOC application. This page is what you need to read that firmware and change it with confidence: what the library computes, in what order, and where your settings enter. It is background for Module 3 and Module 4, not a procedure.

17.1 - The problem it solves

A brushless motor has three windings and no brushes, so nothing decides on its own which winding should be energised. Something has to look at where the rotor is and energise the windings to put the stator's magnetic field about **90° ahead** of the rotor's magnets, the orientation that produces the most torque per amp. Do that continuously and the motor behaves like a brushed DC motor: torque proportional to current, no commutator to wear out. That is **Field-Oriented Control**, and it is why Module 2's $\tau = k_T I$ is usable at all.

The awkward part is that "90° ahead" is a statement about a *rotating* frame, while the three phase currents live in a *stationary* one. FOC is mostly the bookkeeping that moves between the two.

17.2 - Three objects, and what links them

The SimpleFOC architecture is built around three objects, each wrapping one piece of hardware:

Object	Wraps	Our hardware
`MagneticSensorSPI`	The angle sensor	AS5047P on SPI3
`BLDCDriver6PWM`	The inverter	Six MOSFETs on the G431
`BLDCMotor`	The control maths	—

`BLDCMotor` owns the algorithm and is told about the other two with `linkSensor()` and `linkDriver()`. Nothing else connects them, which is why a missing `link` call produces a motor that initialises cleanly and then does nothing sensible.

17.3 - The two loops

Every iteration runs **two nested controllers**, and keeping them straight is most of understanding the library:

- `motor.loopFOC()` — the **inner** loop. Reads the angle, works out where the field should point, and sets the PWM duty cycles. It runs as fast as you can call it (above 10 kHz), and its rate is the loop frequency you read back with the commander's `F` command.
- `motor.move(target)` — the **outer** loop. Turns your set-point (a position, a speed, or a torque) into the q-axis demand the inner loop chases.

The inner loop is where speed matters; the outer loop is where tuning matters.

> ⚠ Both must be called every iteration
>
> `loopFOC()` without `move()` holds whatever demand it last had. `move()` without `loopFOC()` updates a number nothing acts on. Anything blocking in `loop()` - a `delay()`, a slow `print` - drops the inner-loop rate and shows up as a motor that runs rough at speed.

17.4 - What the inner loop actually computes

Distilled from the library, with the bookkeeping removed:

```
void loopFOC() {
  sensor.update();

  // 1. Mechanical angle -> electrical angle.
  //    A motor with p pole pairs turns through
p electrical revolutions
     //          for   every   mechanical   one.
zero_electric_angle comes from initFOC().
                float        angle_el        =
normalizeAngle(sensor.getAngle() * pole_pairs
                      - zero_electric_angle);

  switch (torque_controller) {

    case TorqueControlType::voltage:
        // No current measurement. Ask for a
voltage and hope; cheap and
      // adequate at low speed. This is where
you start.
      Uq = target_voltage_q;
      Ud = 0;
      break;

    case TorqueControlType::foc_current:
       // 2. Measure two phase currents; the
third follows from ia+ib+ic = 0.
                     PhaseCurrent_s    c    =
```

```
current_sense.getPhaseCurrents();

       // 3. Clarke (abc -> alpha/beta) then
Park (alpha/beta -> d/q),
      //    using angle_el. The output is two
DC values, not sinusoids.
                        DQCurrent_s    i    =
current_sense.getFOCCurrents(angle_el);

      // 4. Two independent PI controllers on
those DC values.
       //    q is torque-producing; d is pure
flux and is driven to zero
        //     because it costs current and
produces nothing.
    Uq = PID_current_q(target_current_q - i.q);
      Ud = PID_current_d(0.0f - i.d);
      break;
  }

  setPhaseVoltage(Uq, Ud, angle_el);
}
```

The Park transform is the trick worth internalising. In the stationary frame the phase currents are three sinusoids and there is nothing steady to control. Rotating the frame with the rotor turns them into **two constants**, i_d and i_q, and a constant is something an ordinary PI controller can hold. Then you rotate back:

```
void setPhaseVoltage(float Uq, float Ud, float
angle_el) {
  // Inverse Park: back to the stationary frame
   float Ualpha = Ud * cos(angle_el) - Uq *
sin(angle_el);
   float Ubeta  = Ud * sin(angle_el) + Uq *
cos(angle_el);

   // Inverse Clarke: two axes back to three
phases
  float Ua = Ualpha;
  float Ub = -0.5f * Ualpha + _SQRT3_2 * Ubeta;
  float Uc = -0.5f * Ualpha - _SQRT3_2 * Ubeta;

  // Shift to sit around mid-rail, since the
inverter cannot output
  // a negative voltage, then hand duty cycles
to the hardware.
   driver.setPwm(Ua + Udc/2, Ub + Udc/2, Uc
+ Udc/2);
}
```

Setting $U_d = 0$ and driving only U_q is exactly "put the field 90° ahead", expressed in coordinates. Everything above is the machinery for saying it in terms the three phases understand.

17.5 - What the outer loop computes

`move()` is a cascade, and which stages run depends on `motor.controller`:

```
void move(float target) {
  switch (controller) {
    case MotionControlType::angle:
      // position -> velocity -> current, all
three stages
        shaft_velocity_sp = P_angle(target -
shaft_angle);
                              target_current_q
=      PID_velocity(shaft_velocity_sp       -
shaft_velocity);
      break;

    case MotionControlType::velocity:
       target_current_q  = PID_velocity(target
- shaft_velocity);
      break;

    case MotionControlType::torque:
     target_current_q  = target;   // straight
through
      break;
  }
}
```

This is why the commander's `T` means something different in each mode — it is the input to whichever stage is outermost. It is also why tuning proceeds inside-out in Module 4: the velocity PI has to be right before the position P above it can be.

17.6 - Alignment, and why the motor twitches at power-on

`motor.initFOC()` performs the one calibration FOC cannot do without. The sensor reports *some* absolute angle, but nothing tells it how that number relates to the motor's magnetic poles - that depends on how the magnet was glued on and how the phase wires happened to be soldered. So `initFOC()` drives a known field, watches which way the rotor moves and where it settles, and stores two things:

- **`zero_electric_angle`** - the offset between sensor zero and electrical zero
- **sensor direction** - whether the sensor counts up or down relative to the motor's positive rotation

That is the twitch you see at every power-on. If it is skipped or wrong, the field is placed at the wrong angle and the motor draws current while producing little torque, or runs away.

> **i** Why the UVW order does not matter
>
> Module 3 says you can solder the phase wires in any order. Swapping two phases reverses the motor's direction, and `initFOC()` measures direction rather than assuming it - so the calibration simply comes out with the other sign. The cost of getting it "wrong" is a stored constant, not a rework.

17.7 - The main ESC code

Setup is configuration; the loop is two calls. Trimmed to the parts that matter:

```
#include <SimpleFOC.h>

BLDCMotor motor = BLDCMotor(7);              //
pole pairs
BLDCDriver6PWM            driver             =
BLDCDriver6PWM(A_PHASE_UH, A_PHASE_UL,
                                    A_PHASE_VH,
A_PHASE_VL,
                                    A_PHASE_WH,
A_PHASE_WL);
MagneticSensorSPI           sensor           =
MagneticSensorSPI(AS5047_SPI, PA15);

float target = 0;

void setup() {
  sensor.init();
  motor.linkSensor(&sensor);

  driver.voltage_power_supply = 14.8;
  driver.init();
  motor.linkDriver(&driver);

                motor.foc_modulation         =
FOCModulationType::SpaceVectorPWM;
        motor.controller                     =
MotionControlType::velocity;

  motor.PID_velocity.P = 0.2;
  motor.PID_velocity.I = 20;
   motor.LPF_velocity.Tf = 0.01;    // velocity
is differentiated, so filtered
  motor.voltage_limit   = 6;      // the safety
net -- set it low first

  motor.init();
  motor.initFOC();                // alignment
happens here
}

void loop() {
  motor.loopFOC();
```

```
  motor.move(target);
}
```

The pole-pair count must match the motor or every angle in the chain is wrong by a fixed ratio, and the symptom is a motor that vibrates instead of turning. `voltage_limit` is the one setting to get right before the first spin-up: it caps what the inner loop can ask for regardless of what the outer loop demands.

17.8 - Where to look next

- SimpleFOC communication docs — the commander interface used all through Module 3
- Commander motor reference — every letter the commander accepts
- The G431 ESC board — what `driver.setPwm()` is actually driving

18. Software

18.1 - ESC

Code for the B-G431B-ESC1 motor controller using the SimpleFOC library: FAAV-G431-ESC.
Used in Module 3 and Module 4.

18.2 - Flight controller

- **Current** — ESP32, based on FreeRTOS tasks: FAAV-Flight-Controller

Outdated versions, kept for reference:

- Old EPFL code for NRF52: FAAV-Seeeduino
- Old MIT code for NRF52/ESP32: FAAV-AUK

18.3 - PCB

- FAAV-PCB-v3 — current board, including the BOM in the Manufacturing/Assembly folder

18.4 - External documentation

- SimpleFOC communication
- SimpleFOC commander
- XIAO ESP32S3 getting started

> ! Access
>
> Confirm before the semester that students have read access to these repositories, and pin the branch or tag each module expects. “Latest main” changing under a cohort mid-semester is the most likely way this manual goes stale without anyone noticing.

19. PCB revisions

To interface the MCU to the rest of the FAAV, a custom PCB is required. As of April 2026 the latest board in the FAAV is **v3.0**. More information is in the FAAV-PCB-v3 repository.

Version	Also called	Notes
v1.0	EPFL PCB	Details below
v2.0	MIT PCB	Details below
v3.0	FAAV PCB v3.0	Current board

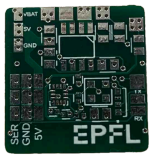


Figure 19.1: v1.0

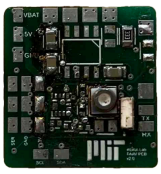


Figure 19.2: v2.0



Figure 19.3: v3.0

19.1 - v3.0 overview

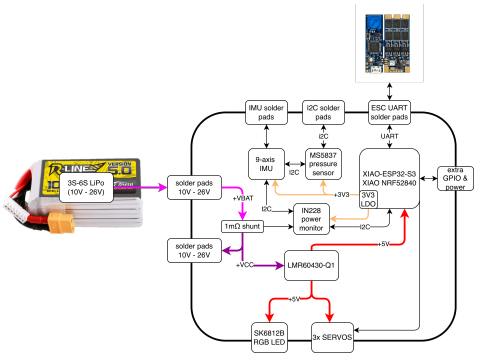


Figure 19.1: FAAV PCB v3.0 block diagram

The PCB is 4 layers, 21 × 28.5 mm, and has 34 components. The complete BOM is in the Manufacturing/Assembly folder of the repository.


Assembly and bring-up are covered in Module 9.

19.2 - v1.0 — EPFL

A 2-layer PCB. Its purpose is to connect the flight controller to the battery, ESC and so on, and to provide additional functionality. It was designed with the Fusion360 PCB designer. The PCB contains a current sensor, a voltage


sensing circuit, a pressure sensor for measuring water depth, water sensing probes, an LED, an IMU, and several pads for soldering cables. The IMU and current sensor connect to the MCU over I²C.

> ⚠ **Kapton between flight controller and PCB**
>
> To prevent short circuits, put a layer of Kapton tape between the flight controller and the PCB when soldering the Seeeduino to the PCB.

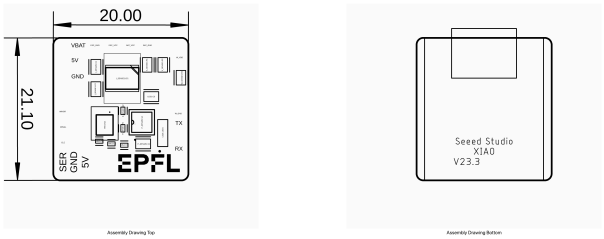


(a) Top (b) Bottom

Figure 19.2: PCB v1.0 assembly drawings

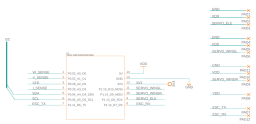

(a) MCU pin mapping on PCB

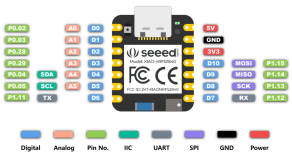

(b) Pin map for XIAO nRF52840 (Sense) MCU

Figure 19.3: Pin mapping of PCB pins and flight controller pins

19.2.1 - Component list

Table 19.1: PCB v1.0 components

Names	Component description	Supplier	Item number
IMU1:C1	Capacitor 0.1 µF (0402)	Mouser	581-KGM05AR51A104KH
I_SENSE1:C1, LED1:C3, P_SENSE1:C1	Capacitor 0.1 µF (0805)		
P_SENSE1:R1, P_SENSE1:R2	Resistor 10 k (0402)	Mouser	71-CRCW040210K0FKEDC
IMU1:C2	Capacitor 10 nF (0402)	Mouser	581-KGM05AR71C103KH
I_SENSE1:C2	Capacitor 10 nF (0805)		
W_SENSE1:R3	Resistor 1 M (0805)		
IMU1:C3	Capacitor 2.2 µF (0402)	Mouser	581-KGM05AR51A225KH
V_SENSE1:R1	Resistor 330 k (0805)		
V_SENSE1:R2	Resistor 33 k (0805)		
LED1:LED1	LED 4691 Adafruit	Mouser	485-4691
I_SENSE1:IC1	Current sensor ACS723LLCTR-20AU-T, Allegro	Mouser	250-723LLCTR20AUT
IMU1:IC1	IMU ICM-42688-P, TDK InvenSense	Mouser	410-ICM-42688-P
P_SENSE1:U1	MS583730BA01-50, TE Connectivity	Mouser	824-MS583730BA01-50
I_SENSE1:BAT_GND_REG, I_SENSE1:BAT_VCC_REG	Pin header		
MCU1:U1	XIAO nRF52840 / Sense, Seeed Studio		

19.3 - v2.0 — MIT

The goal of this version was to fix existing functional problems (I^2C, pad spacing) and to introduce a new external I^2C pad for GPS functionality. It is also designed to function by default with both the newer ESP32S3 chips and NRF52 chips. Improvements in range through WiFi connection are expected. **Manufacturing steps are identical to v1.0.**

19.3.1 - ESP32 compatibility

Hardware and software arrangements were needed for XIAO ESP32S3 compatibility. For software see Software.

Hardware changes: a new PCB housing part allowing SD card removal and reinsertion, a WiFi antenna housing case, and a GPS housing case.

SD card notes

1. SD cards should be formatted to a specific format (FAT32, believed).
2. Use non-sharp tweezers to gently extract the SD card from the PCB case — otherwise you risk breaking the card and making it unreadable.
3. For simultaneous servo and SD card usage, be careful not to use the same pins as on the previous chip for servos; TX and RX are used for SD card communication. You may use the secondary microSD card PCB's two additional pins.

19.3.2 - Waterproofing

The method changes slightly from Module 10. Admittedly it can be vastly improved, but it works:

1. Insert the assembled PCB, making sure the secondary SD card PCB does not come loose, and that the WiFi antenna is properly inserted.
2. Insert the USB-C cable into the port, and a microSD card in the relevant slit.
3. Tape the bottom of the PCB so no silicone escapes when pouring. Pour silicone, using a needle to ensure there are no air bubbles between layers.
4. When fully cured, the SD card is very hard to remove if the protective section broke off during assembly. It can be salvaged by cutting around three sides of the SD card with a knife and opening it like a trap door, freeing the stuck sections. The trap door can then be sealed with epoxy or more silicone — only on the surface, as you do not want to block the SD card again.

The WiFi antenna should also be potted. Currently the same housing case as for the ESC is used: tape the bottom of the box with Kapton tape, stick the antenna to the bottom of the casing (normally all in sticker form), then pot it with silicone. The silicone layer should be left relatively thin.

> **i** The antenna stops working when wet
>
> It works again once dried. This is expected behaviour, not a fault.

19.3.3 - Points for a redesign

- Incorrect wiring for pressure sensor — SDA and SCL are swapped.
- Cover the vias (currently open vias).
- Vias on pads of small SMD components are not optimal for soldering, or just cover the vias.
- Increase pad spacing for the cables.
- Current sensor: possibly change to a 3.3 V part. Currently a 5 V sensor is used, so current should not exceed $(3.3\,\mathrm{V} - 0.5\,\mathrm{V})/0.2\,\mathrm{V/A} = 14\,\mathrm{A}$ without risking damage to the analog ports of the Seeeduino.
- ~~UART RX and TX are swapped~~ *(resolved)*

20. CNC — Stepcraft D660

Used in Module 5 for the carbon frame, the aluminium crank and linkage, and the PEEK gears.

20.1 - Full guide

The complete Stepcraft guide is available as a PDF:

- CNC Stepcraft D600 LIS guide (PDF)
- Original wiki version: wiki.epfl.ch/lis/cnc-stepcraft

> ⚠ Before every job
>
> Make sure the **0 of the machine is at the right location in your file**, and check the orientation of the axes.

20.2 - Cutpath generation

Fusion360 generates cutpaths from the parts in the *manufacture* tab, and allows for *manufacturing models*, where parts can be recombined, realigned and even modified. Chamfers on the body plates were added in the manufacturing model rather than in the design.

Operation order: **holes → chamfers → pockets → outline.**

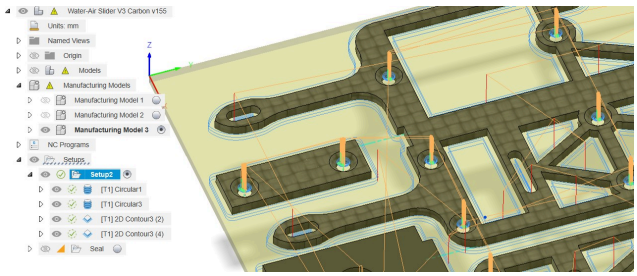


Figure 20.1: Manufacturing model in Fusion360

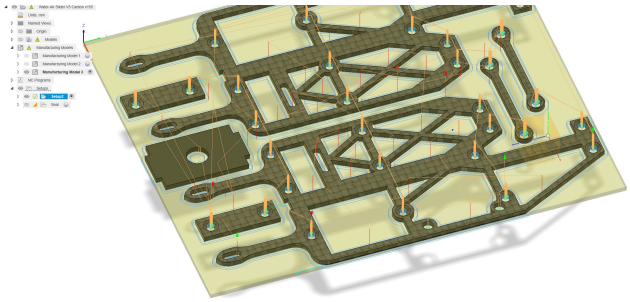


Figure 20.2: Setting up on the machine

20.3 - Material-specific notes

Material	Thickness	Notes
Woven carbon	1.5 mm (varies 1.5–1.6)	Body plates, top and bottom identical except chamfers
Aluminium	5 mm	Crank and linkage. Linkage faced down from 5 to 4 mm. Use a 2 mm endmill, flood the part
PEEK	5 mm	Gears. Cutting underwater gives good results. Keep advance speed low enough to cut teeth cleanly

! MIT equivalent

The linked guide is for the EPFL machine. Confirm which machine the class will actually use at MIT and either re-shoot this guide or replace the link.

21. Design notes

Why the robot is built the way it is. Not needed at the bench — useful for your report, and for anyone changing the design.

21.1 - Why an FOC ESC

Several ESC solutions were explored for the FAAV concept:

- **Regular drone ESCs.** Hobbyking 12A and EP Aer11 were tested. Both start **losing synchronisation at low speed**, which is a problem for water propulsion — precisely the regime the robot spends most of its time in.
- **FOC ESCs** tend to be more complex and larger. The **G431-ESC1** board is favourable and had already been explored in the lab.

That tradeoff — accepting a larger, more complex driver to get usable low-speed torque control — is the reason Module 3 spends a whole module on the driver.

21.2 - Speed ceiling and sensor lag

Maximum speed went from **500 to 1700 rad/s**, enough to drive the wings at 10 Hz, through a combination of sensor and MCU changes documented in Module 4. The remaining constraint is sensor lag: above 500–600 rad/s, uncompensated lag shows up as high current draw and noise rather than as a hard speed limit.

Compensation is currently hand-tuned every 100 rad/s with a fitted function used on the robot. Automating this — ramping through the speeds while minimising phase current — is open work.

21.3 - Gearbox corrosion

By default the gearbox on the FAAV4 is not waterproof at all, and it is normal for it to fill completely with water once submerged. This was considered acceptable: over more than a year of repeated use in water, including in Lake Geneva, a gearbox was opened and showed no sign of corrosion.

Proper lubrication — a mix of **CorrosionX and white lithium grease** - help with corrosion problems. The practical procedure is in Module 10.

21.4 - Housing material tradeoff

Foam	Floatability	Absorption	Impact behaviour
Extruded polystyrene	Best, low density	Zero	Brittle; little help damping landings
Closed-cell polyethylene	Decent, relatively low density	Light	Compliant; usable as protection

A multi-material housing has never been built but would likely be better than either.

22. Changelog

Corrections and additions published during the semester, newest first.

If you are working from a printed copy, check this page before each module. Changes that affect a step you may already have completed are marked in **bold**.

> For maintainers
>
> One row per change: date, page, what changed, and whether teams need to redo anything. Do not edit a step silently — a dated entry is what lets a student at the bench trust the rest of the page.

22.1 - fall-2026

Date	Page	Change	Action needed
—	—	Manual published for the Fall 2026 cohort, derived from *FAAV Manufacturing Guide* v4.0	—