6 Sewtooth Weve Flow Chert. PIC Activity Start set DAC to Zero and tell it to input to RAZ Crezte 2 U8 counter1 U8 U8 My Counter = 01 loop forever. update DAC to hold Velue of U82hyCounter do anything but add to counter. It will roll bech

sit and Wait for

for 4 Microseconds


add one to counter

U8My Counter++i


to Zero on

its own.


Slow Trienguler Weve

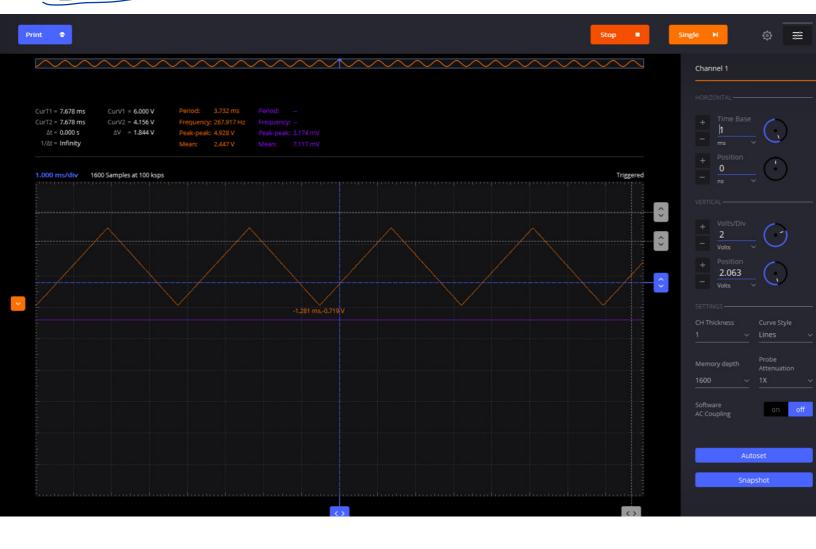


Fast Saw Tooth Wave

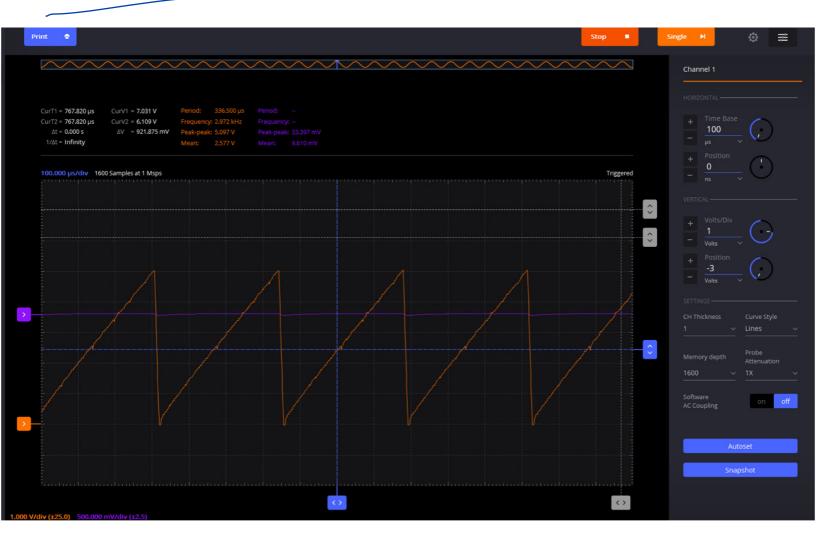

Slow Sine Wave

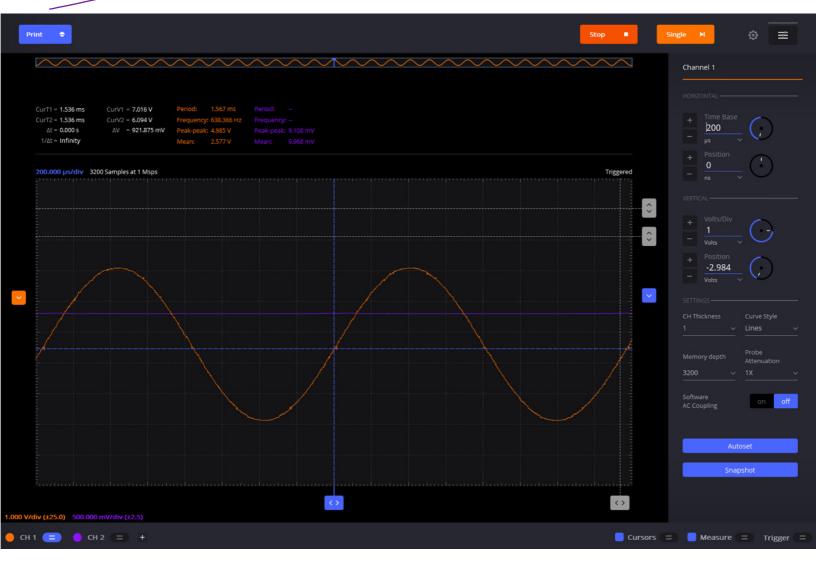

One LHZ Sine Weve

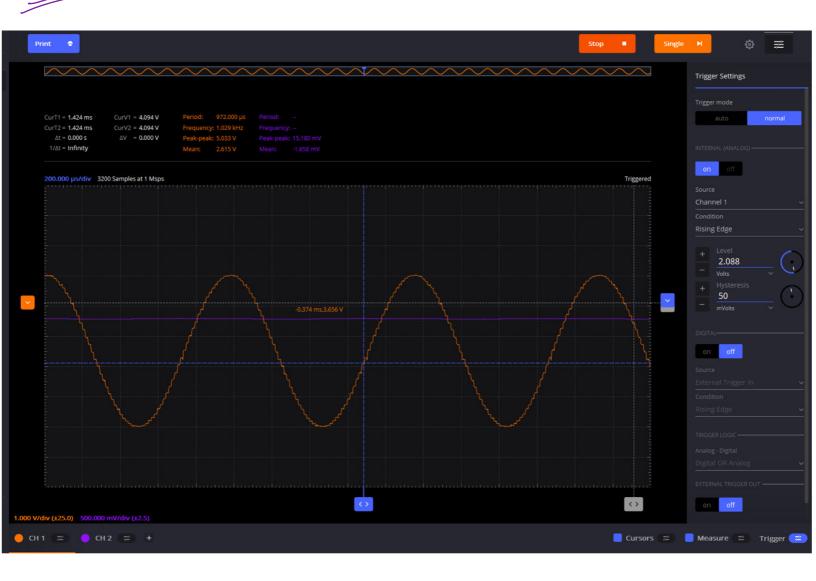

Blant Page