

Tutorial 10;


- Create a sketch plane as shown

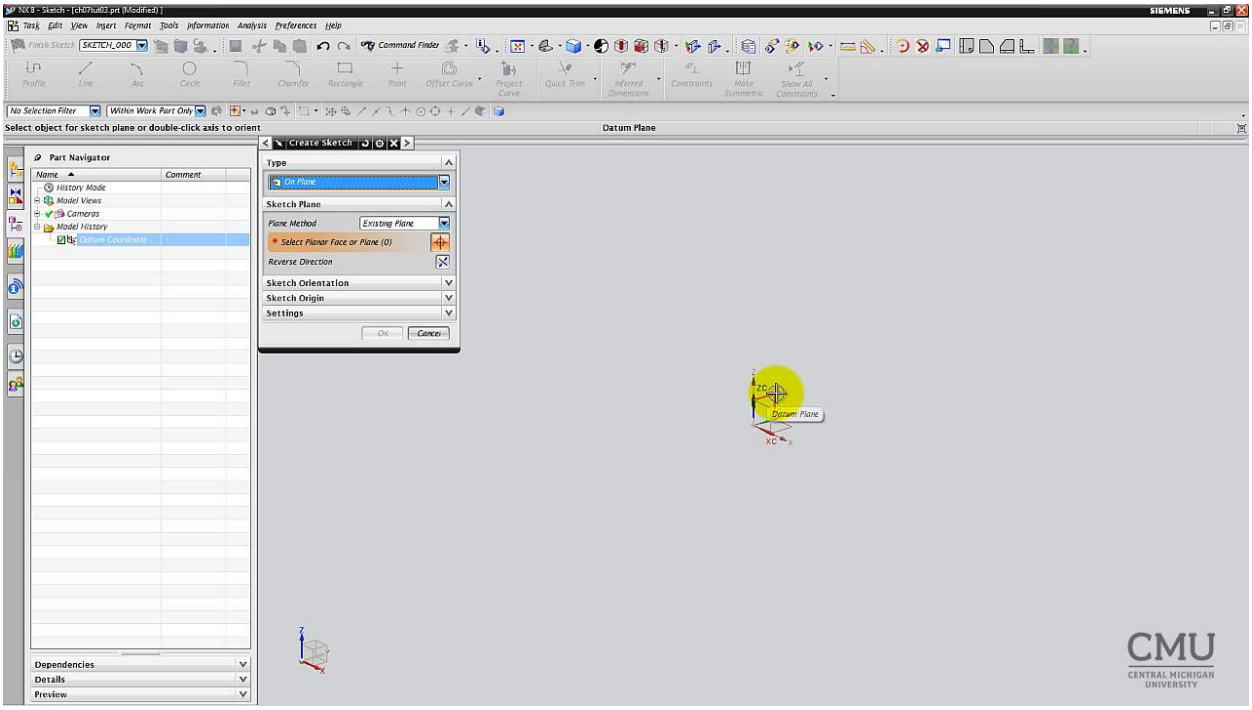


- Reproduce the exact geometry shown below

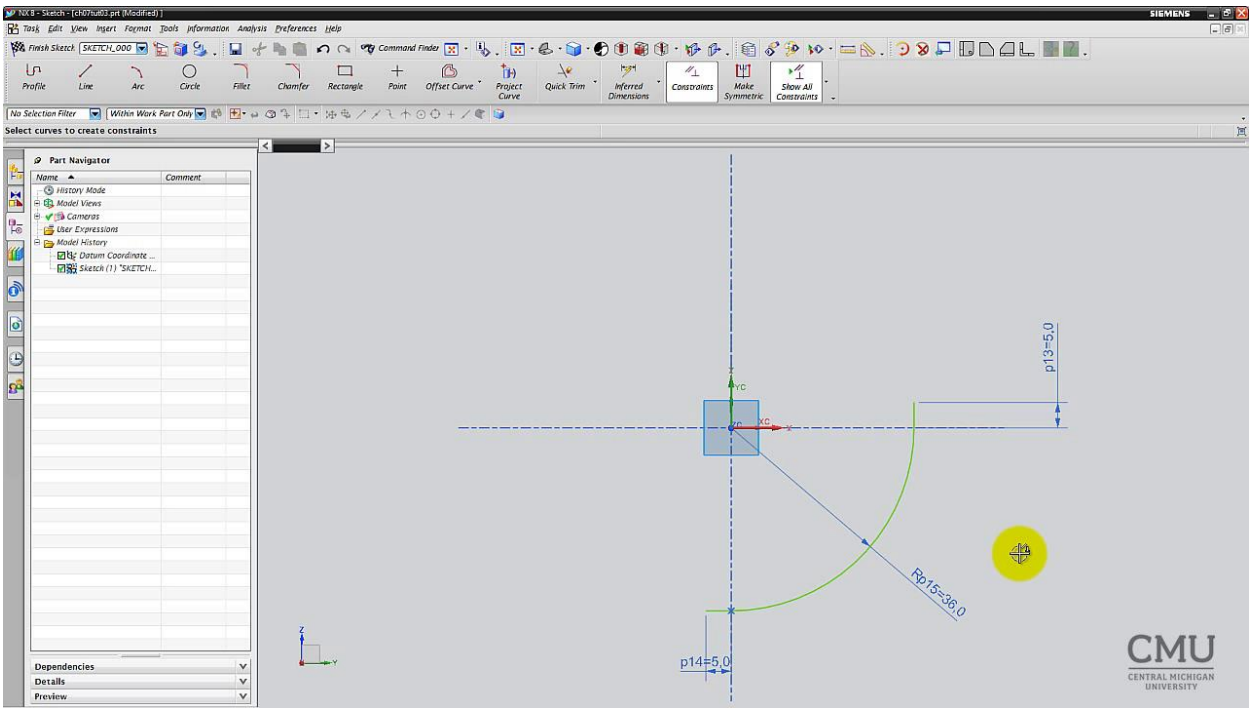


- Insert an inferred plane at the tip of the curve as shown

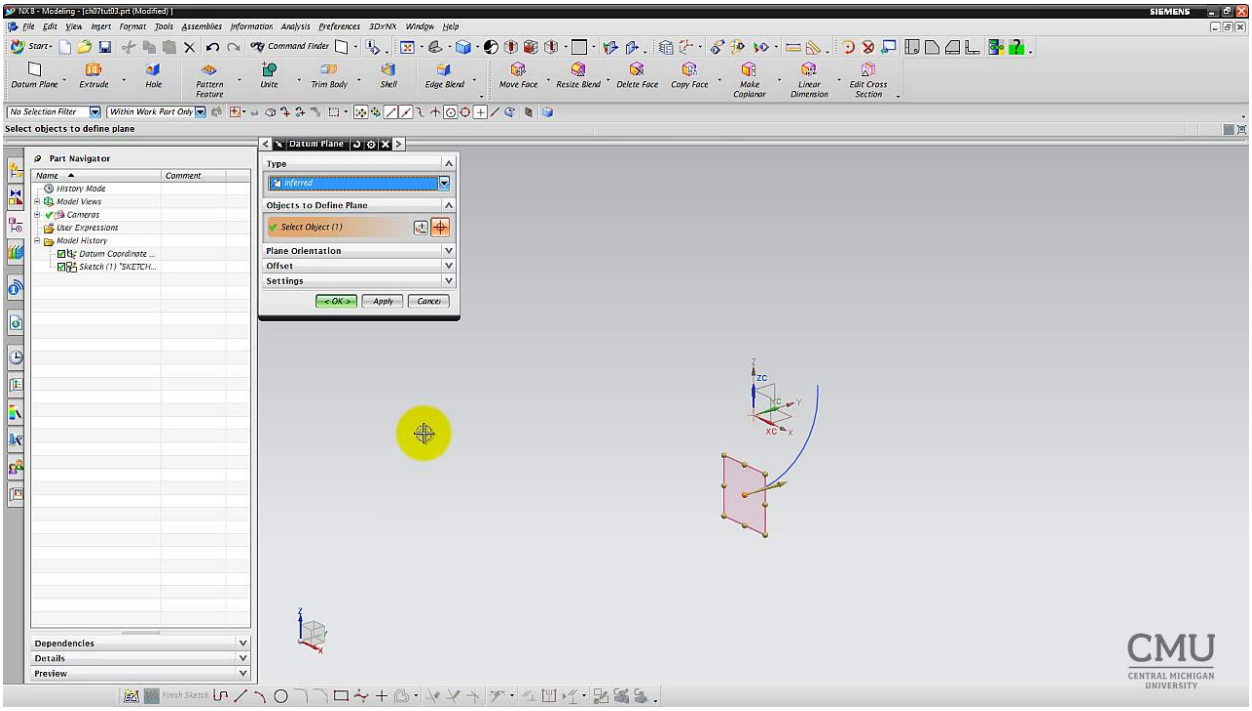


- Create a sketch on the newly created plane as shown

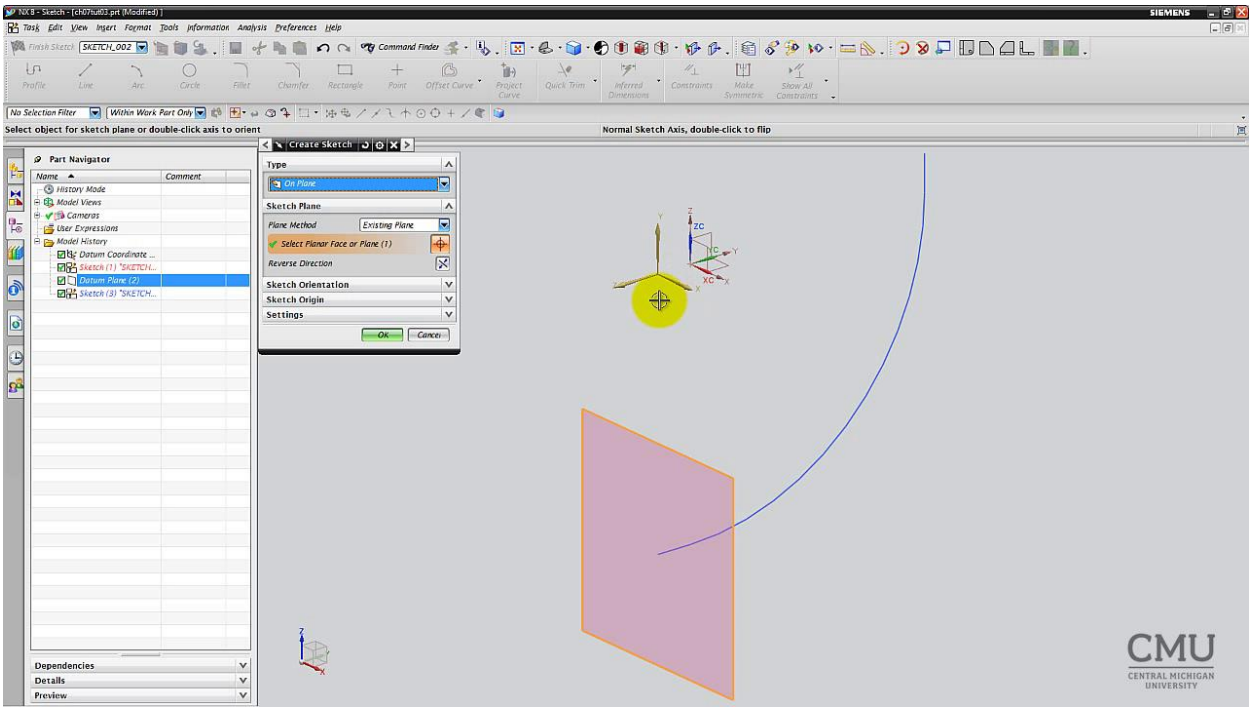


- Reproduce the geometry below on the plane

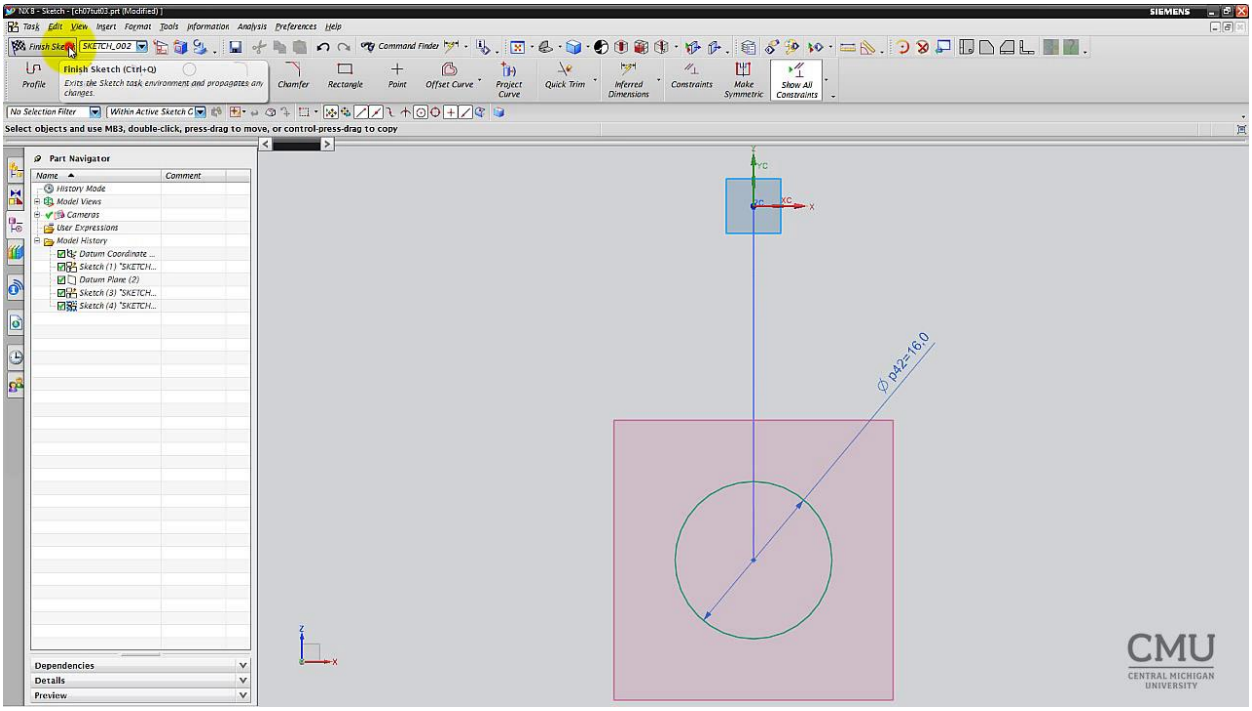


- Sweep the circular profile along the curve to produce a result as shown below

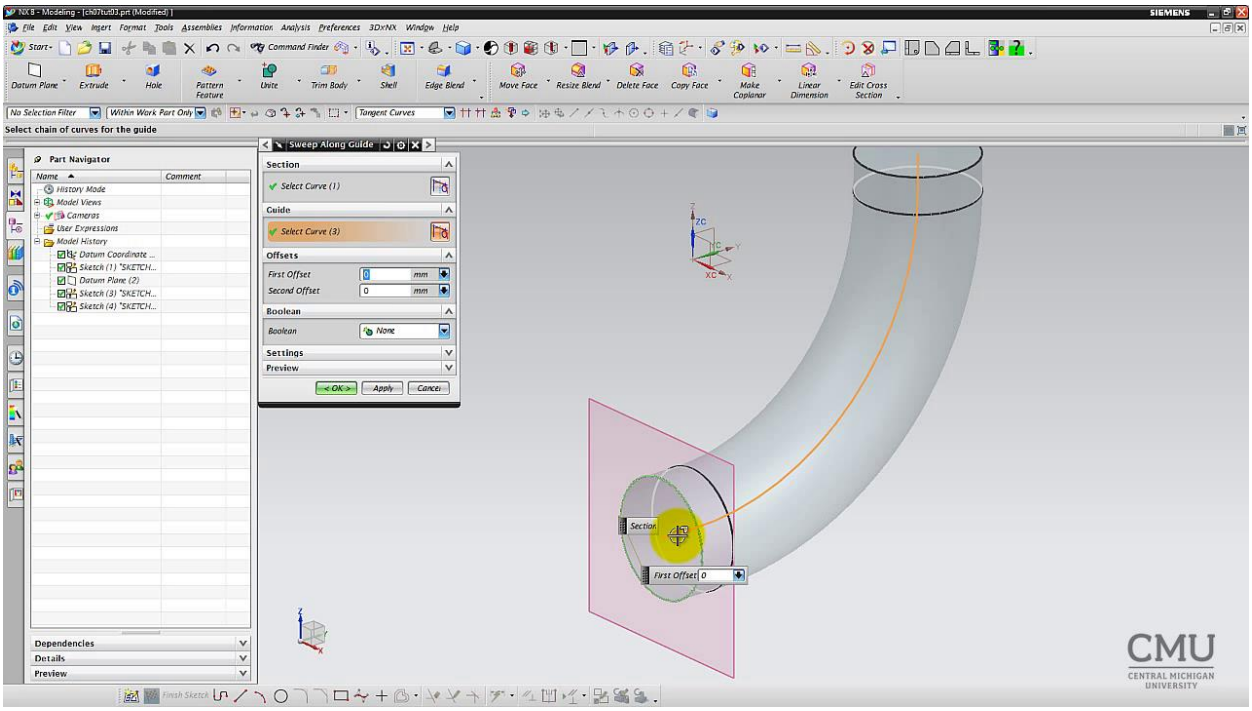


- Shell outside the model as shown below

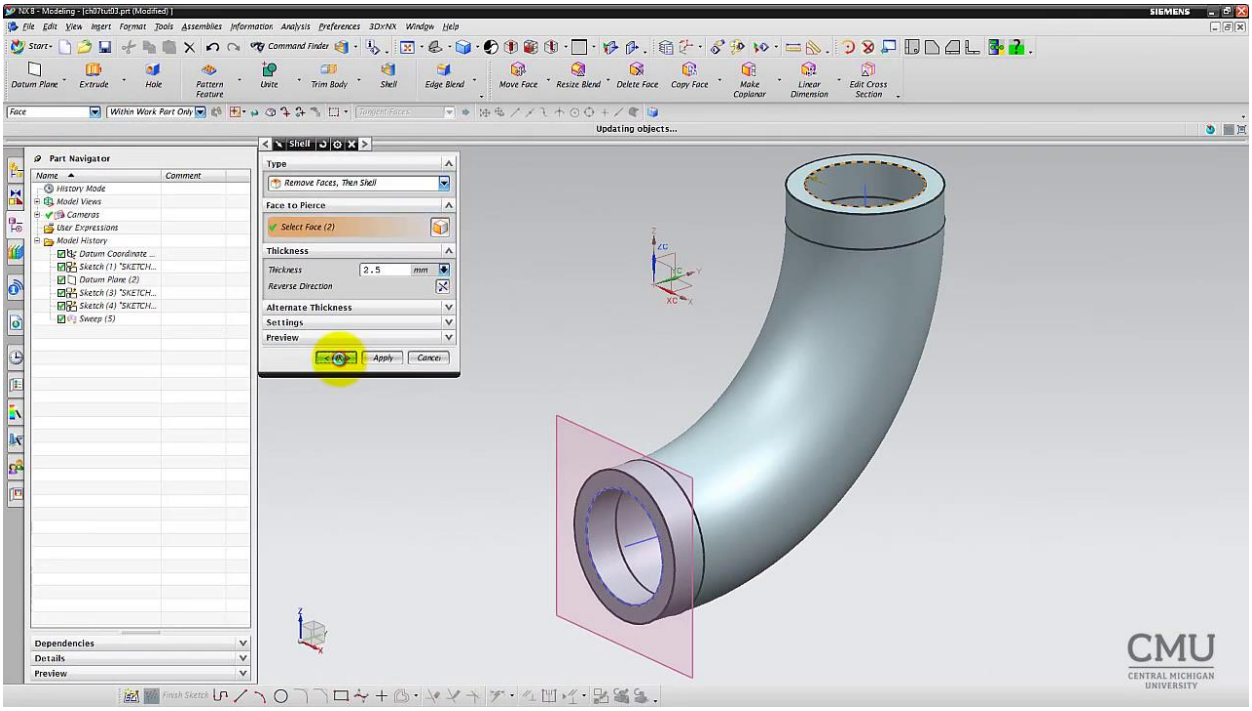


- Create a sketch plane on the end face as shown

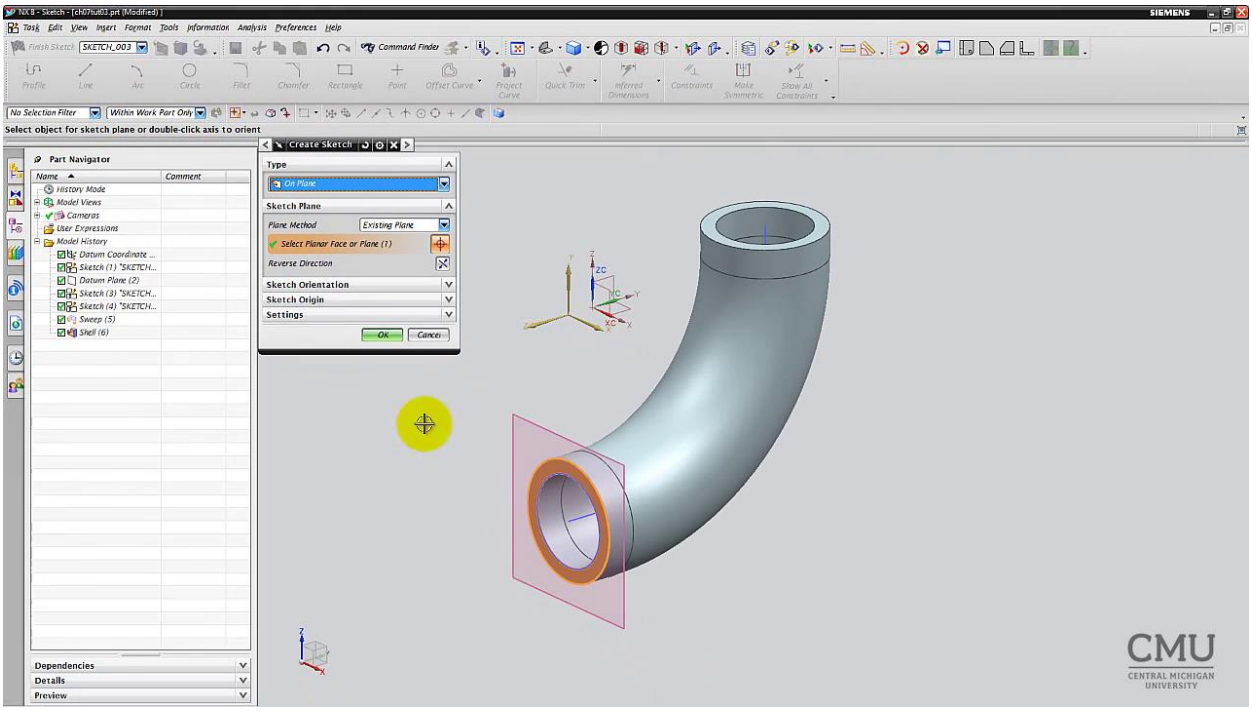


- Create the exact geometry below on the end face

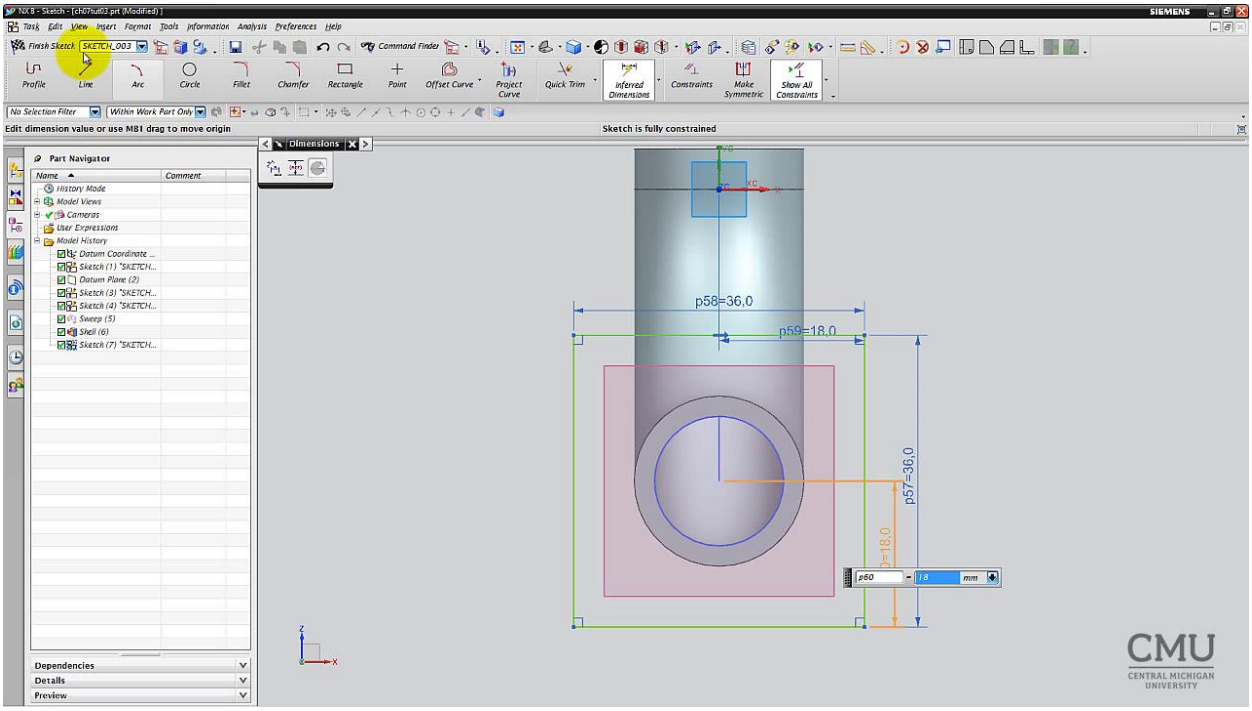


- Extrude the sketch as shown below

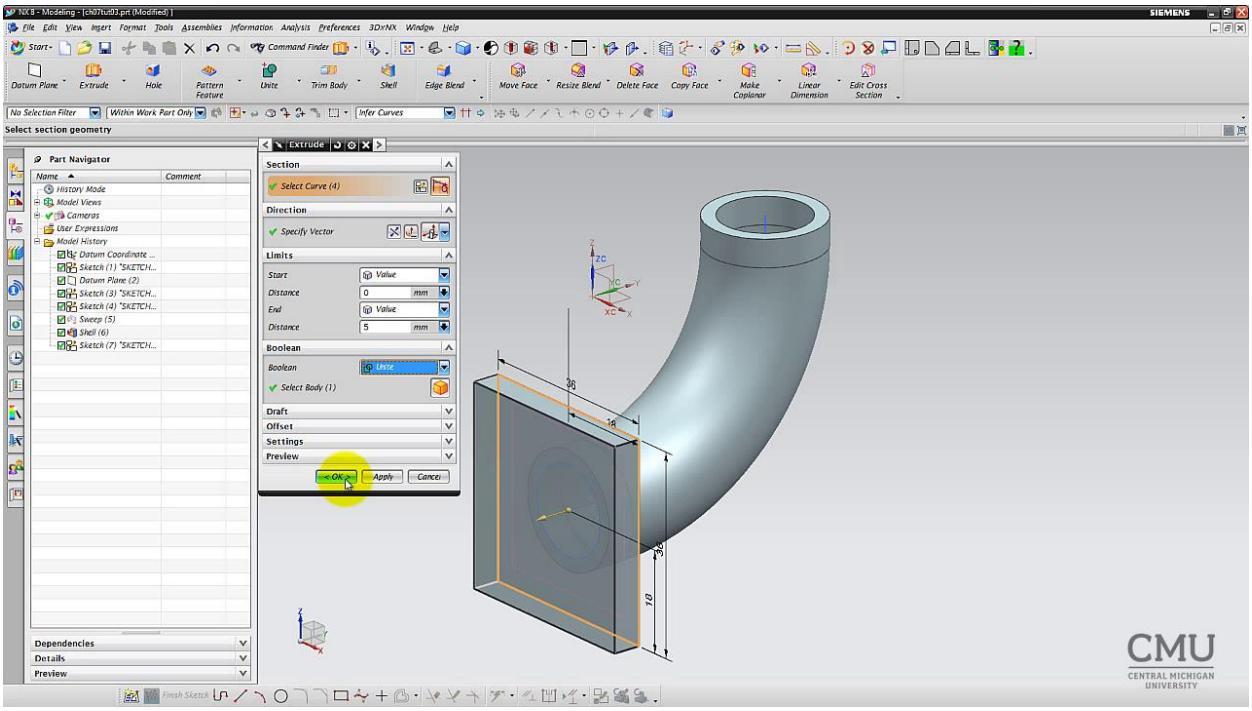


- Create another sketch plane on the other end of the model as shown

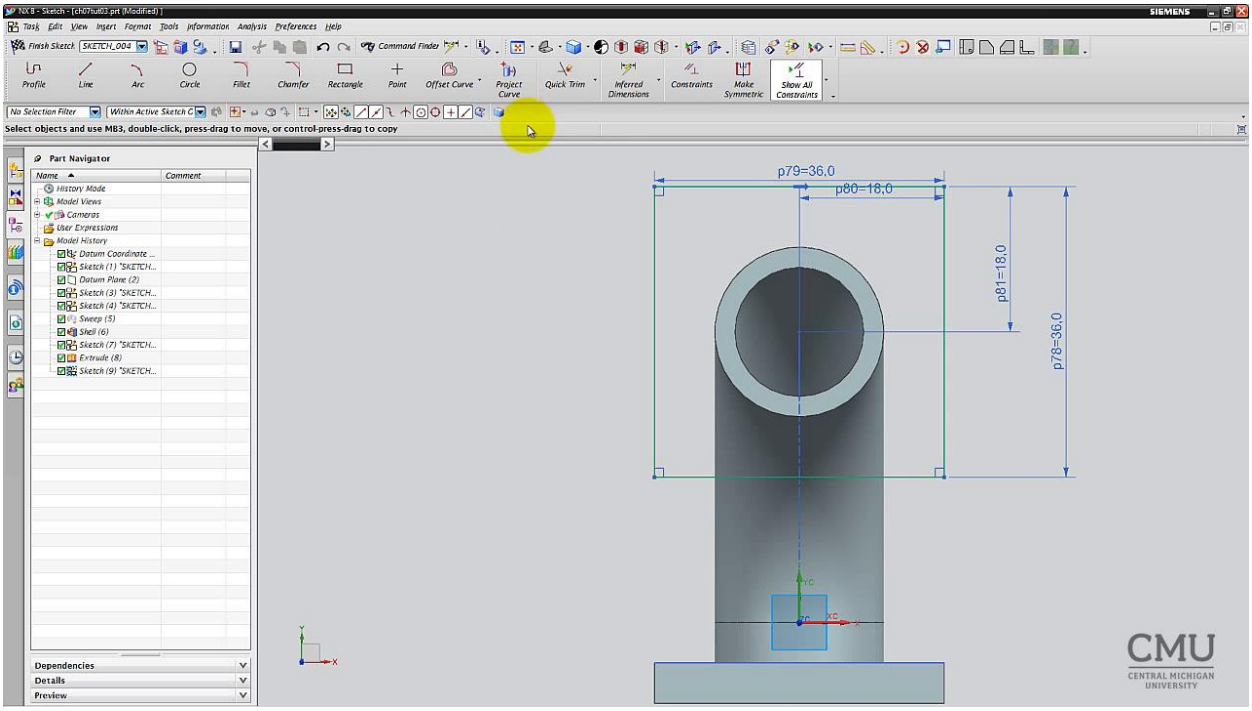


- Project the inner circle of the part into the new sketch layer as shown below

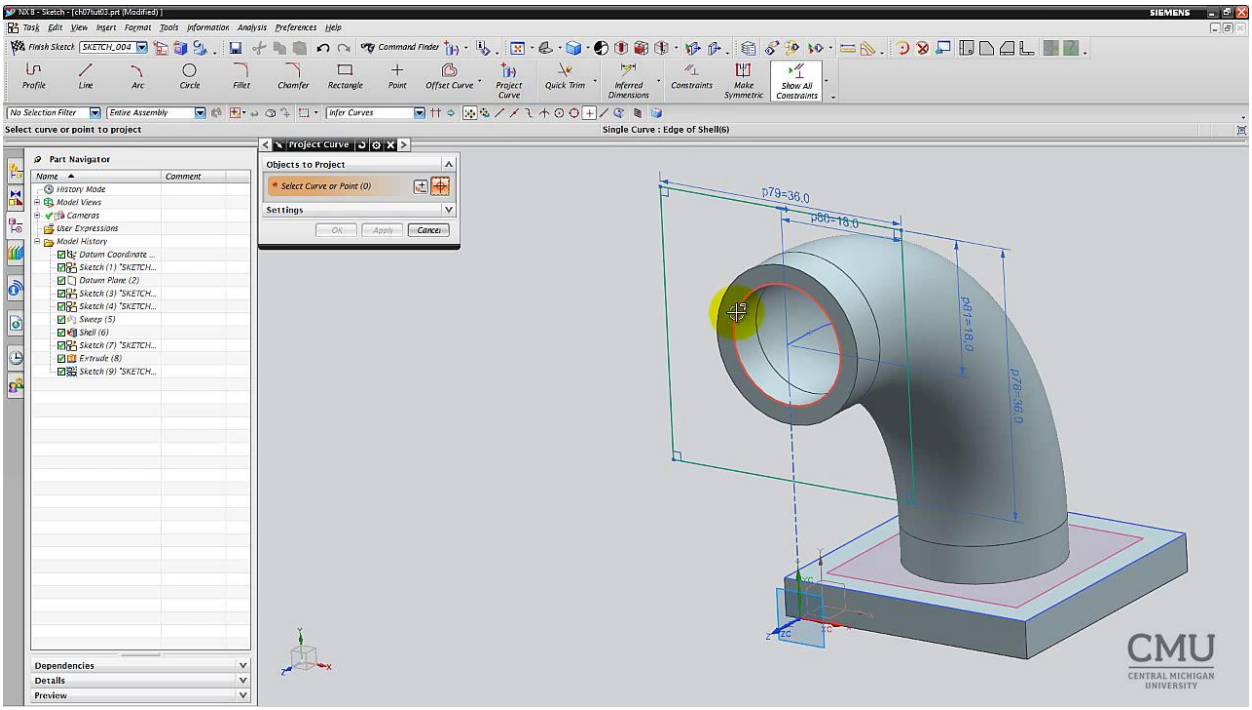


- Extrude the new created sketch as shown in the diagram below

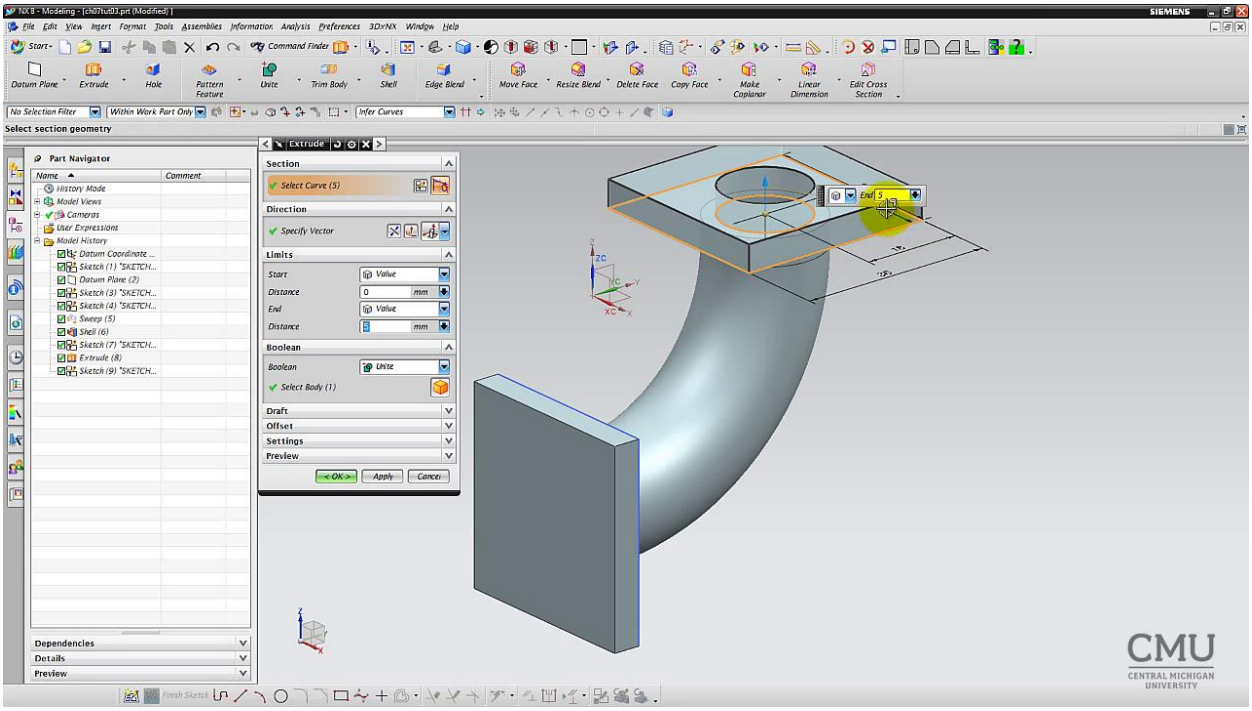


- Create a hole with the parameters and at the position shown below

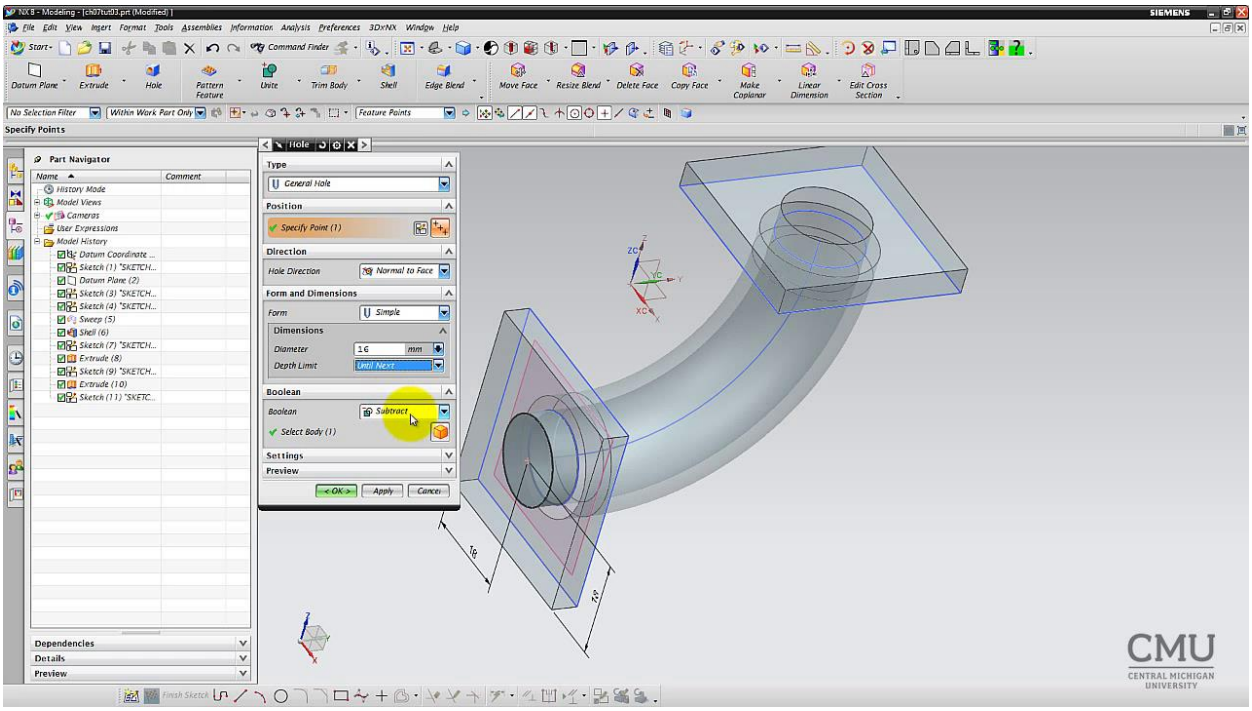


- Blend the ends of the flanges as shown below

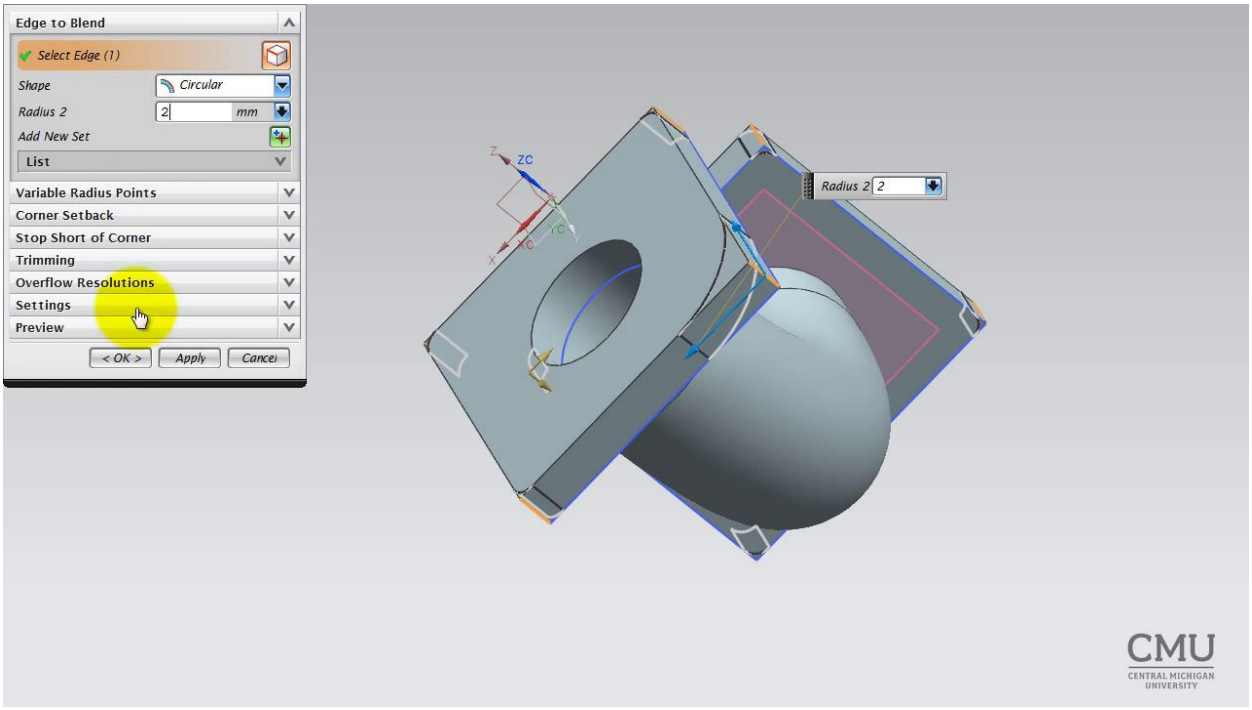


- Create a counter bore hole with dimensions and at the position shown below

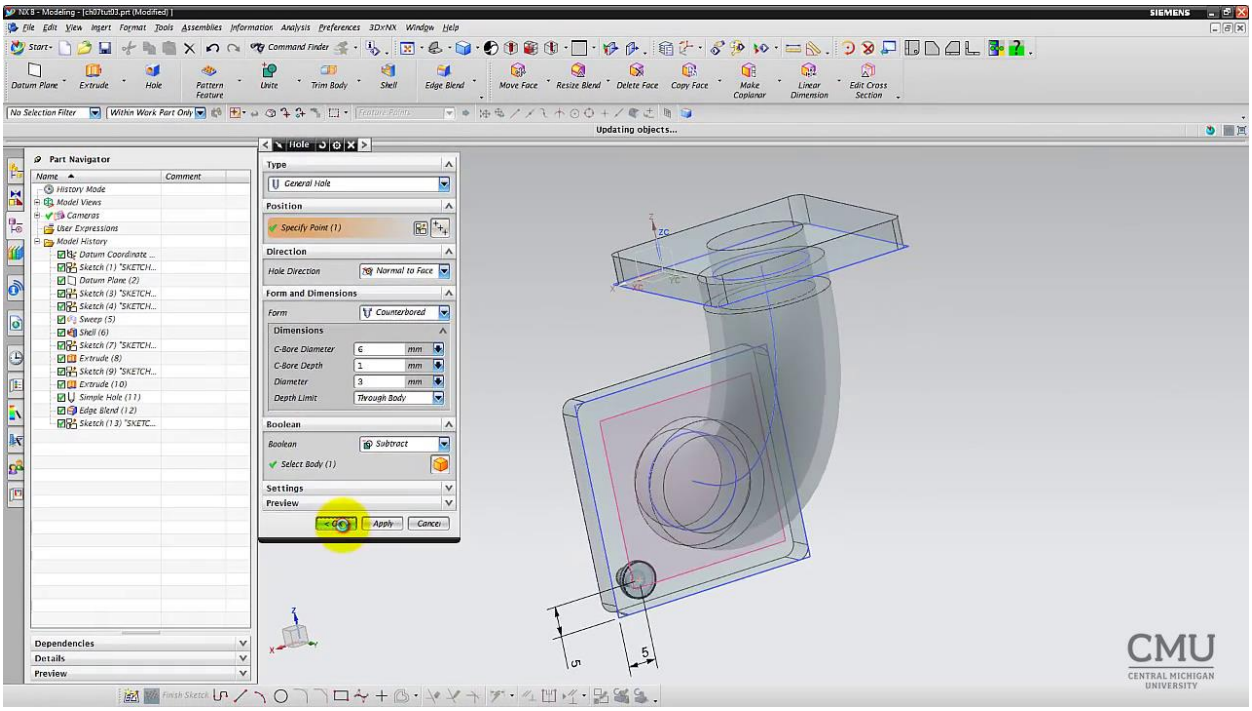


- Use the pattern feature tool to copy the counter bore holes around the flange

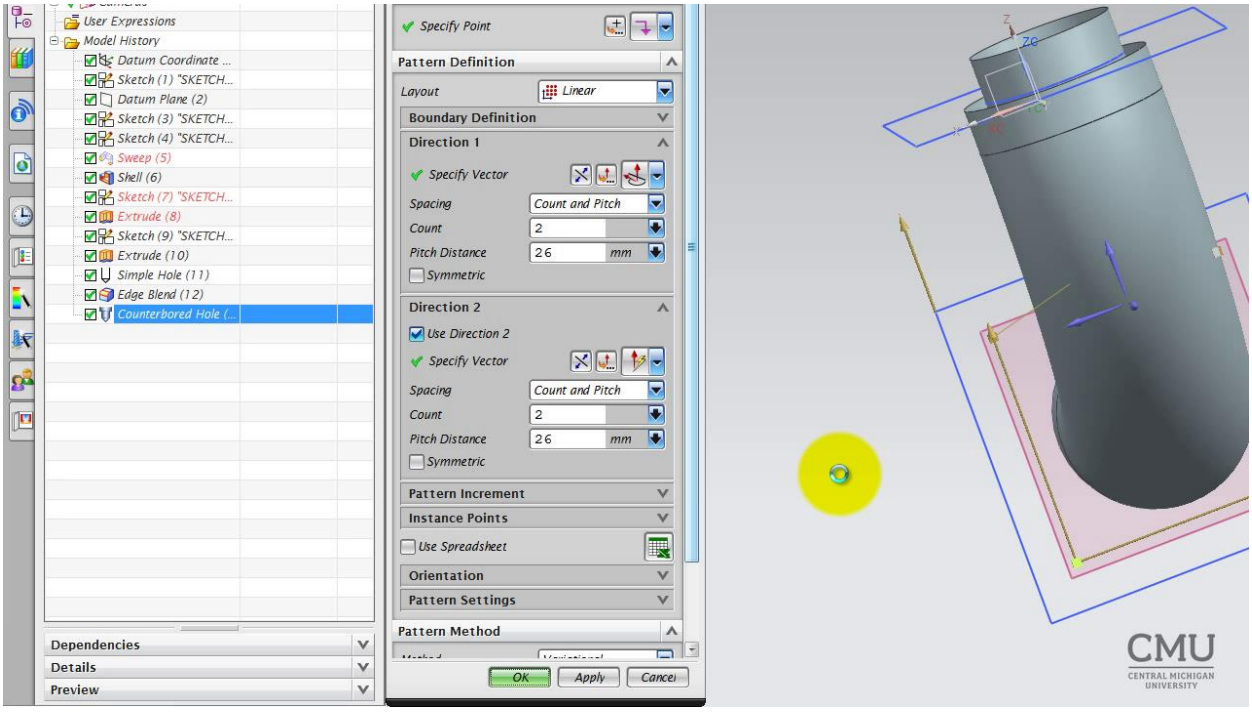


- Position a counter bore at the other flange as shown below

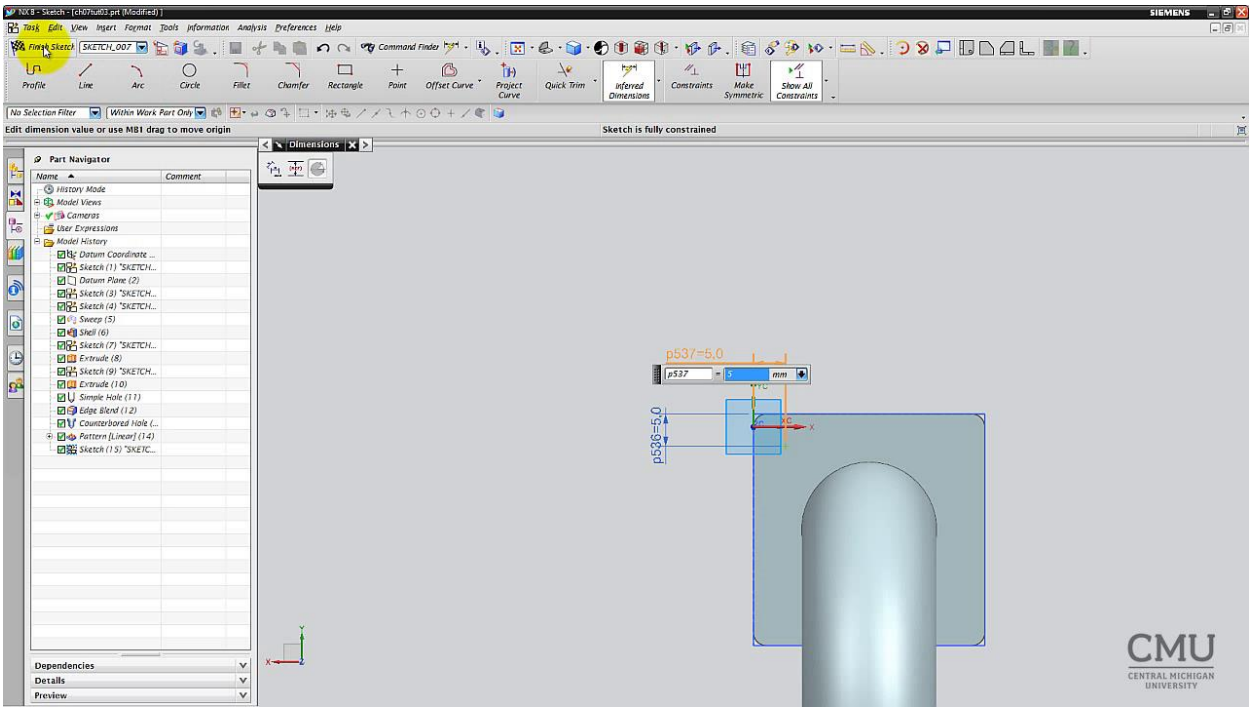


- Use the details in the diagram below to dimension the counter bore

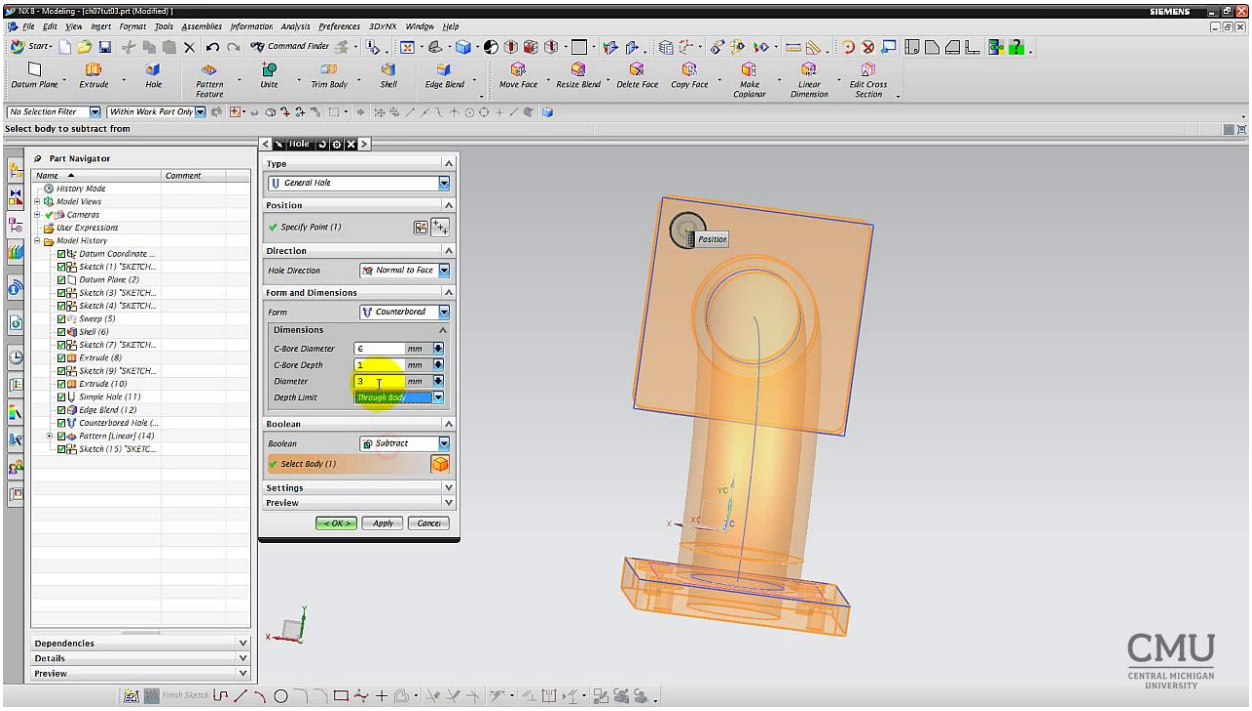


- Create a pattern copy of the counter bore as specified in the diagram below

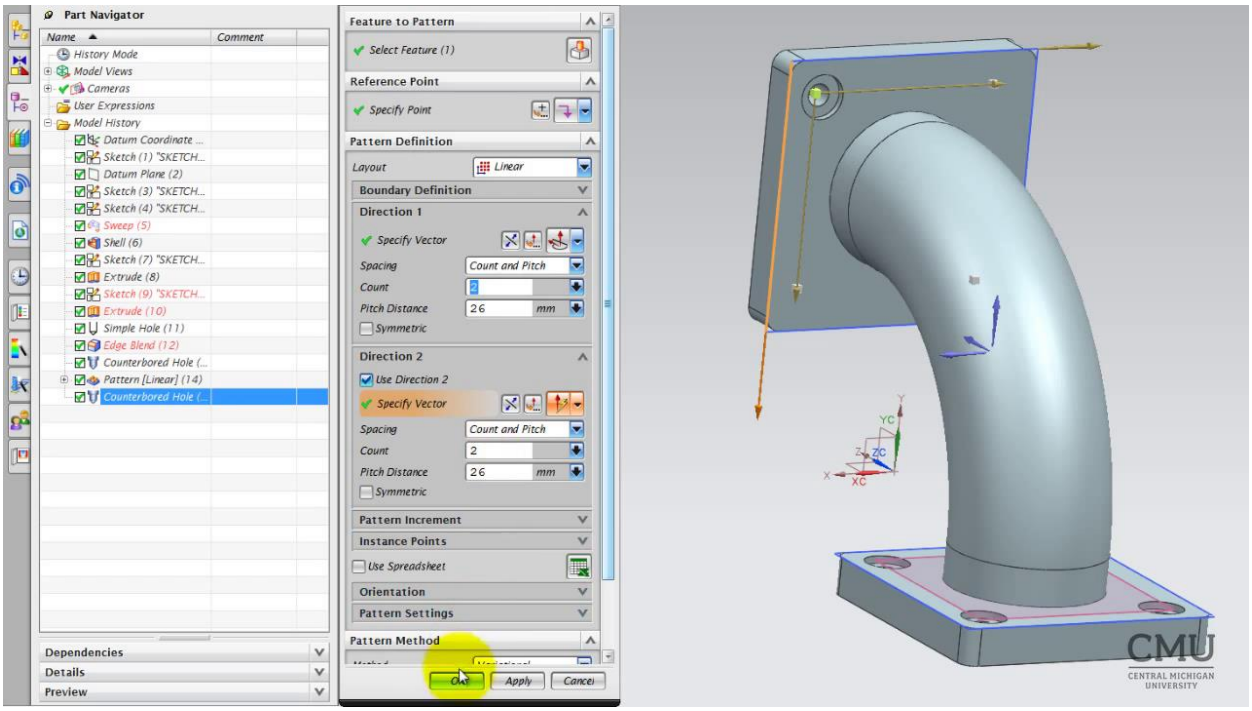

- The resulting model should be as below

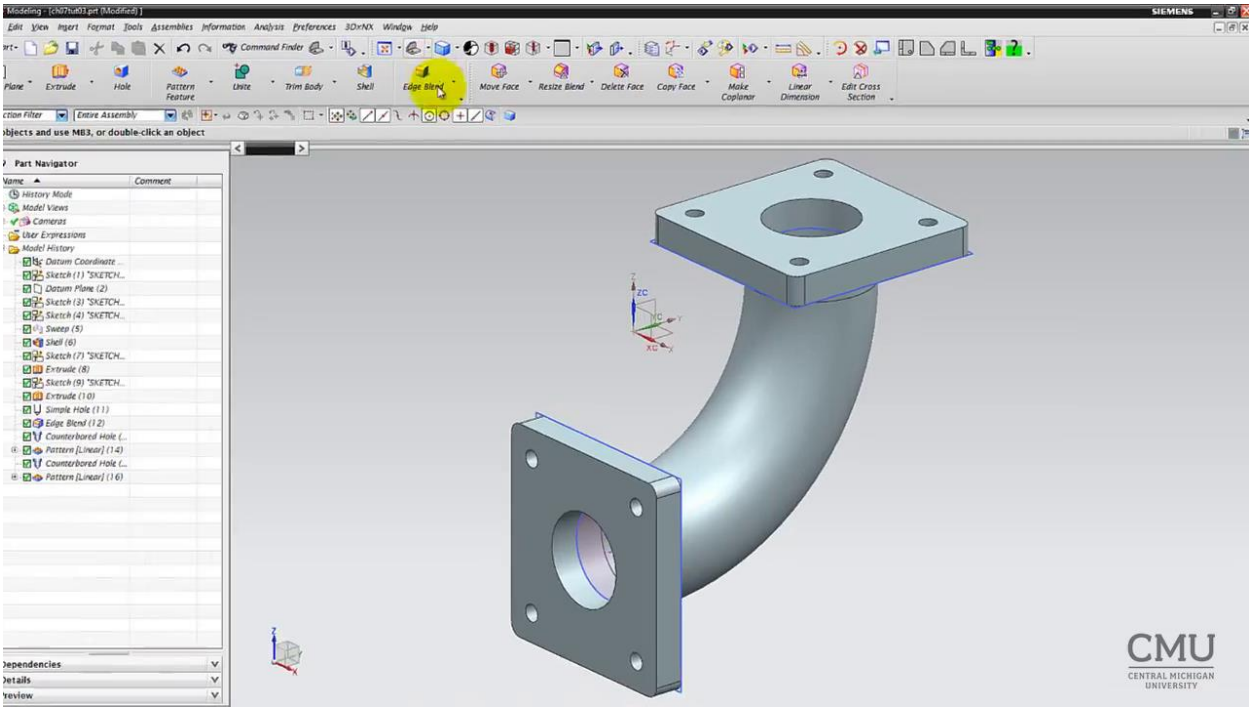

ASSIGNMENT 10.1

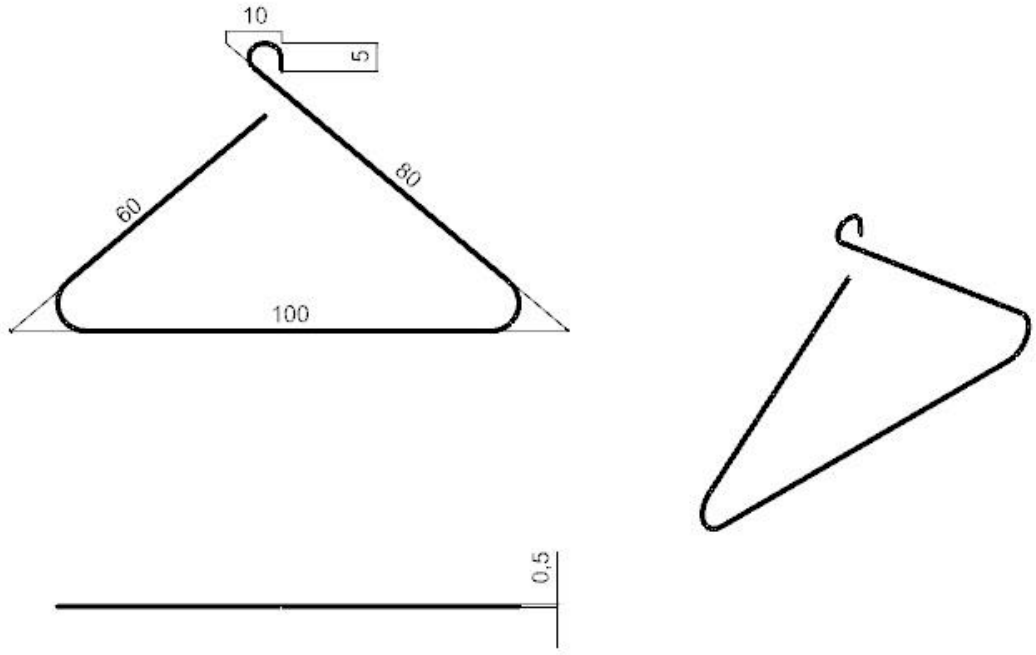

ASSIGNMENT 10.2

