

Tutorial 11;


- Create a sketch plane as shown below

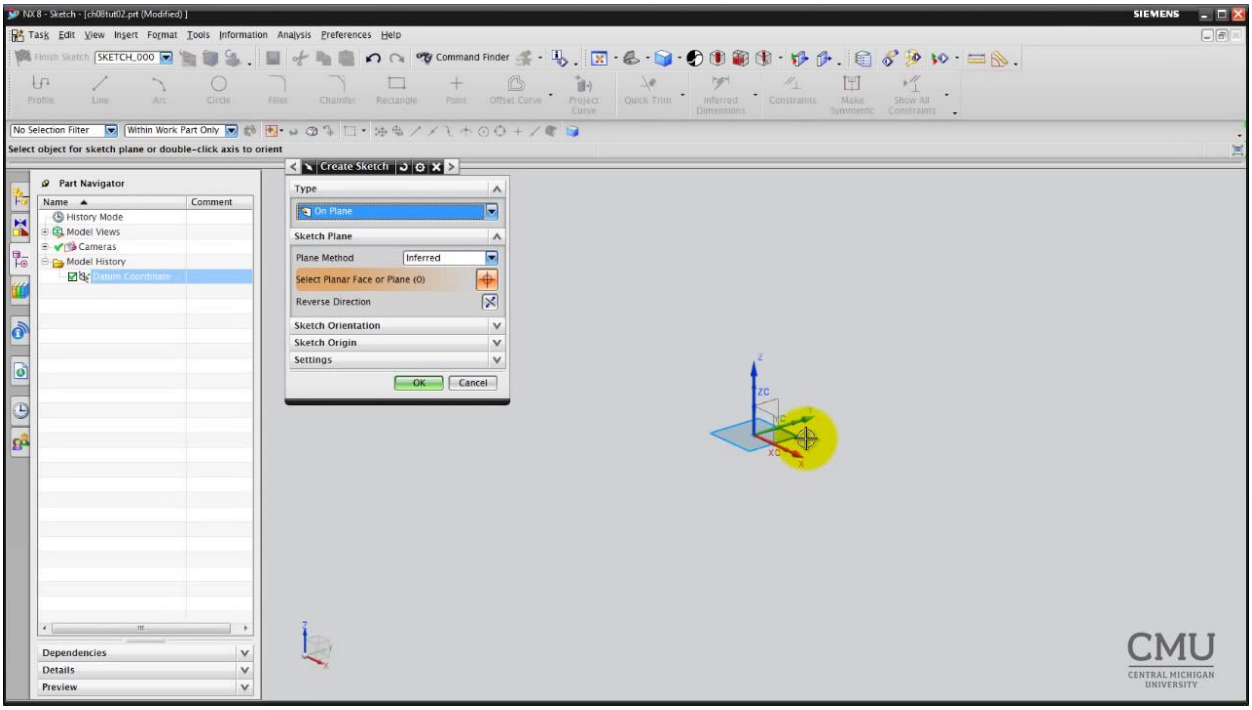



- Sketch the same geometry as shown below

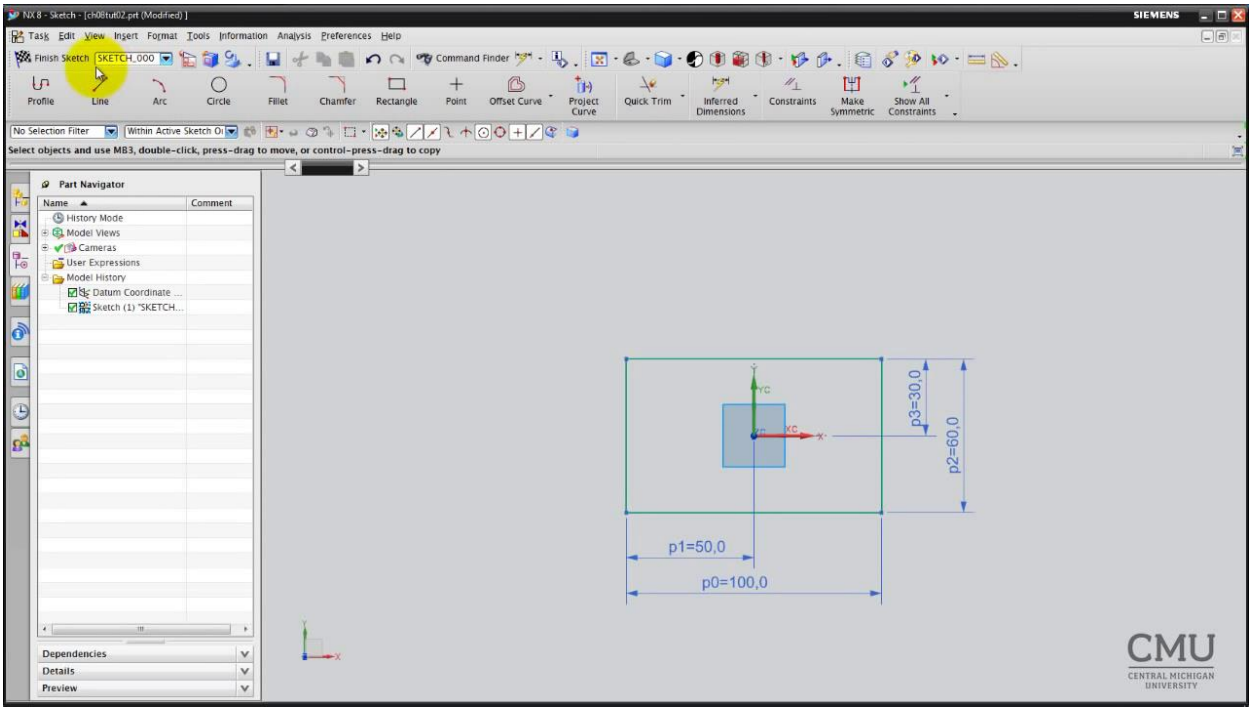


- Extrude the sketch through a distance of 10 units as shown below

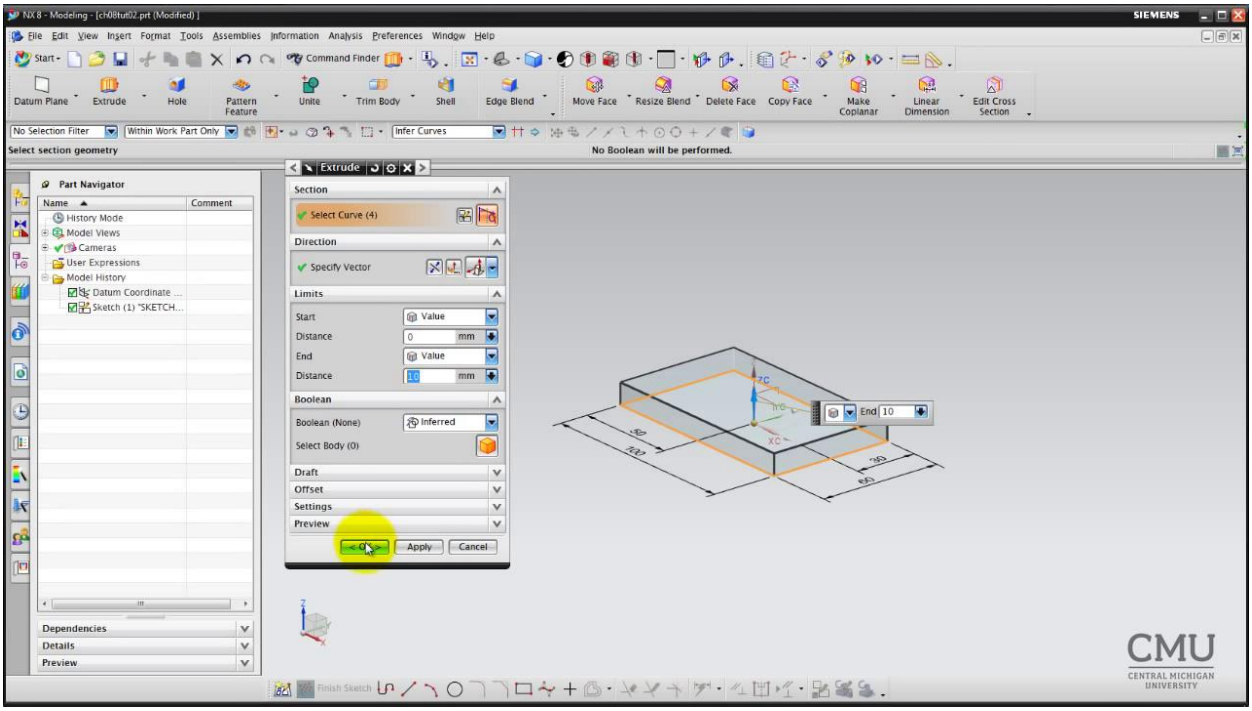



- Create a reactangular pocket on the rleft end face of the block as shown

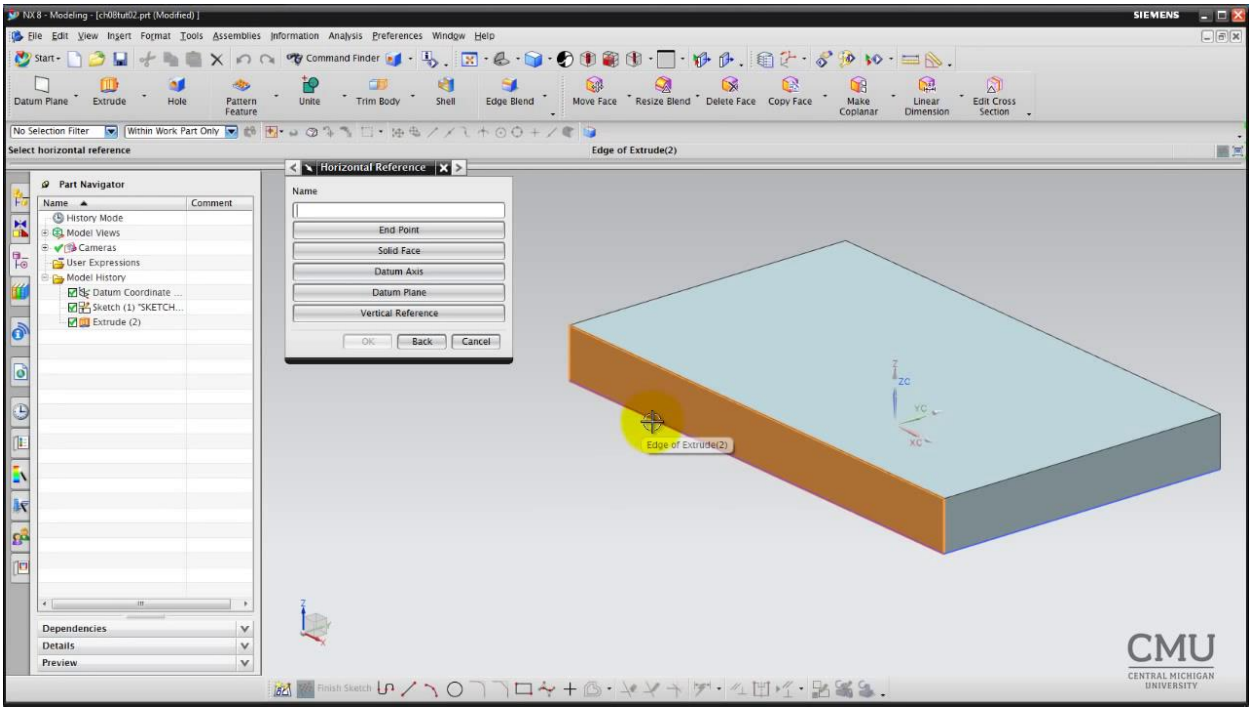


- Using the parameters shown below as the dimensions of the pocket

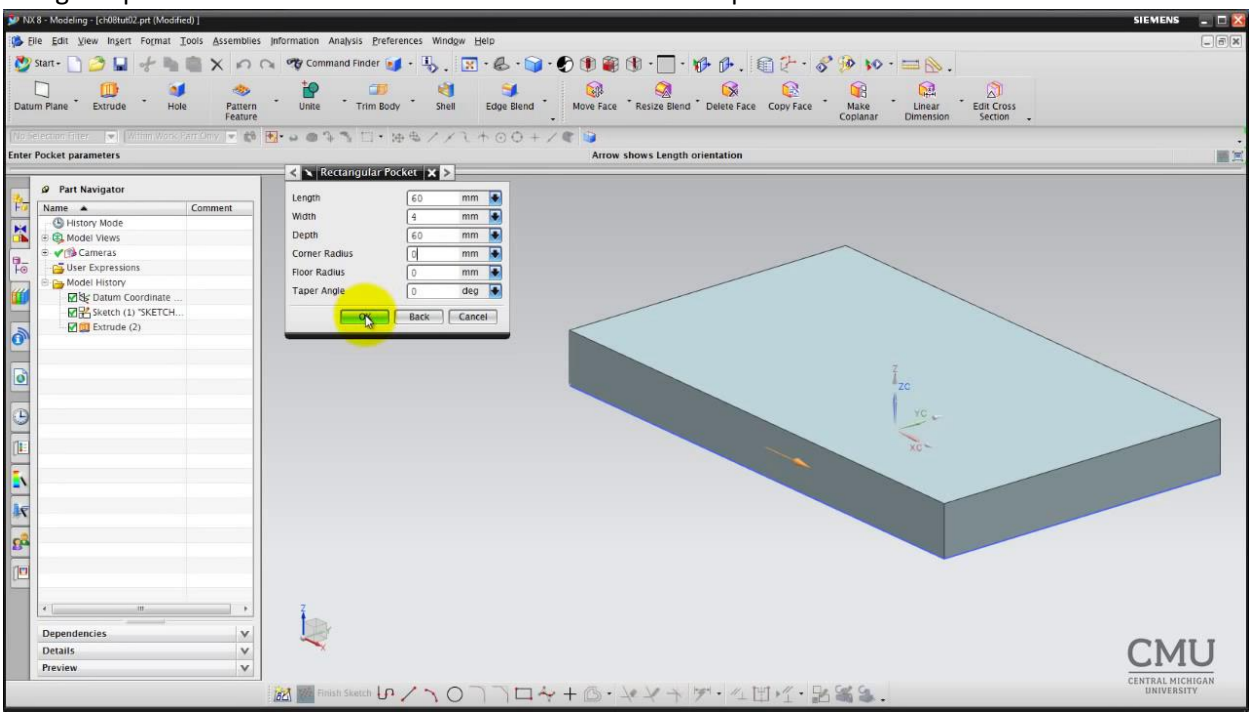



- Use the paramers below to position the pocket from the edges as shown below

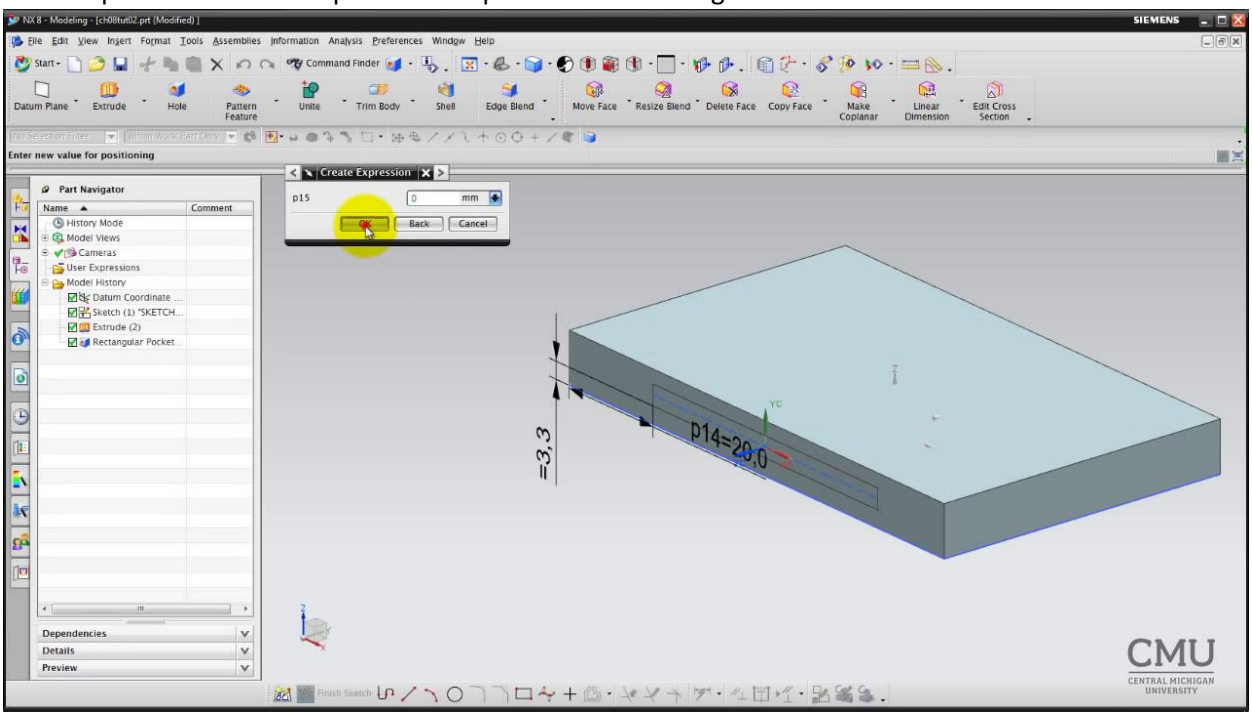


- Insert a rectangular pad on the top face of the block as shopwn

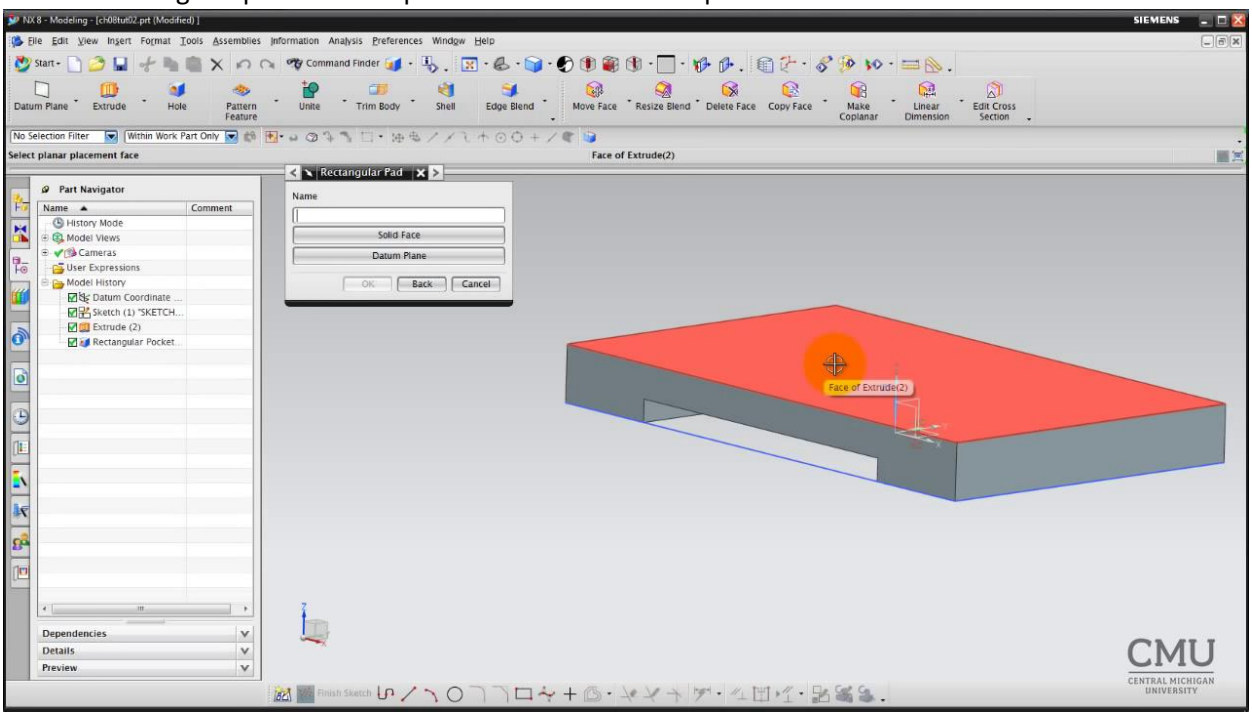



- Enter the dimension of the pad as below

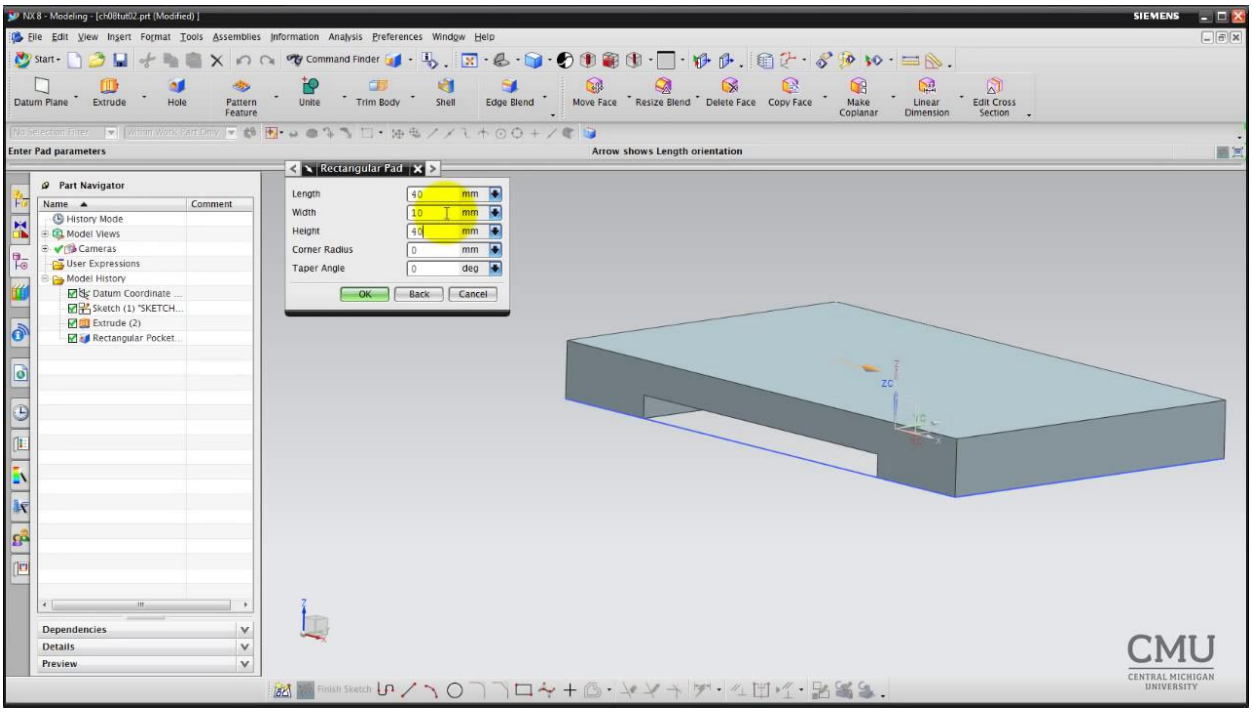


- Position the pad as shown below

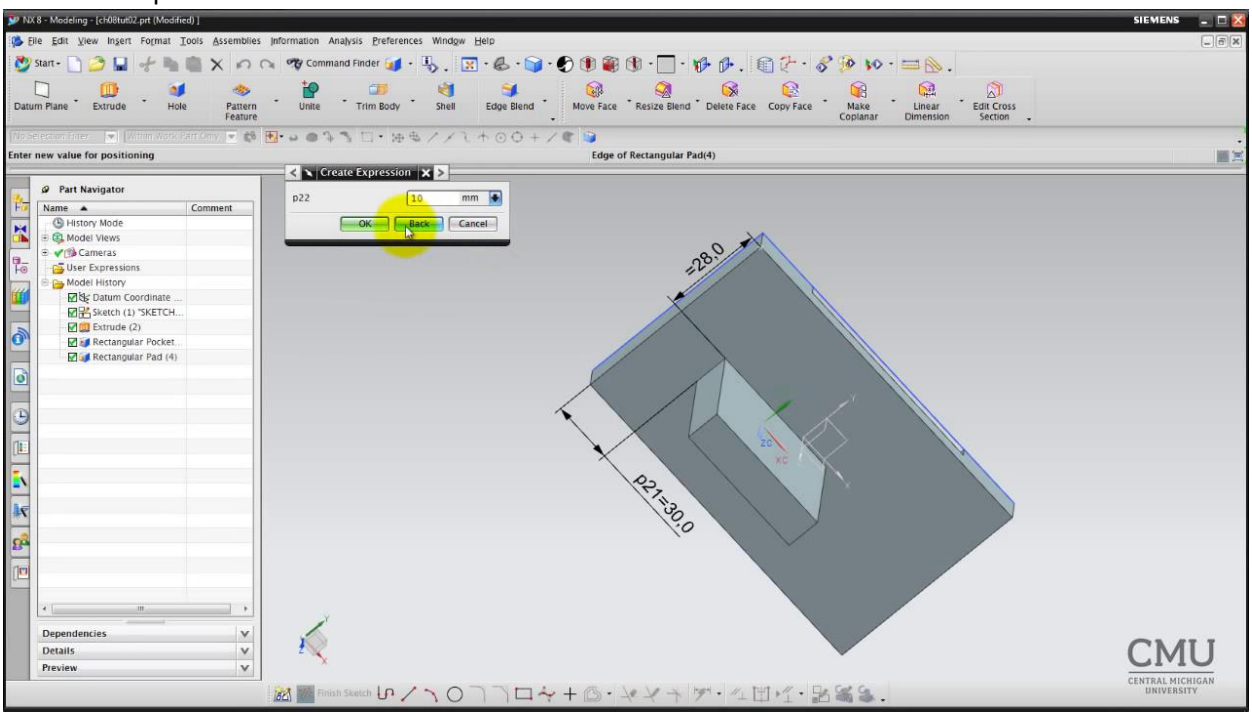



- Blended the edges of the pad as shown

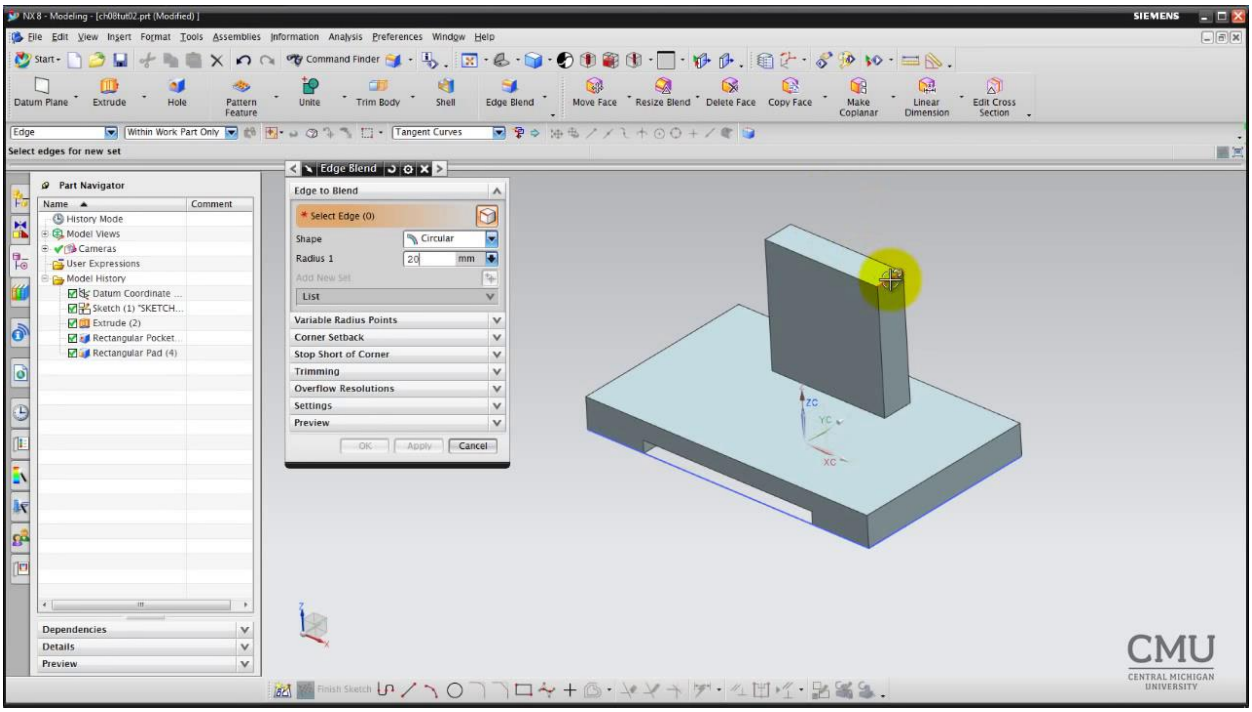


- The resulting egde blend should be as below

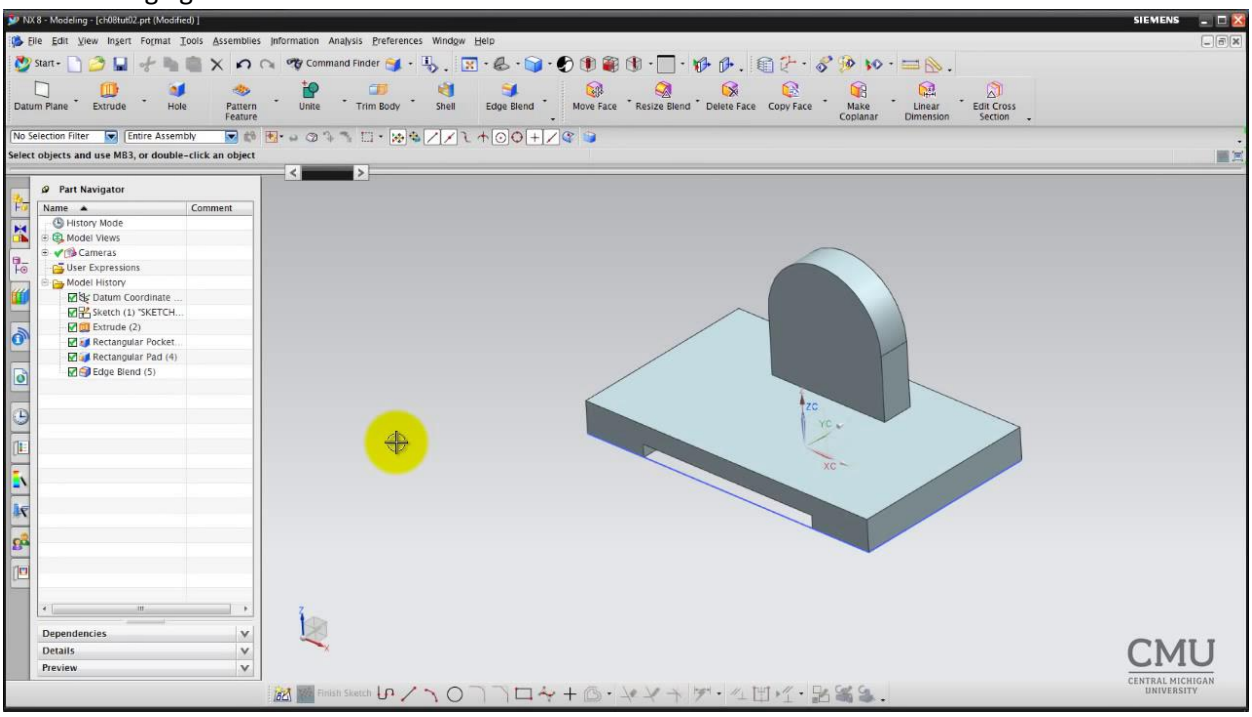



- Create a draft on the blened face as shown in the diagram below

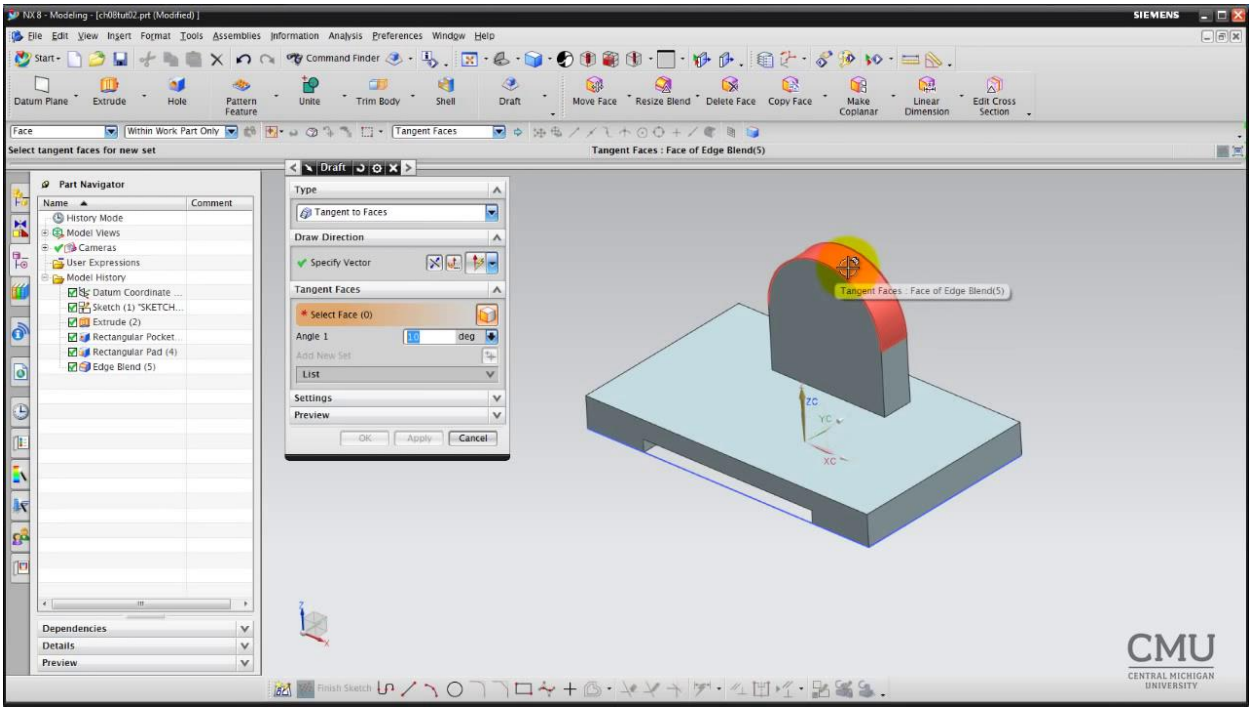


- Use an angle of 10 degrees

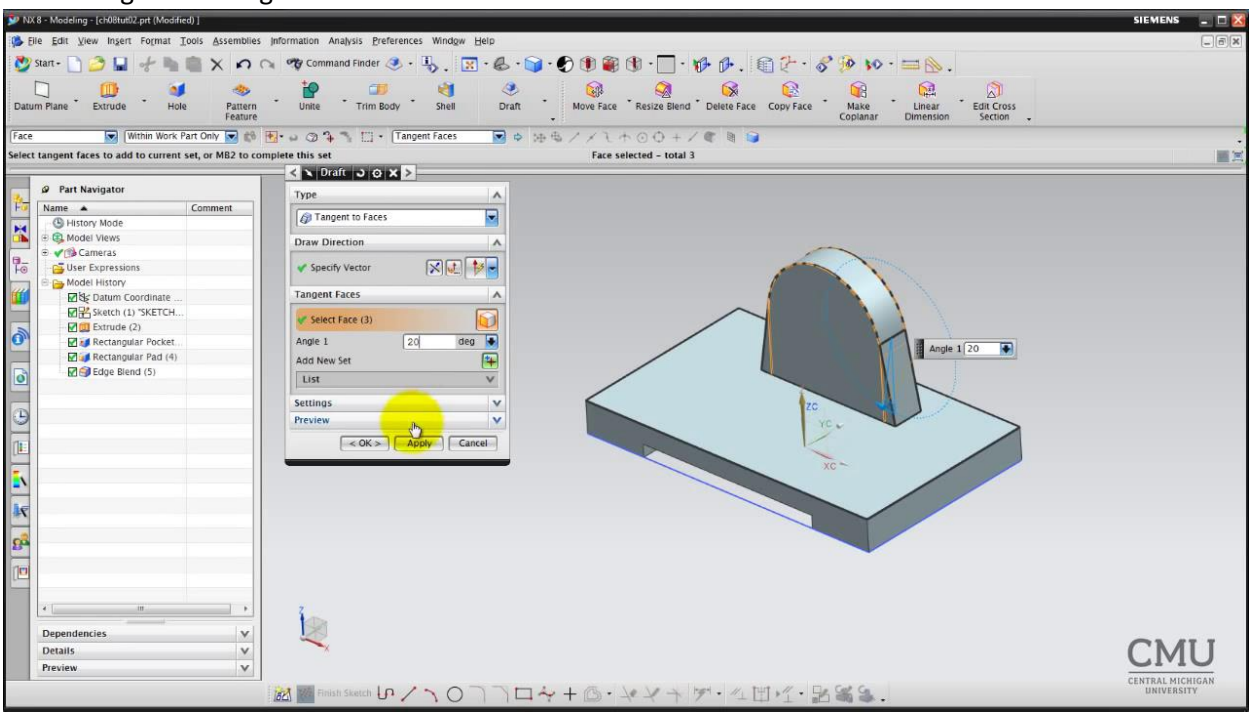



- Create a cylindrical pocket with the following parameters shown below

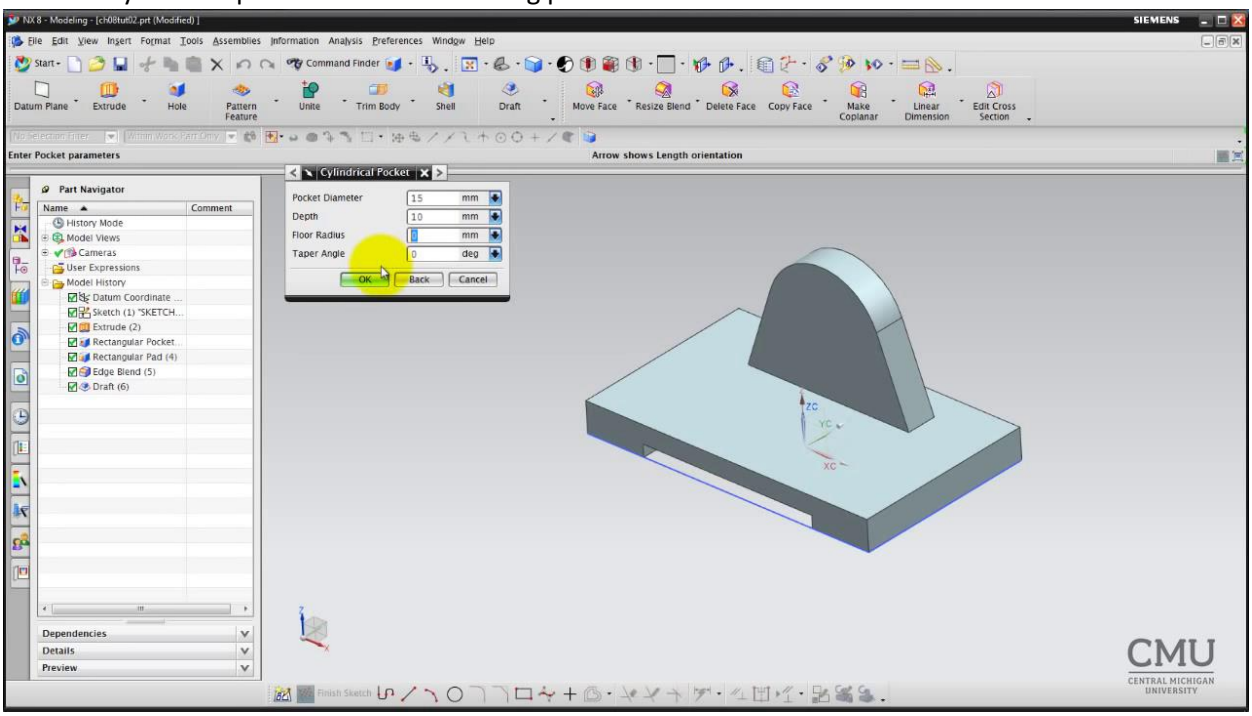


- Use the point-to-point constraint to place it in position as shown

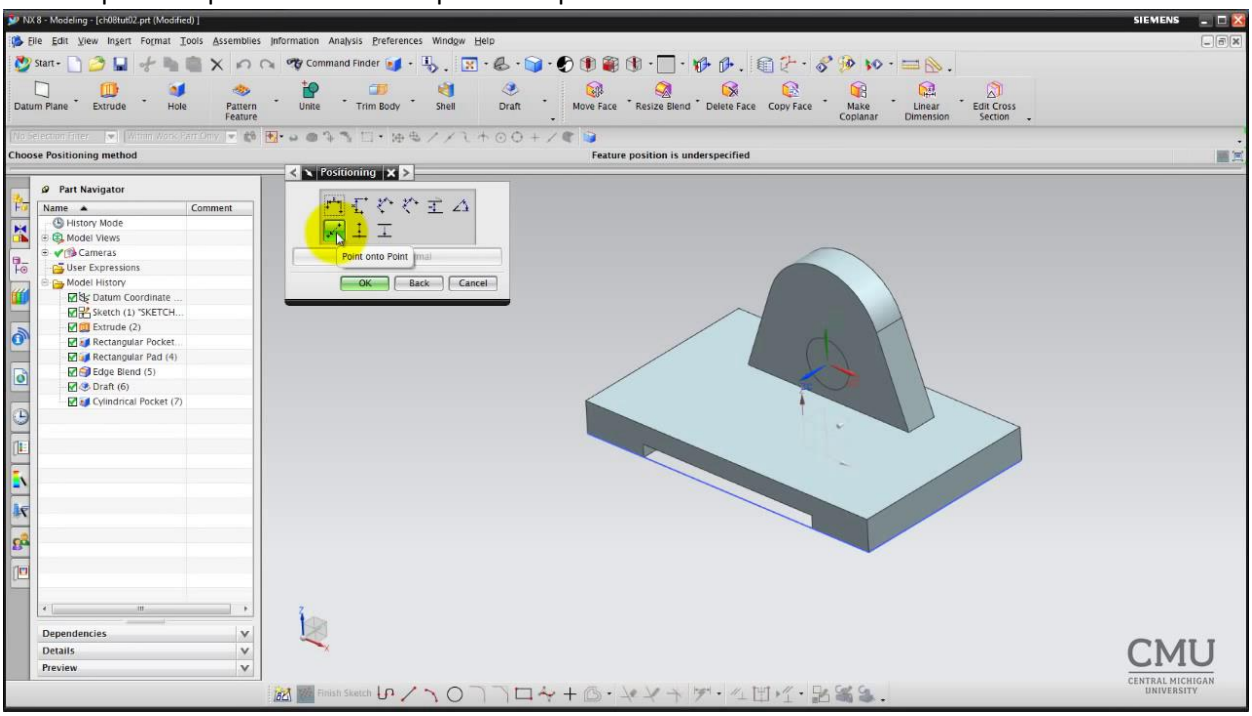



- The resulting model should be as shown below

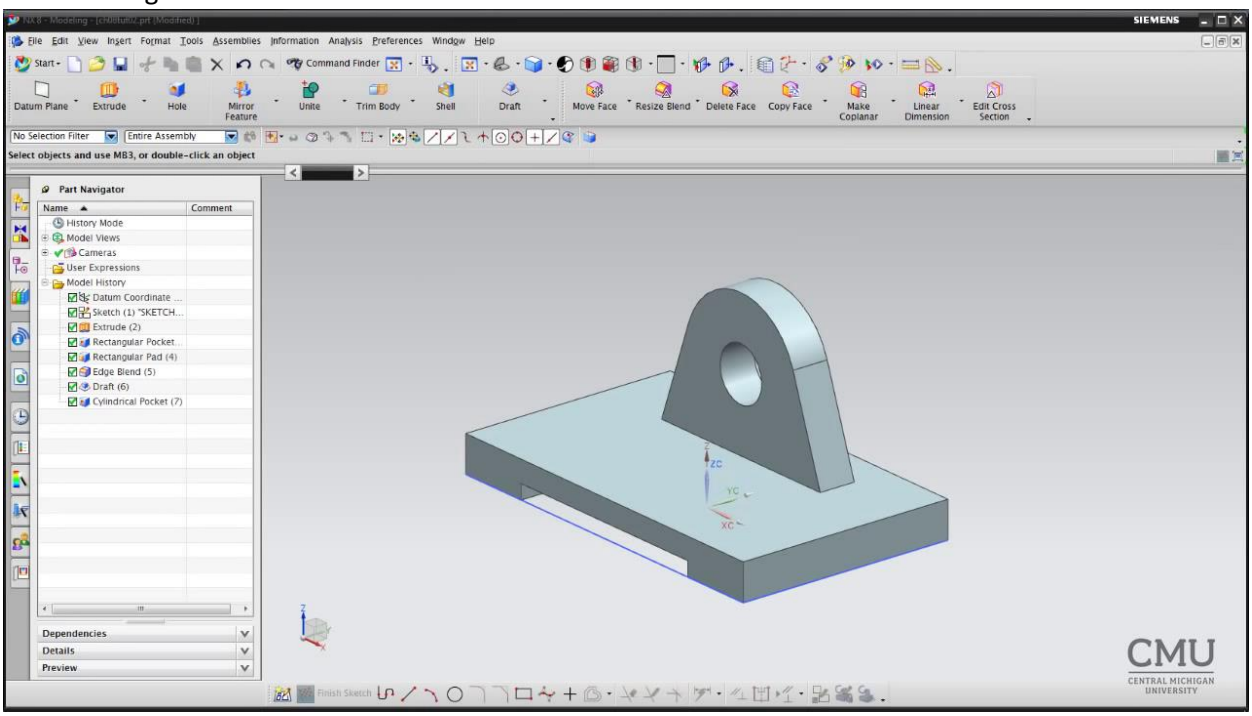


- Mirror the features attached to the blocks to get the result as shown below

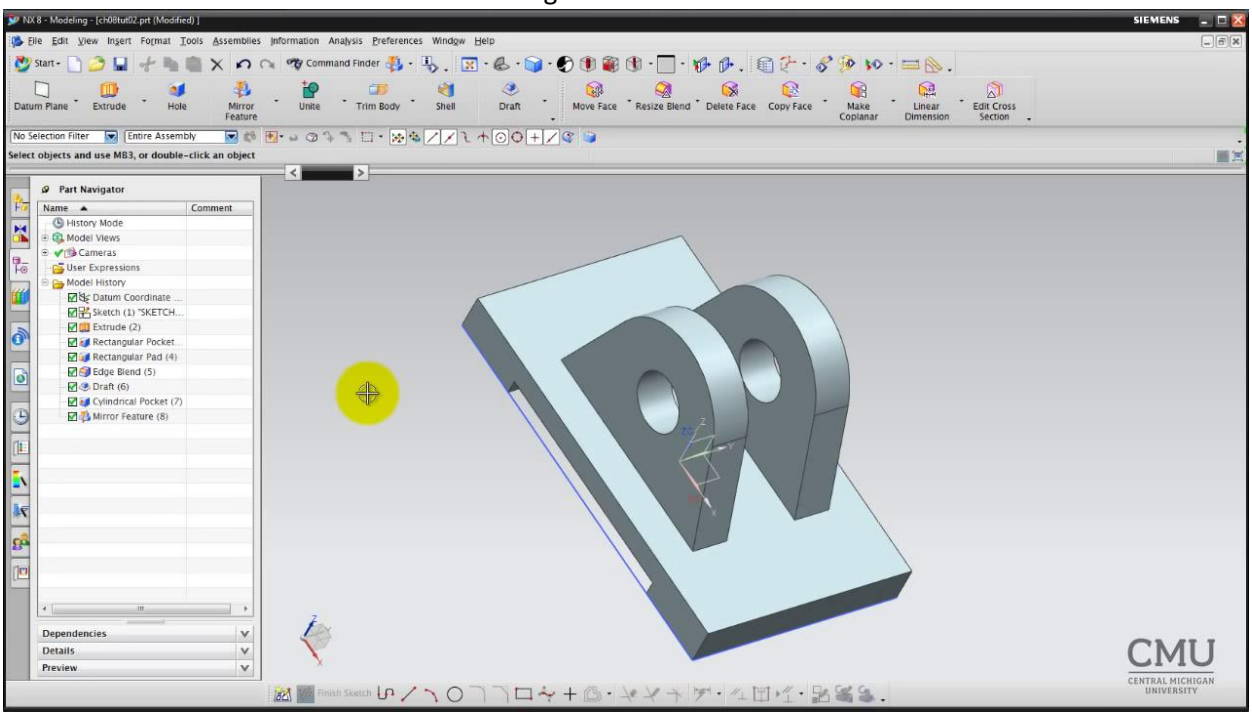



- Create a couter bore hole at the posion shown below

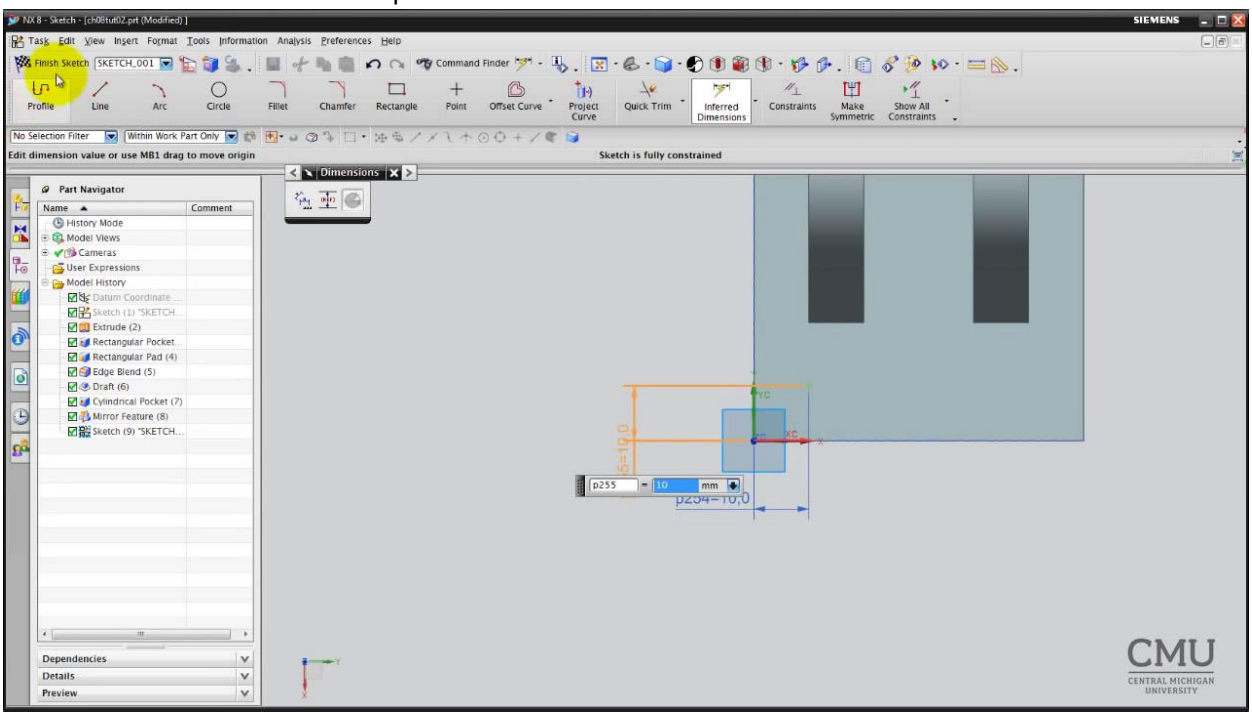

Use the parameters below to define the counterbore

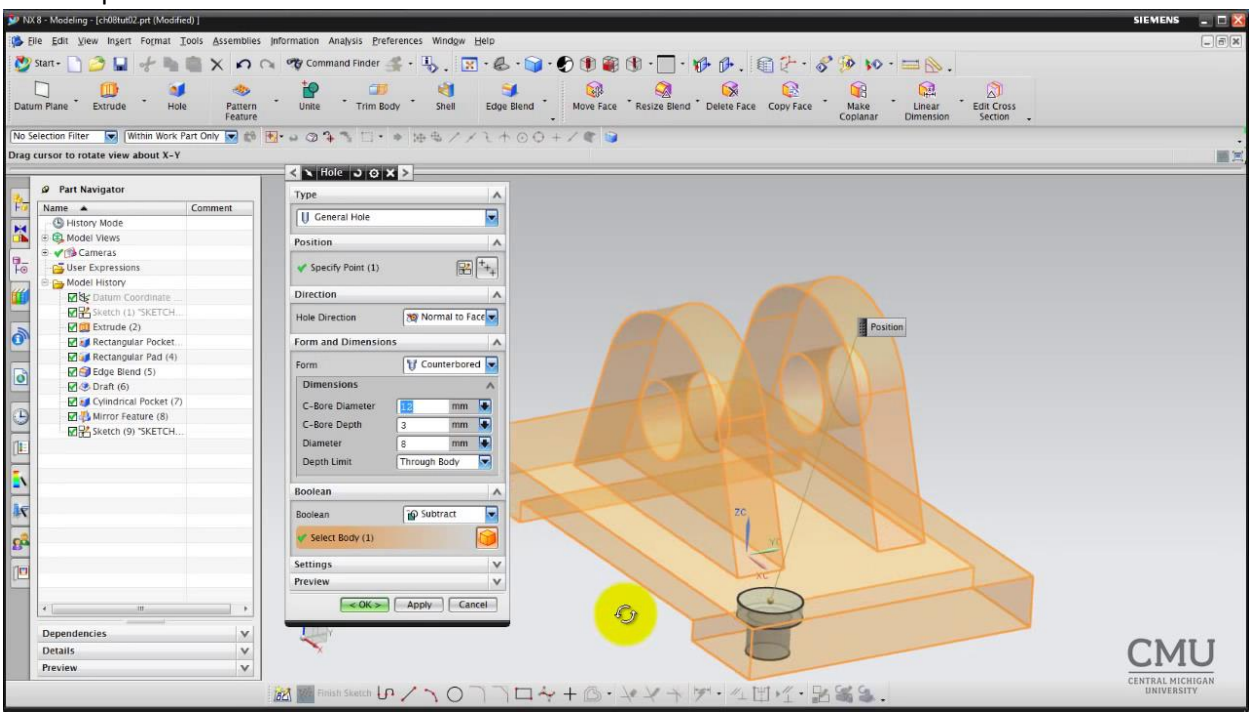


- Use the pattern feature tool to copy the counterbore to the various points as shown

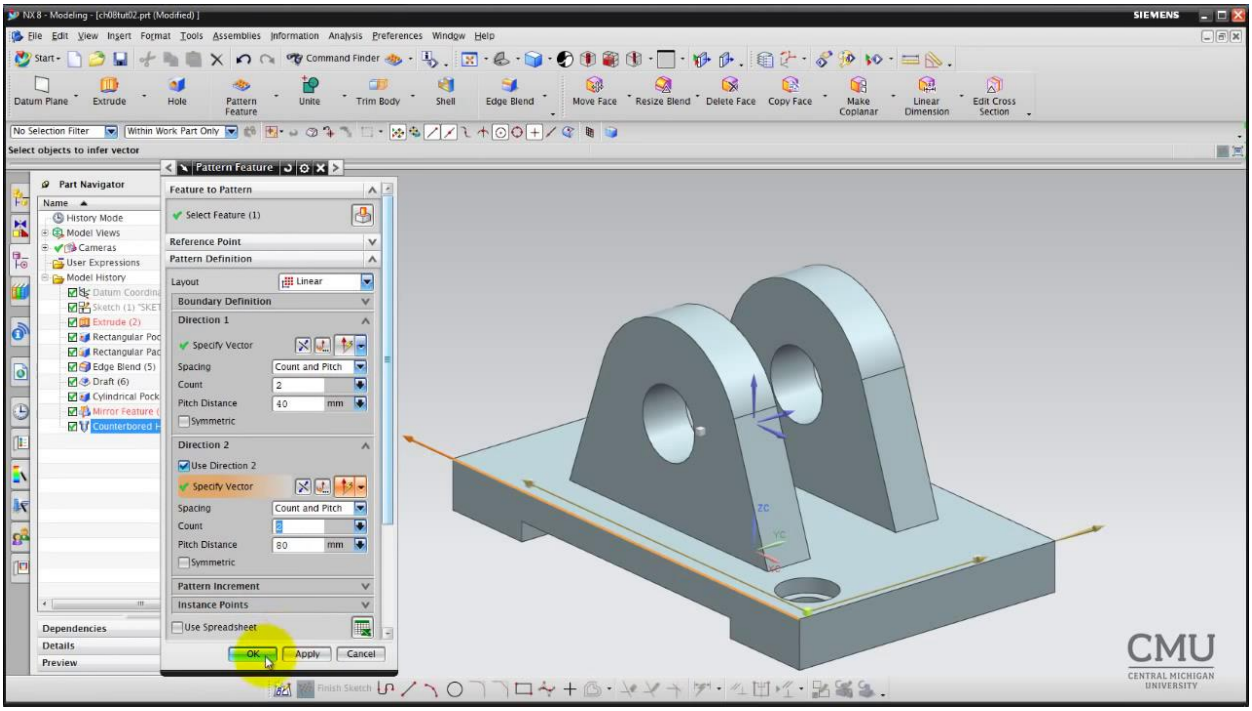

Assignment 7

