

# Appendix 11: The Root Locus Plot

## A11.1 Mathematical Background

Given the general closed-loop system transfer function

$$\frac{r(s)}{c(s)} = \frac{G(s)}{1 + G(s)H(s)} \quad (\text{A11.1})$$

where  $r$  is the response to a command input  $c$ ,  $G(s)$  is the transfer function of the open-loop system, and  $H(s)$  is the transfer function of the feedback controller located in the feedback path. The closed-loop characteristic equation is given by the denominator of [equation \(A11.1\)](#):

$$1 + G(s)H(s) = 0 \quad (\text{A11.2})$$

In general, the transfer function product  $G(s)H(s)$  will be a transfer function and may be expressed as the ratio of two polynomials:

$$G(s)H(s) = \frac{K_1(1 + sT_1)(1 + sT_3)\dots}{s^n(1 + sT_2)(1 + sT_4)\dots} \quad (\text{A11.3})$$

or, alternatively,

$$G(s)H(s) = \frac{K(s + 1/T_1)(s + 1/T_3)\dots}{s^n(s + 1/T_2)(s + 1/T_4)\dots} \quad (\text{A11.4})$$

where the gain constant is given by

$$K = \frac{K_1 T_1 T_3 \dots}{T_2 T_4 \dots} \quad (\text{A11.5})$$

Each factor in [equation \(A11.4\)](#) may be expressed alternatively in terms of magnitude and phase, assuming sinusoidal command and response such that  $s = j\omega$ , for example,

$$(s + 1/T_1) = A_1 e^{j\phi_1} \quad (\text{A11.6})$$

whence [equation \(A11.4\)](#) may be written as

$$G(s)H(s) = \frac{KA_1A_3\dots e^{j((\phi_1+\phi_3+\dots)-(n\phi_0+\phi_2+\phi_4+\dots))}}{A_0^n A_2 A_4 \dots} \equiv A e^{j\phi} \quad (\text{A11.7})$$

where the total magnitude  $A$  is given by

$$A = \frac{KA_1A_3\dots}{A_0^n A_2 A_4 \dots} \quad (\text{A11.8})$$

and the total phase is given by

$$\phi = (\phi_1 + \phi_3 + \dots) - (n\phi_0 + \phi_2 + \phi_4 + \dots) \quad (\text{A11.9})$$

Thus the characteristic equation (A11.2) may be written as

$$1 + G(s)H(s) \equiv 1 + Ae^{j\phi} = 0 \quad (\text{A11.10})$$

which has the solution

$$Ae^{j\phi} = -1 \quad (\text{A11.11})$$

For the solution of equation (A11.11) to exist, two conditions must be satisfied:

The *angle condition*:

$$\phi = (\phi_1 + \phi_3 + \dots) - (n\phi_0 + \phi_2 + \phi_4 + \dots) = (2k + 1)180 \text{ deg} \quad (\text{A11.12})$$

where  $k = 0, \pm 1, \pm 2, \pm 3, \dots$

The *magnitude condition*:


$$|G(s)H(s)| = A = \frac{KA_1A_3\dots}{A_0^nA_2A_4\dots} = 1 \quad (\text{A11.13})$$

Thus any point in the  $s$ -plane where the conditions defined by both equations (A11.12) and (A11.13) are satisfied defines a root of the characteristic equation. By finding all such points in the  $s$ -plane, a locus of the roots of the characteristic equation may be constructed. In fact, the root loci may be identified merely by satisfying the angle condition only; the loci may then be *calibrated* by applying the magnitude condition to selected points of interest on the loci.

## A11.2. Rules for Constructing a Root Locus Plot

The simple closed-loop system of interest is defined by the structure shown in Fig. A11.1. The object is to establish how the roots of the closed-loop transfer function are governed by the choice of feedback gain  $K_r$ . The *open-loop* system transfer function is known at the outset and comprises the product of the transfer functions of all system components in the loop:

$$K_rG(s)H(s) \quad (\text{A11.14})$$

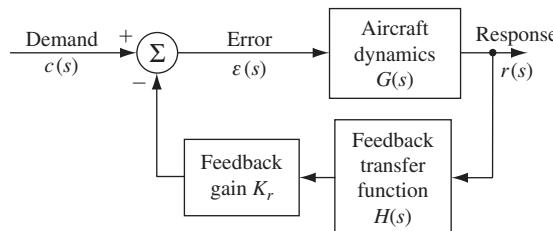

**FIGURE A11.1** Simple closed-loop system.

The corresponding *closed-loop* transfer function is

$$\frac{r(s)}{c(s)} = \frac{G(s)}{1 + K_r G(s)H(s)} \quad (\text{A11.15})$$

The root locus plot is constructed from the open-loop transfer function (A11.14) which, for convenience, should be in factorised form. The *zeros* are the numerator roots of (A11.14), and the *poles* are its denominator roots. When plotting the root loci on the  $s$ -plane, it is often convenient to choose the same numerical scales for both the real and imaginary axes.

### **Rule 1**

Continuous curves which comprise the branches of the locus start at the poles of  $G(s)H(s)$ , where the gain  $K_r = 0$ . The branches of the locus terminate at the zeros of  $G(s)H(s)$  or at infinity, where the gain  $K_r = \infty$ .

### **Rule 2**

The locus includes all points on the real axis to the left of an odd number of poles plus zeros.

### **Rule 3**

As  $K_r \rightarrow \infty$ , the branches of the locus become asymptotic to straight lines with angles

$$\frac{(2k+1)180}{n_p - n_z} \deg \quad k = 0, \pm 1, \pm 2, \pm 3, \dots$$

where

$n_p$  = number of poles

$n_z$  = number of zeros

### **Rule 4**

The asymptotes radiate from a point on the real axis called the *centre of gravity* ( $cg$ ) of the plot and are determined by

$$cg = \frac{\sum \text{poles} - \sum \text{zeros}}{n_p - n_z}$$

### **Rule 5**

The loci *break in* to or *break away* from points on the real axis located between pairs of zeros or pairs of poles, respectively. Two methods may be used to estimate the locations of the break-in or break-away points on the real axis. The first is approximate and gives results of acceptable accuracy for the majority of cases. The second is exact and may be used when the first method gives unsatisfactory results.

**Method 1**

- Select a test point on the real axis in the vicinity of a known break-in or break-away point.
- Measure the distances from the test point to each real axis pole and zero. Assign a negative sign to the pole distances and a positive sign to the zero distances, and calculate the reciprocals of the distances.
- Calculate the sum of the reciprocals for all poles and zeros to the left of the test point and calculate the sum of the reciprocals for all poles and zeros to the right of the test point. The test point is a break-in or brake-away point when the left and right reciprocal sums are equal.
- Choose a new test point and iterate until the break-in or break-away point is obtained with acceptable accuracy.

Note that this method may give inaccurate results when complex poles and zeros lie close to the real axis.

**Method 2**

- Denote the open-loop transfer function:

$$G(s)H(s) = \frac{A(s)}{B(s)} \quad (\text{A11.16})$$

- Define a function  $F(s)$ :

$$F(s) = B(s) \frac{dA(s)}{ds} - A(s) \frac{dB(s)}{ds} \quad (\text{A11.17})$$

The roots of  $F(s)$  include all the break-in or break-away points.

**Rule 6**

Loci branching into, or away from, the real axis do so at 90 degrees to the real axis.

**Rule 7**

The angle of departure of a locus from a complex pole, or the angle of arrival at a complex zero, is given by

$$\phi = \sum(\text{angles to all other zeros}) - \sum(\text{angles to all other poles}) - 180 \text{ deg} \quad (\text{A11.18})$$

An example is illustrated in Fig. A11.2. With reference to that figure, the angle of departure of the locus from complex pole  $p_1$  is given by


$$\phi = (\theta_1 + \theta_3 + \theta_4) - (\theta_2 + \theta_4) - 180 \text{ deg} \quad (\text{A11.19})$$

**Rule 8**

The total loop gain at any point on a locus is given by

$$\text{Gain} = \frac{\prod(\text{distances from test point to poles})}{\prod(\text{distances from test point to zeros})} \quad (\text{A11.20})$$

Note that, if the system under investigation has no zeros, the denominator of expression (A11.20) is taken to be unity.

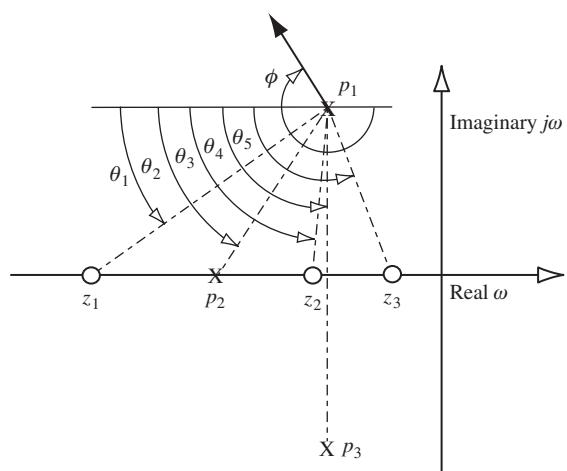

**FIGURE A11.2** Example of the locus departure angle from a complex pole.

---