M-06 SPLIT DRIVEN-ELEMENT MOUNTING

TAPE MEASURE SATELLITE YAGI | TM-YAGI-01

DRAWING REV A

FOR REVIEW - SOURCE O3-O6 REV L

VIEW A | 2 m DRIVEN / ST-2

SUPPORT 1:2; REST NTS

2M-DE | X = 13.500 FROM FRONT | 7/16 THRU HOLE

TWO ISOLATED HALVES ALONGSIDE ONE NONCONDUCTIVE SUPPORT.

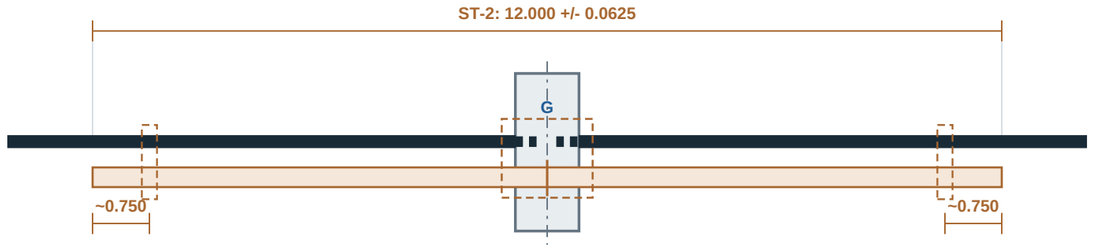

DASHED ORANGE = FINAL TIES ONLY AFTER FEED-NODE DRILLING.

1 STATION TIE HOLDS BOTH HALVES AT EXITS; 2 SUPPORT-END TIES.

CENTER ST-2 AT ITS MARKED MIDPOINT; NO FORCED FIT; WITNESSES VISIBLE.

VIEW B | 70 cm DRIVEN

LOCAL VIEW NTS

70-DE | X = 18.500 FROM FRONT | 7/16 THRU HOLE

TWO ISOLATED TAPE HALVES; NO LONGITUDINAL SUPPORT.

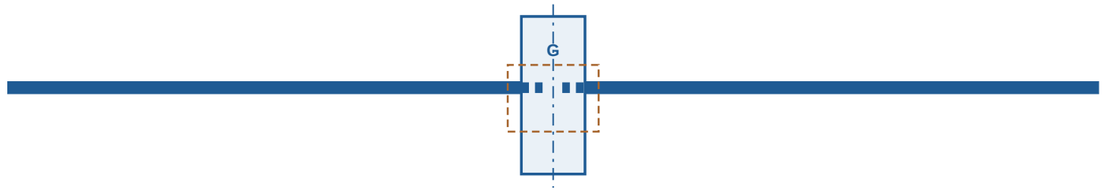

DASHED ORANGE = FINAL STATION TIE AFTER FEED-NODE DRILLING.

ONE TIE CAPTURES BOTH HALVES AT THE HOLE EXITS; CLEAR NODES.

NO CRUSHING, CREASING, OR TWISTING; WITNESS LINES STAY VISIBLE.

DETAIL C | HIDDEN GAP / WITNESS METHOD

SCHEMATIC / NTS

VIEW ALONG ELEMENT AXIS; PVC WALLS ARE THE MEASUREMENT SURFACES.

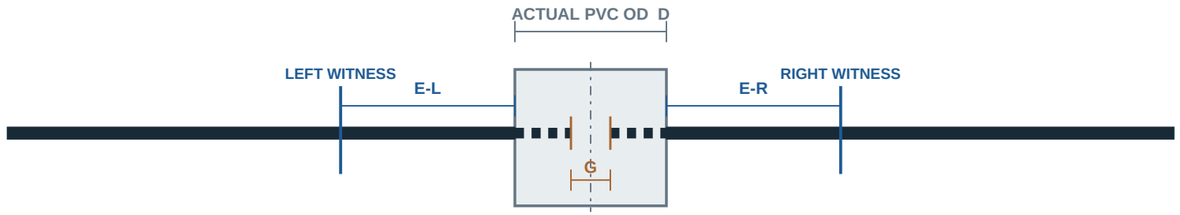

M-L / M-R: FROM EACH HIDDEN INNER TIP TO ITS OWN VISIBLE WITNESS LINE.

E-L / E-R: FROM THAT LINE TO THE ADJACENT OUTER PVC SURFACE.

HIDDEN TIPS ARE DASHED. DO NOT USE A LOOSE GAUGE INSIDE THE PIPE.

CALCULATE AND ACCEPT

O5 SEC. 5 / O6 STEP 10

MEASURE / RECORD D, M-L, M-R, E-L, AND E-R WITH A CALIPER.

I-L = M-L - E-L I-R = M-R - E-R

G = D - I-L - I-R

G = 0.250 +/- 0.0156 IN; |I-L - I-R| <= 0.0156 IN.

I-TARGET = (D - 0.250) / 2; M = I-TARGET + 0.500.

NOMINAL D = 0.840: I-TARGET = 0.295; M = 0.795.

SET EACH VISIBLE E TO ~0.500; RECALCULATE ACTUAL G.

G IS STEEL-TIP GAP, NOT FEED-SCREW CENTER SPACING.

STOP IF WITNESS READINGS ARE NOT REPEATABLE.

DRIVEN CUTS AND INSTALLED SPAN

INCHES

BAND / STATION	EACH HALF	HALF MISMATCH	INSTALLED SPAN
2 m | 2M-DE	18.575 +/- 0.03125	<= 0.03125	**37.400 +/- 0.0781**
70 cm | 70-DE	6.175 +/- 0.0156	<= 0.0156	**12.600 +/- 0.0468**

SPAN = MEASURED L + R + G; MEASURE INDEPENDENTLY; ALL SEPARATE LIMITS APPLY.

ASSEMBLY ORDER

O6 STEPS 10-12

1. TEMP NONCONDUCTIVE HOLD; COLLINEAR / ISOLATED PRE-FEED.
2. DRILL FEED HOLES ONE HALF AT A TIME; REFIT AND RECALCULATE.
3. THEN FIT FINAL NONCONDUCTIVE TIES; CLEAR THE FEED NODES.
4. **RECHECK G, SPAN, WITNESSES, AND DC ISOLATION.**

IF A HALF MOVES AGAIN, CUT / REPLACE ITS LOCKING TIE.

GENERAL NOTES

1. ALL DIMENSIONS IN INCHES; FIGURES ARE SCHEMATIC EXCEPT ST-2 LENGTH AT 1:2.
2. USE APPROVED ACTUAL-MATERIAL 7/16 FIT; NO METAL MOUNTING TIES OR ADHESIVE.
3. FEED-NODE HOLE AND ELECTRICAL HARDWARE DETAILS ARE ON M-07 / O5 / O6.

SOURCE BASELINE

O3/O4/O5/O6 REV L

COMMIT 186c773

SCALE AT 100% PRINT

ST-2 SUPPORT 1:2

OTHER DETAILS NTS

ISSUE / DATE

REV A - FOR REVIEW

2026-10-12

SHEET M-06