




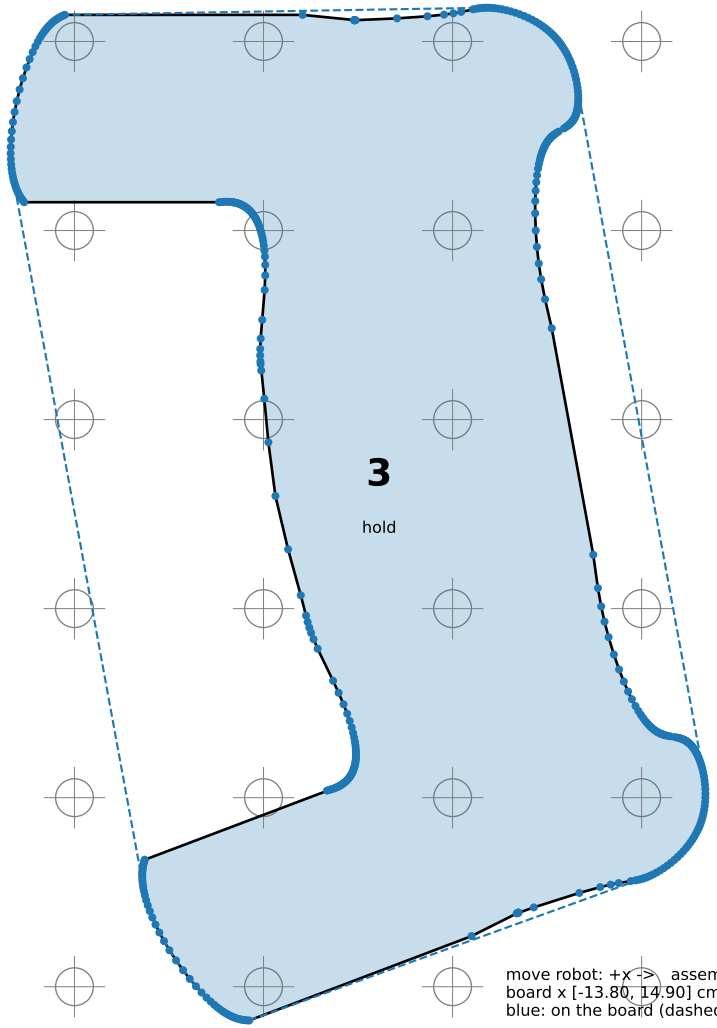



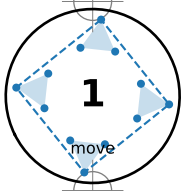

tips at 18 deg: place carefully

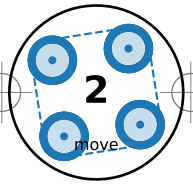

tips at 18 deg: place carefully



move robot: +x -> assembly spot: -y
board x [-13.80, 14.90] cm, y [-20.90, -0.90] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")