



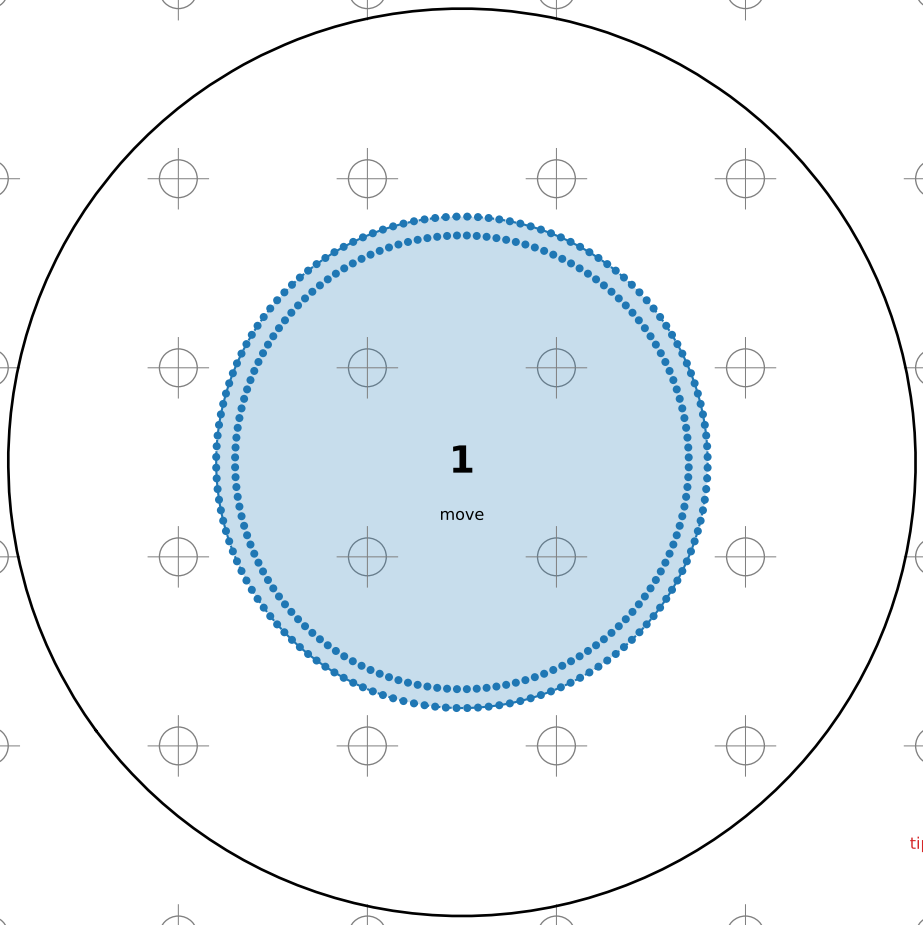

tips at 16 de

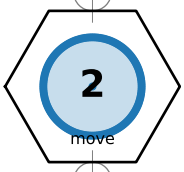

tips at 16 deg: place carefully




tips at 16 de



tips at 16 de

SHEET 1/2 (column 1/2 from the left, row 1/1 from the top); green dashed: 1 cm overlap, lay the neighbouring sheet on it, crosses on crosses
move robot: +x -> assembly spot: -y
board x [-20.33, -0.33] cm, y [-4.34, 24.36] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")

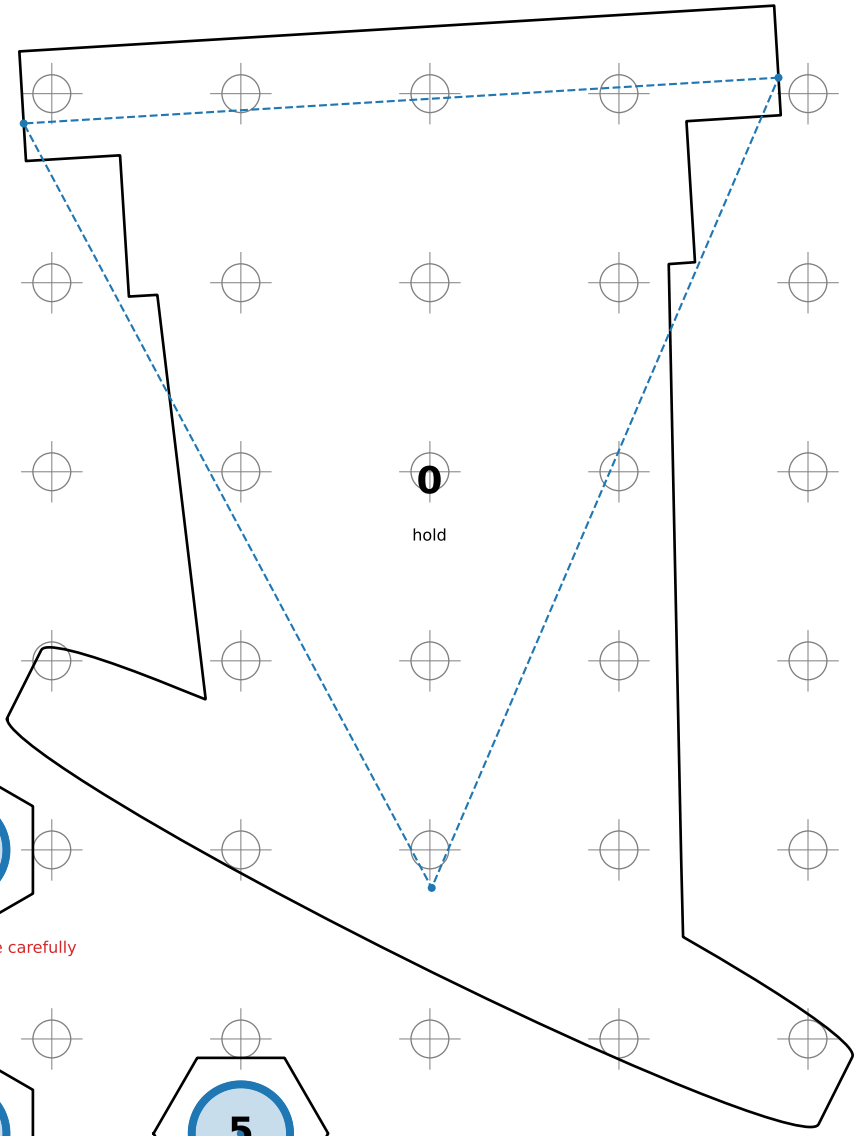

4
move

s at 16 deg: place carefully

7
move

s at 16 deg: place carefully

5
move

tips at 16 deg: place carefully

3
move

s at 16 deg: place carefully

6
move

tips at 16 deg: place carefully

SHEET 2/2 (column 2/2 from the left, row 1/1 from the top); green dashed: 1 cm overlap, lay the neighbouring sheet on it, crosses on crosses
move robot: +x -> assembly spot: -y
board x [-1.33, 18.67] cm, y [-4.34, 24.36] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")