



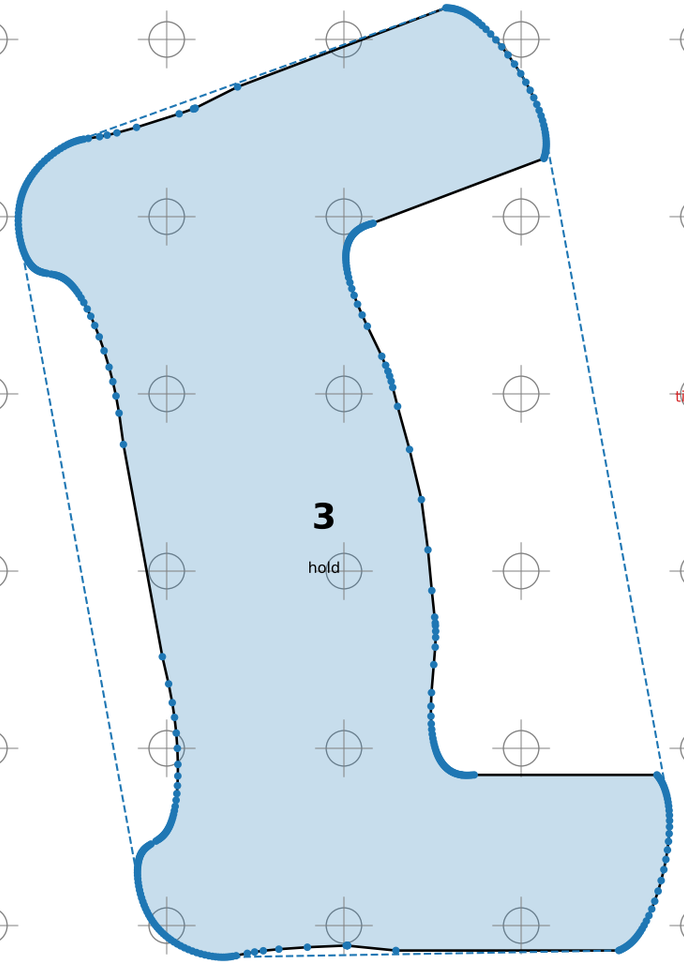


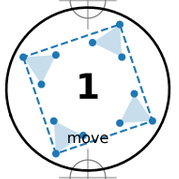


tips at 18 deg: place carefully



tips at 18 deg: place carefully



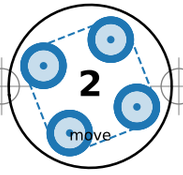

move robot: +x -> assembly spot: -y
board x [-16.25, 16.25] cm, y [-6.25, 16.25] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")