




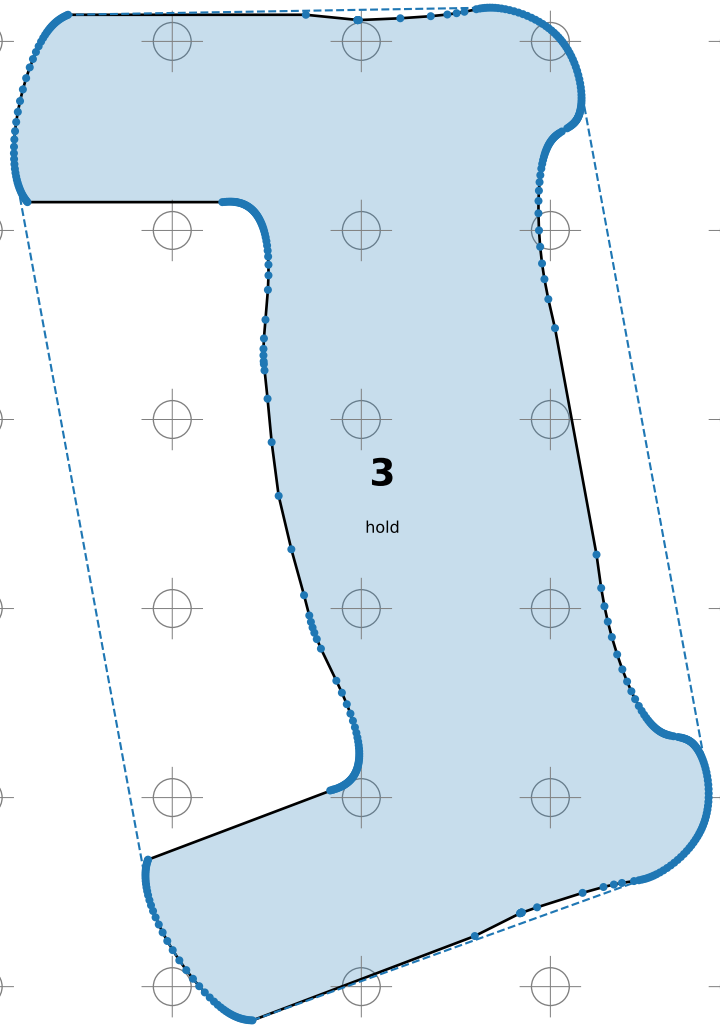

tips at 18 deg: place carefully

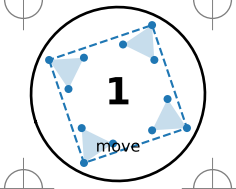

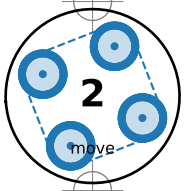





tips at 18 deg: place carefully

move robot: +x -> assembly spot: -y
board x [-25.67, 3.03] cm, y [15.03, 35.03] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")