




CCET 3680  
Mill Advanced WCS 2

I. Tutorial Wireframe:


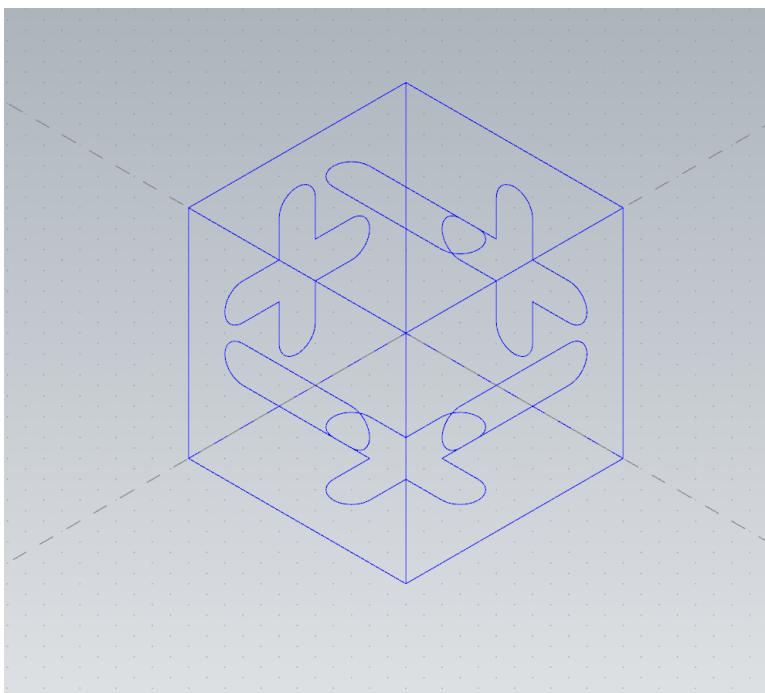





II. Tutorial Solid:

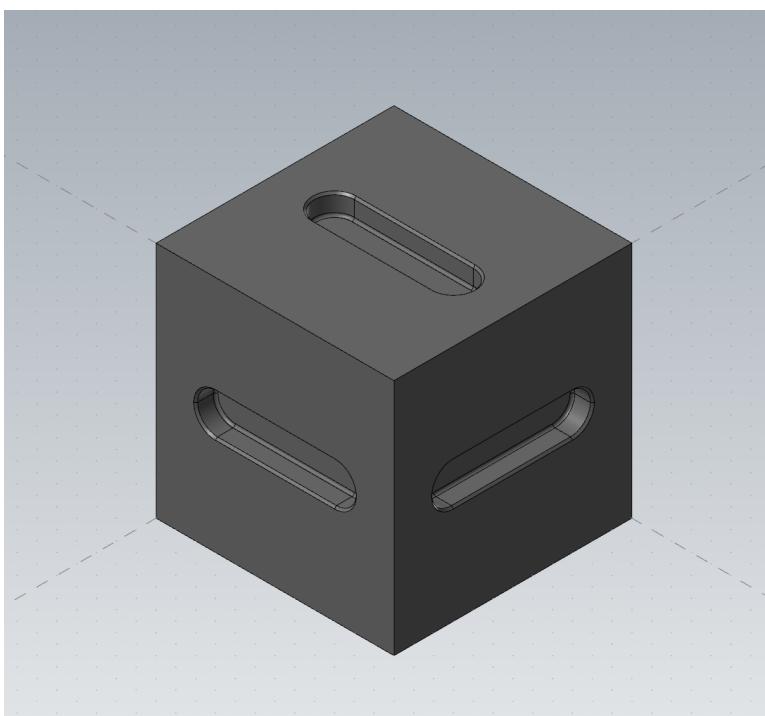


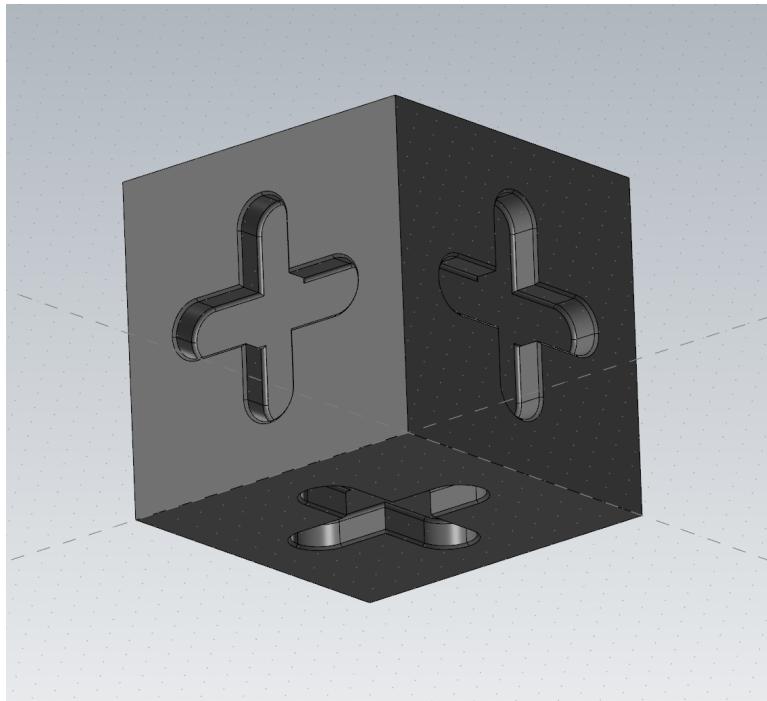


## II. Tutorial Dimensions:

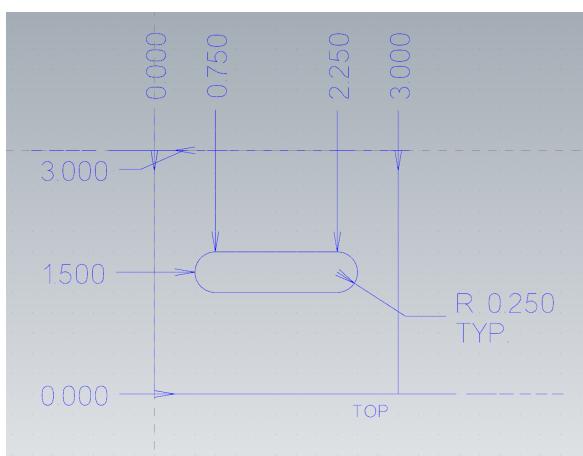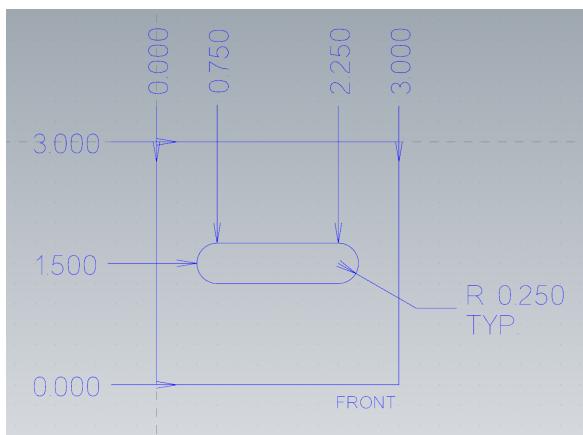

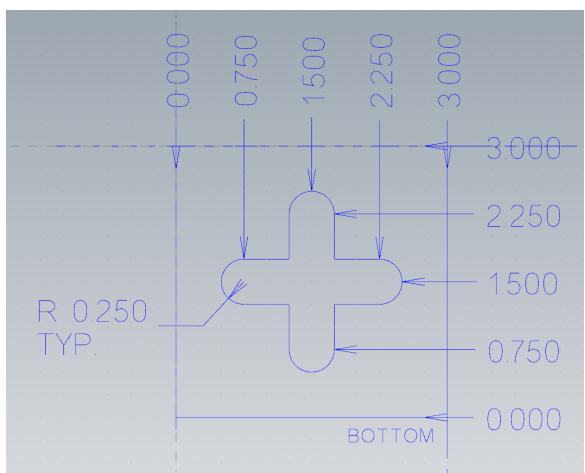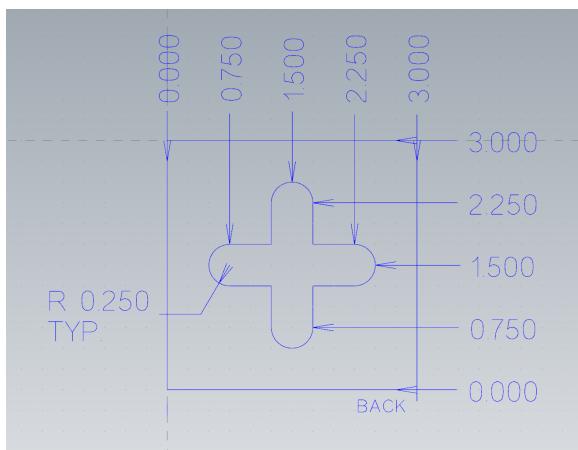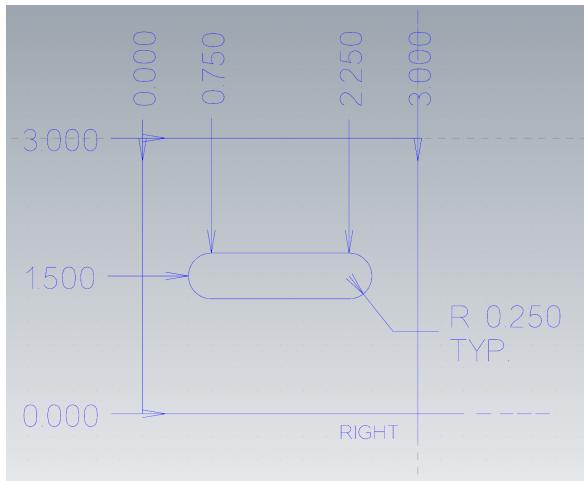


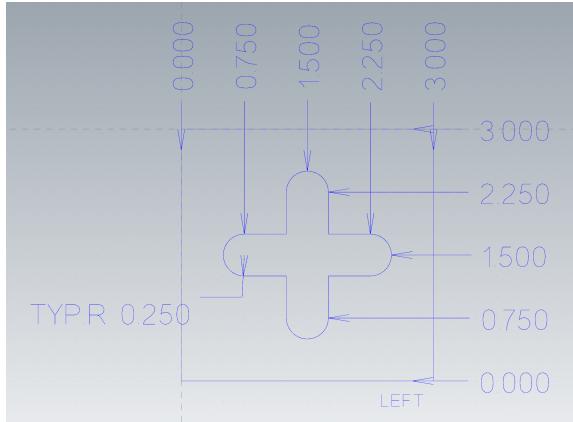


### III. Toolpaths:

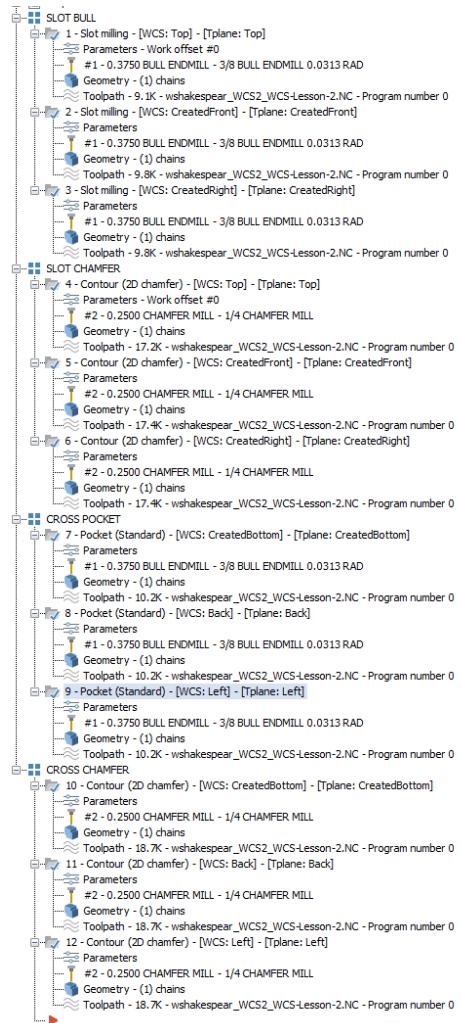


IV. Toolpath Top:

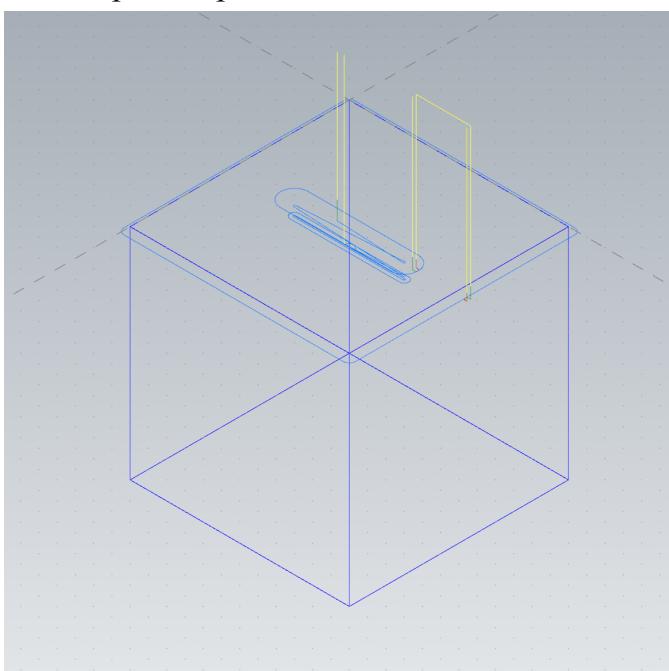


V. Toolpath Bottom:

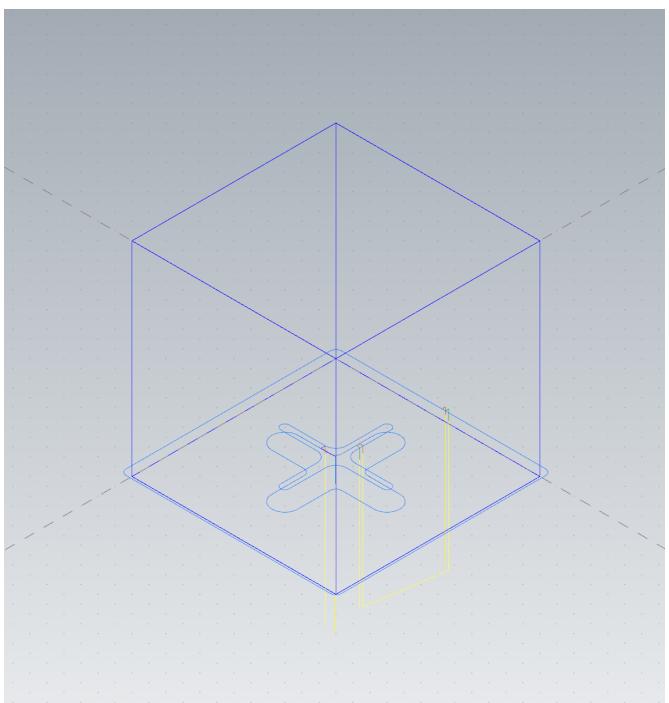


VI. Toolpath Left:

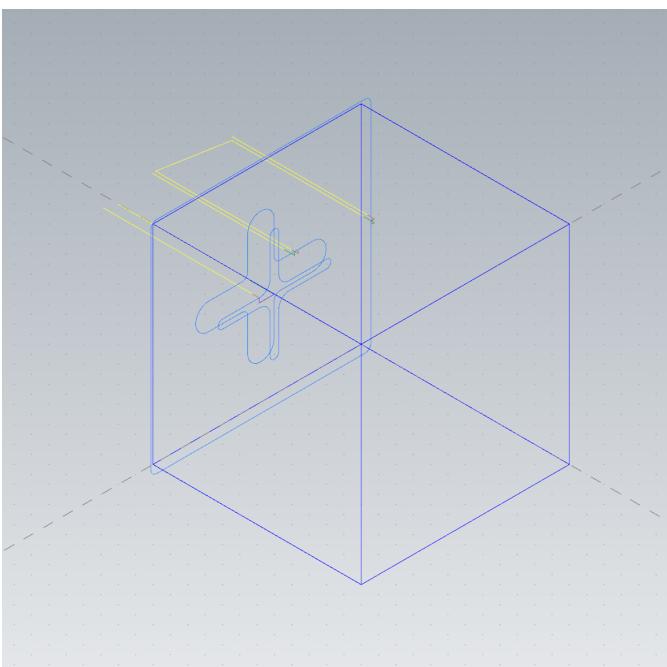


VII. Toolpath Right:

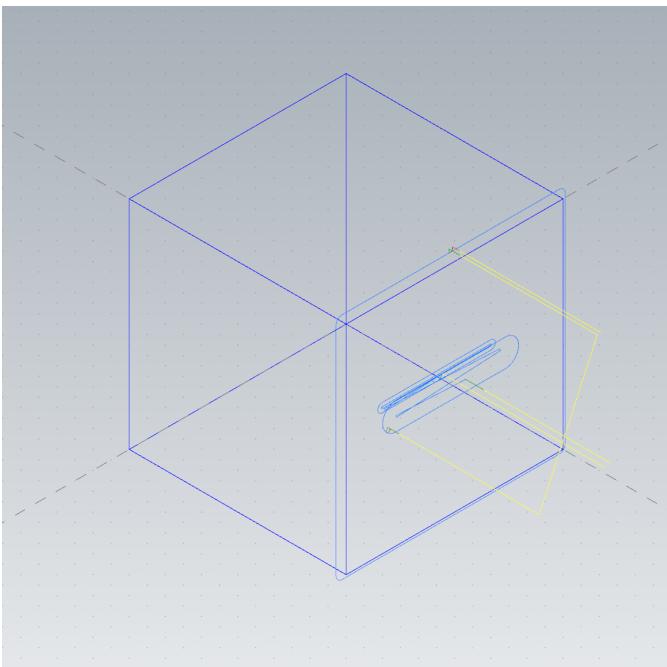



VIII. Toolpath Front:

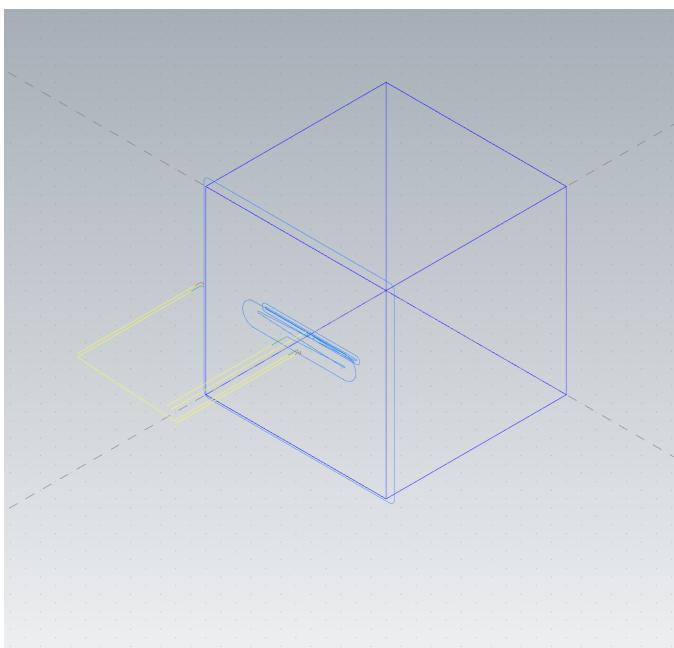

IX. Toolpath Back:

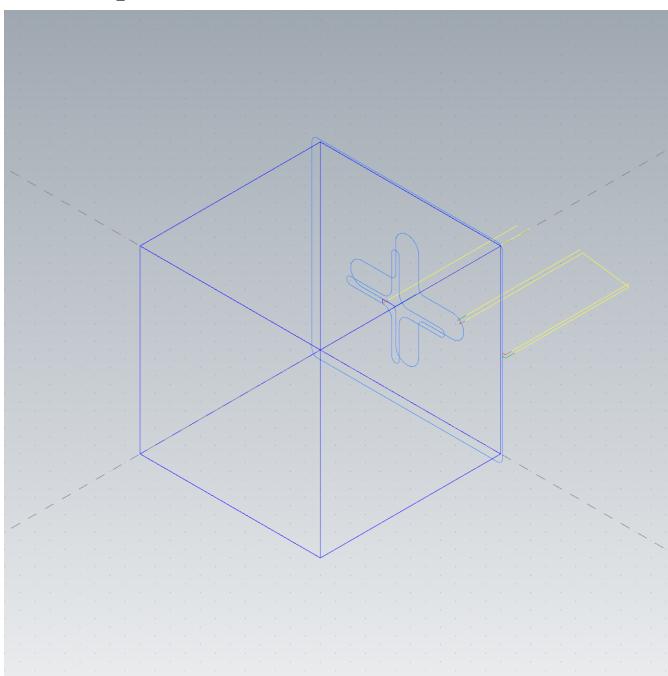

X. Final Simulated Solid:

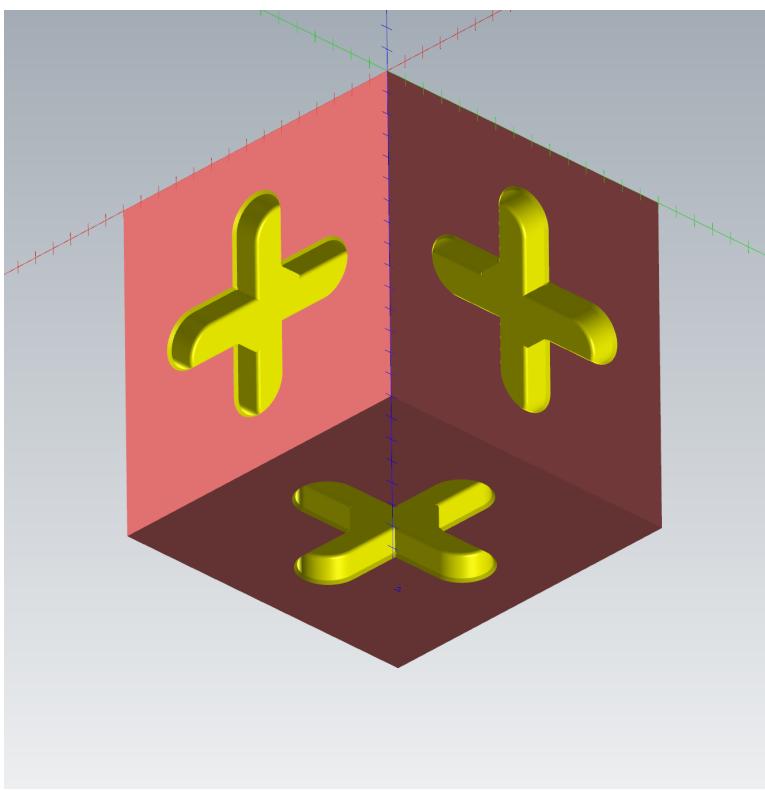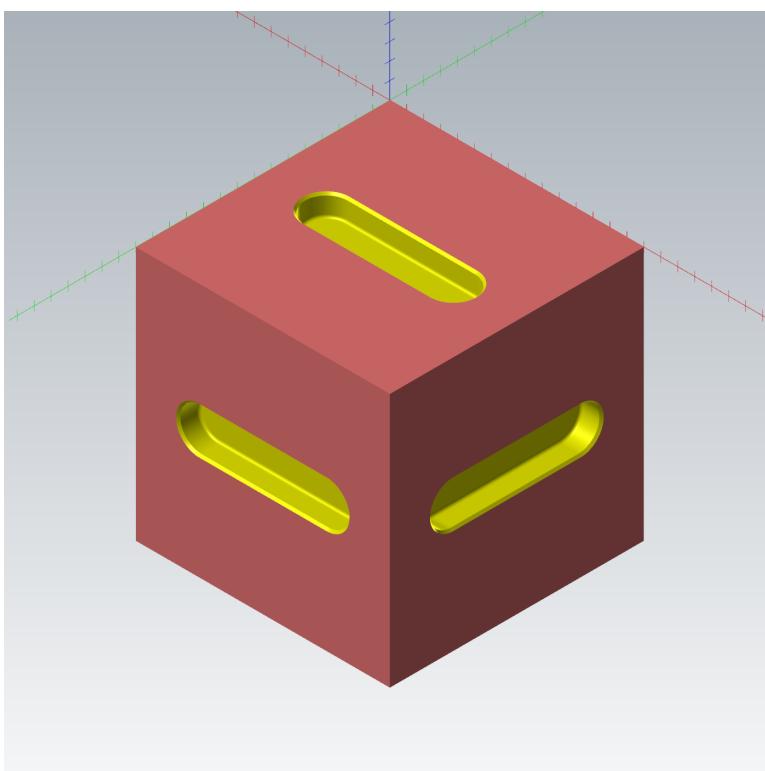

XI. Method:

For this lesson I just directly followed the tutorial, finished the toolpaths using the same principles.