


DHD v1

Assembly Manual

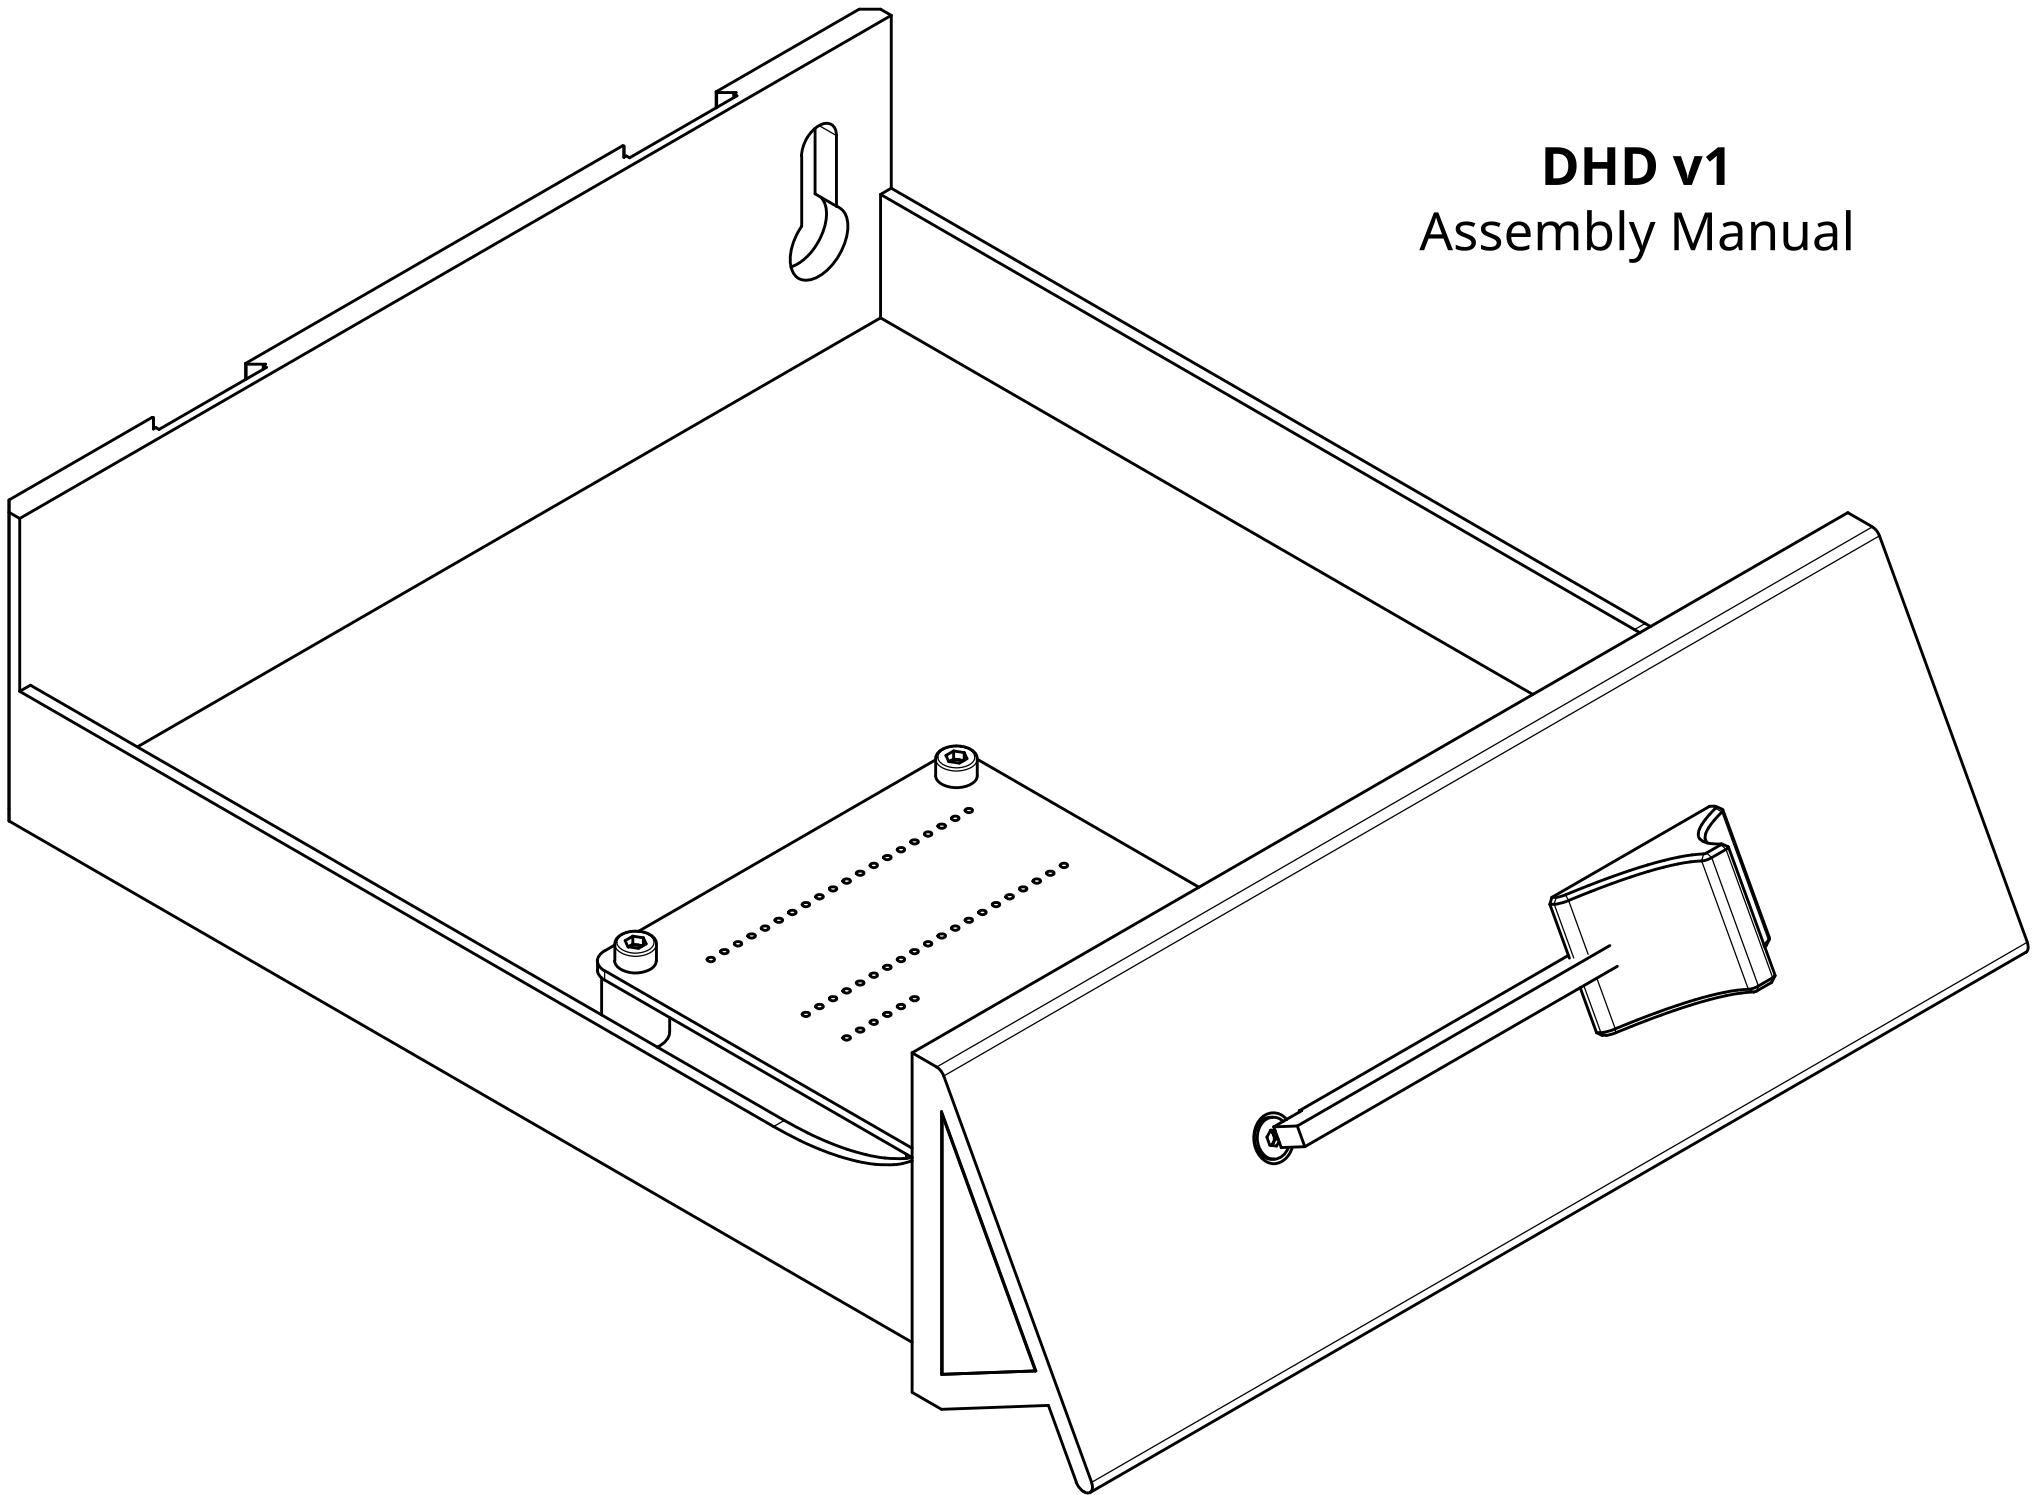

Item	Name	Quantity	Description	Material	Title 1
1	DHD Drawer	1	GEN2-compatible drawer structure	PLA	3D-printed
2	PCB	1	PCB board		Assembled
3	Hex socket head cap screw M3x0.50 x 6	8	Hex socket head cap screw M3x0.50 x 6 Stainless Steel	Stainless Steel	Buy it
4	PCB HCI	4	M3x5.7x5.0 heat-set insert	PLA	3D-printed
5	Facade	1	Facade	PLA	3D-printed
6	Facade HSI	4	M3x4.8x5.0 heat-set insert	Copper	Buy it
7	Fader Ghost	1	Bourns PSL60		Buy it
8	Hex socket countersunk head screw M3x0.5 x 8	4	Hex socket countersunk head screw M3x0.5 x 8 Stainless Steel	Stainless Steel	Buy it
9	Knob	1	Knob to manipulate the fader more comfortably	PLA	3D-printed
10	Right Panel	1	Covers the right side of the facade	PLA	3D-printed
11	Panel HSI	2	M3x4.0x5.0 heat-set insert	Copper	Buy it
12	Left Panel	1	Covers the left side of the facade	PLA	3D-printed

Bill of Material


Phase A — Heat Set Inserts

Grab your soldering iron, set it to about 50°C above printing temperature (so something like 270°C for PLA) and push the inserts into the plastic. This design is rather tolerant for different sizes of inserts, longer or shorter. Just make sure that the contact surface is flush so that the parts can be fastened closely.




Step 1 - Insert into the panels

M3x4.0x5.0

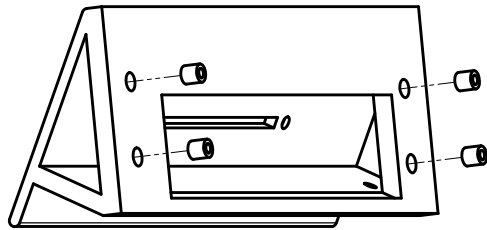

Step 2 - Insert into the facade

M3x4.8x5.0

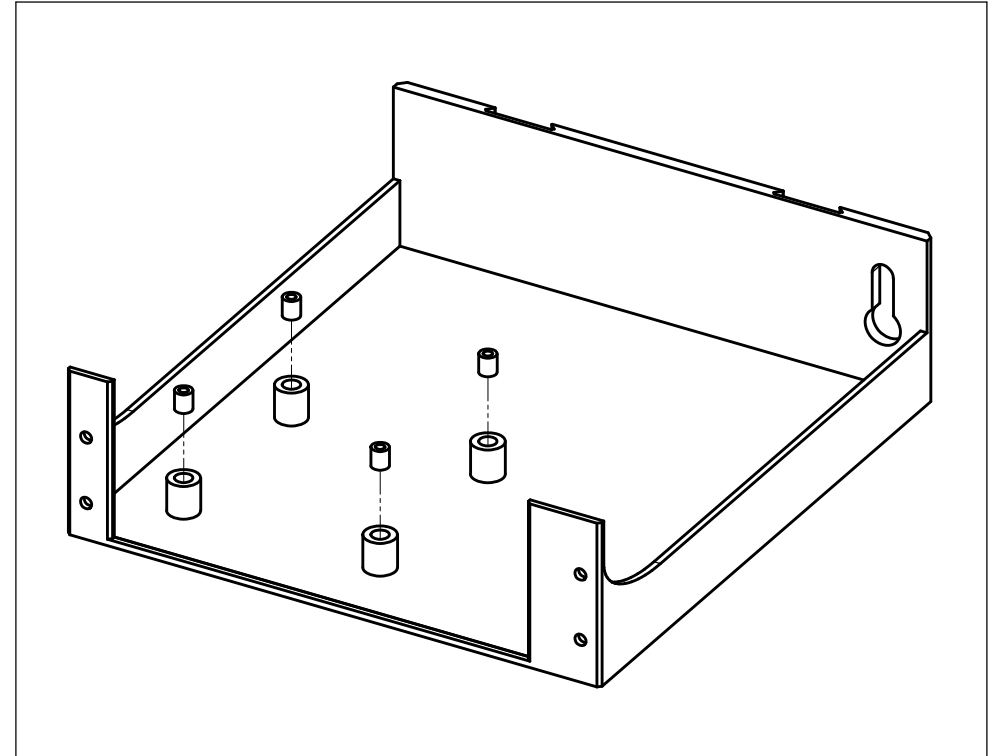


Step 3 - Insert into the PCB support


M3x5.7x5.0

Phase B — Facade

The facade is the main part of this project in terms of assembly. Then in the next phase we'll just need to plug it into the drawer.

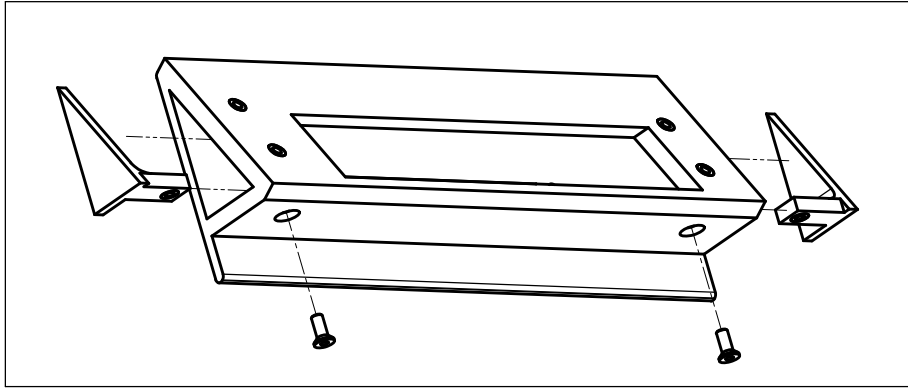


Step 4 - Screw the panels

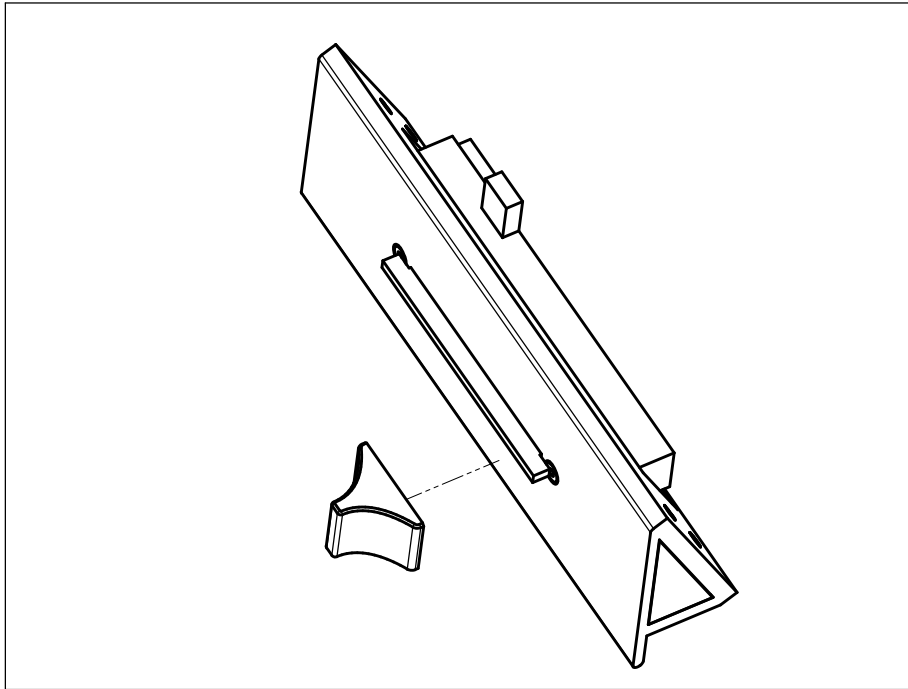

Step 6 - Attach the knob


You probably will have to force a little bit, the adjustments are intentionally tight so that the knob stays in place.

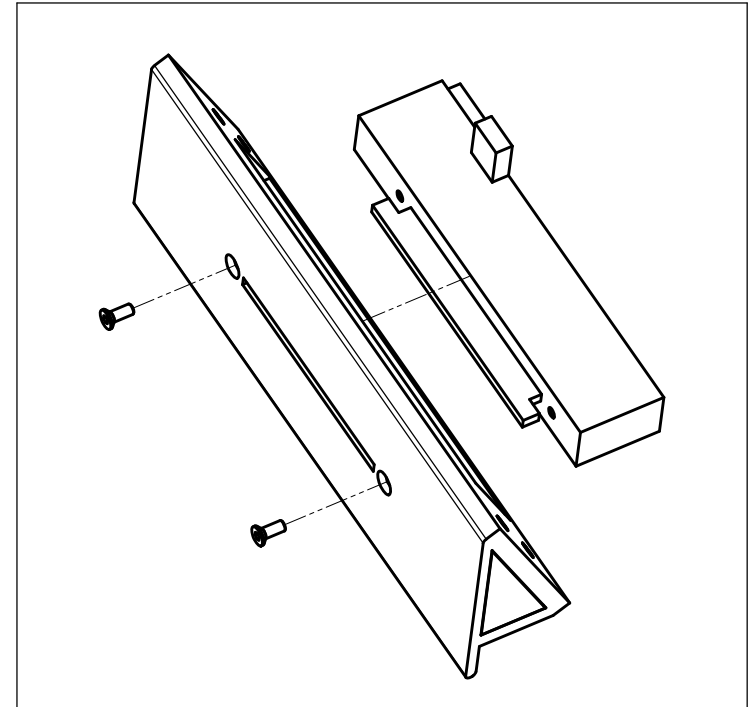

Step 5 - Screw the fader


Phase C — Bring it together

All the main blocks are assembled, all there is left is build it all together.

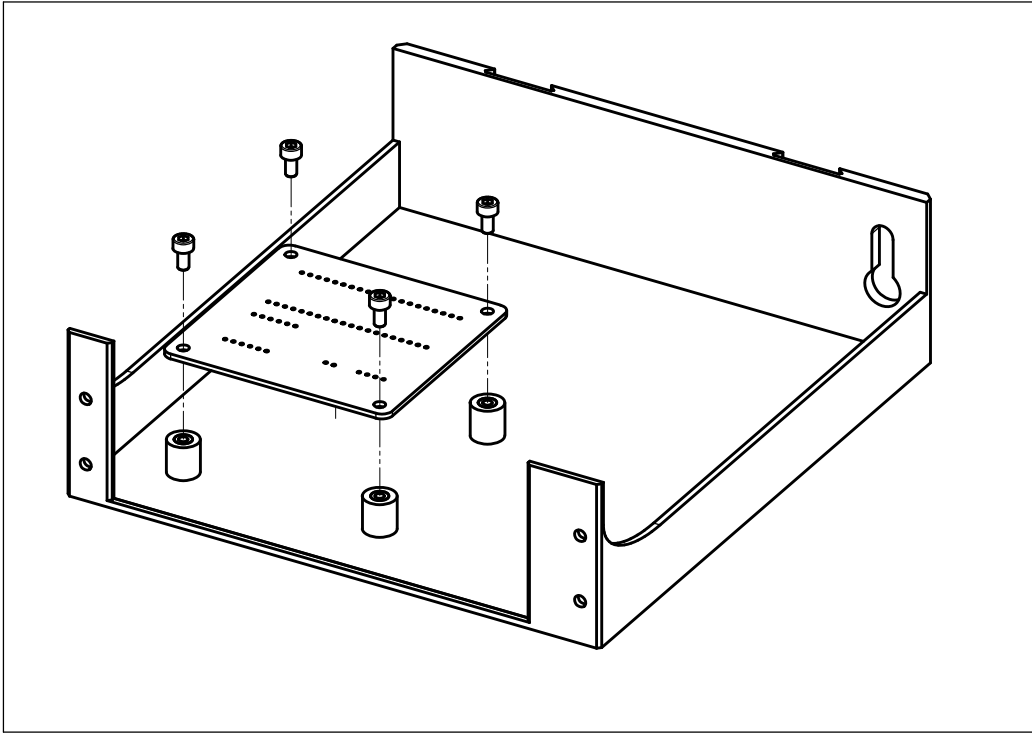

Step 7 - Screw the PCB

Be careful about the orientation, the Raspberry Pi's USB should be pointing towards the right, where there is ample space for the cable to go and exit through the hole.

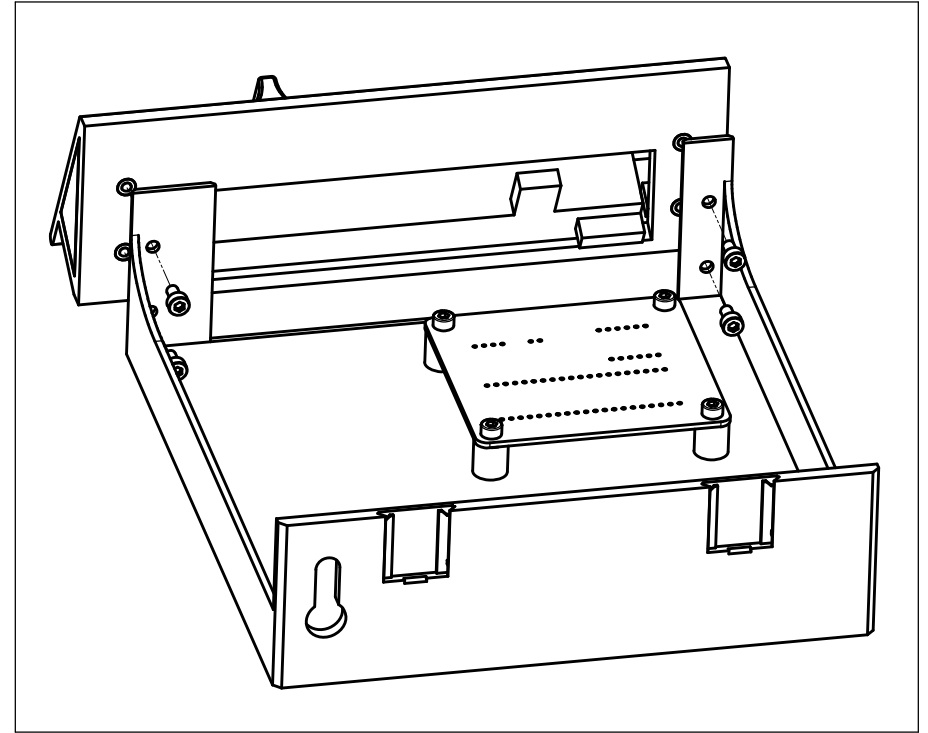

Step 8 - Screw the facade to the drawer