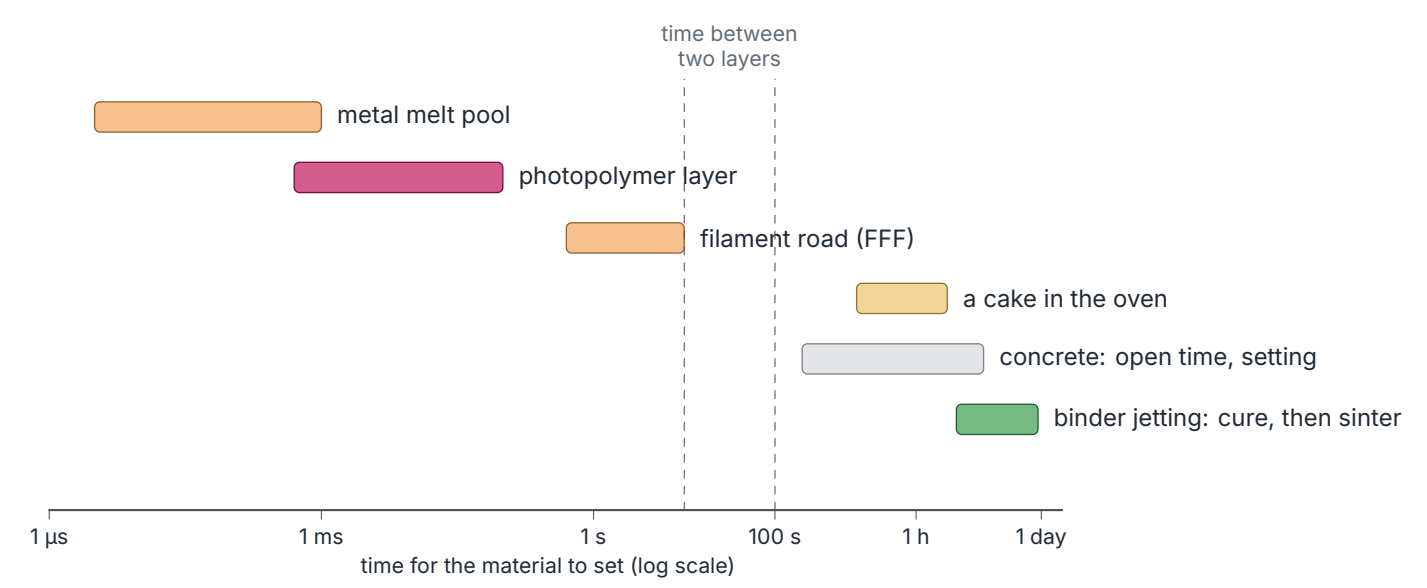

Order-of-magnitude values. If the material sets much faster than the next layer comes, layers are welded or bonded; if slower, the stack must carry itself.