


VERTICAL WALL

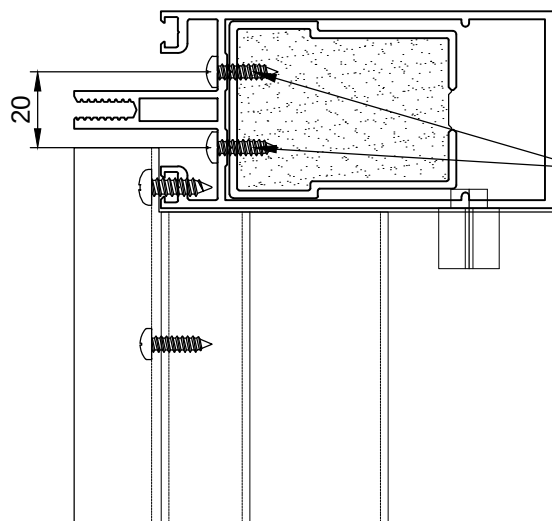


82K216

In the mullions, close to dilatation cut, the screws 82K216 should be replaced by 82L519 see page TE52-31-12.

82K216


4 pcs. per transom

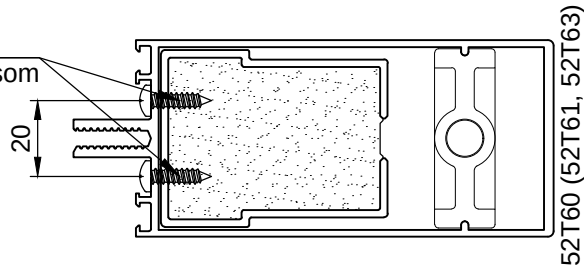

52T60 (52T61, 52T63)


82K216

4 pcs. per transom

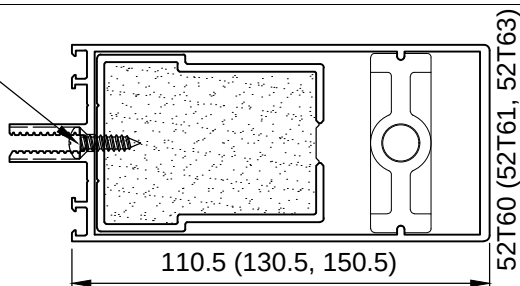

52T60 (52T61, 52T63)

SLOPED WALL/
ROOF

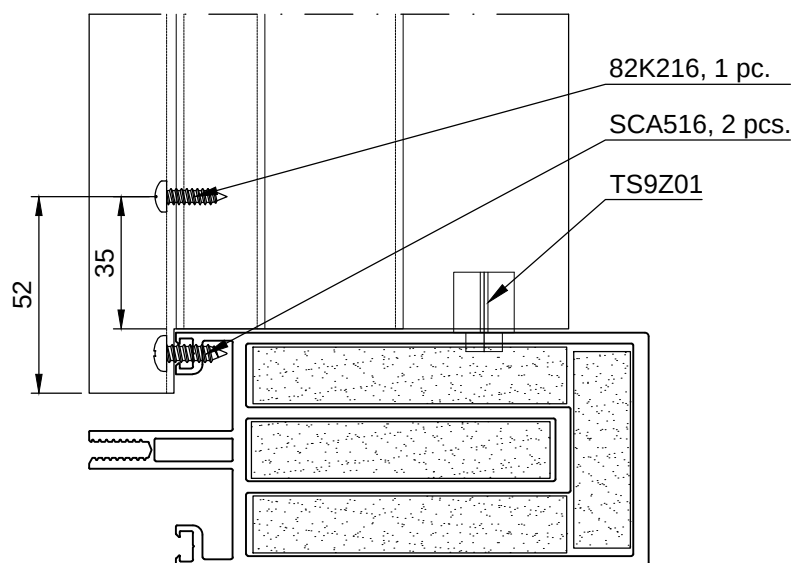


82K216, 1 pc.

SCA516, 2 pcs.


TS9Z01

Positioning of the screws 82K216 (fixing reinforcement section CO5008) see page TE52-31-54 ÷56.
Preparation of transoms see page TE52-31-57.


VERTICAL WALL

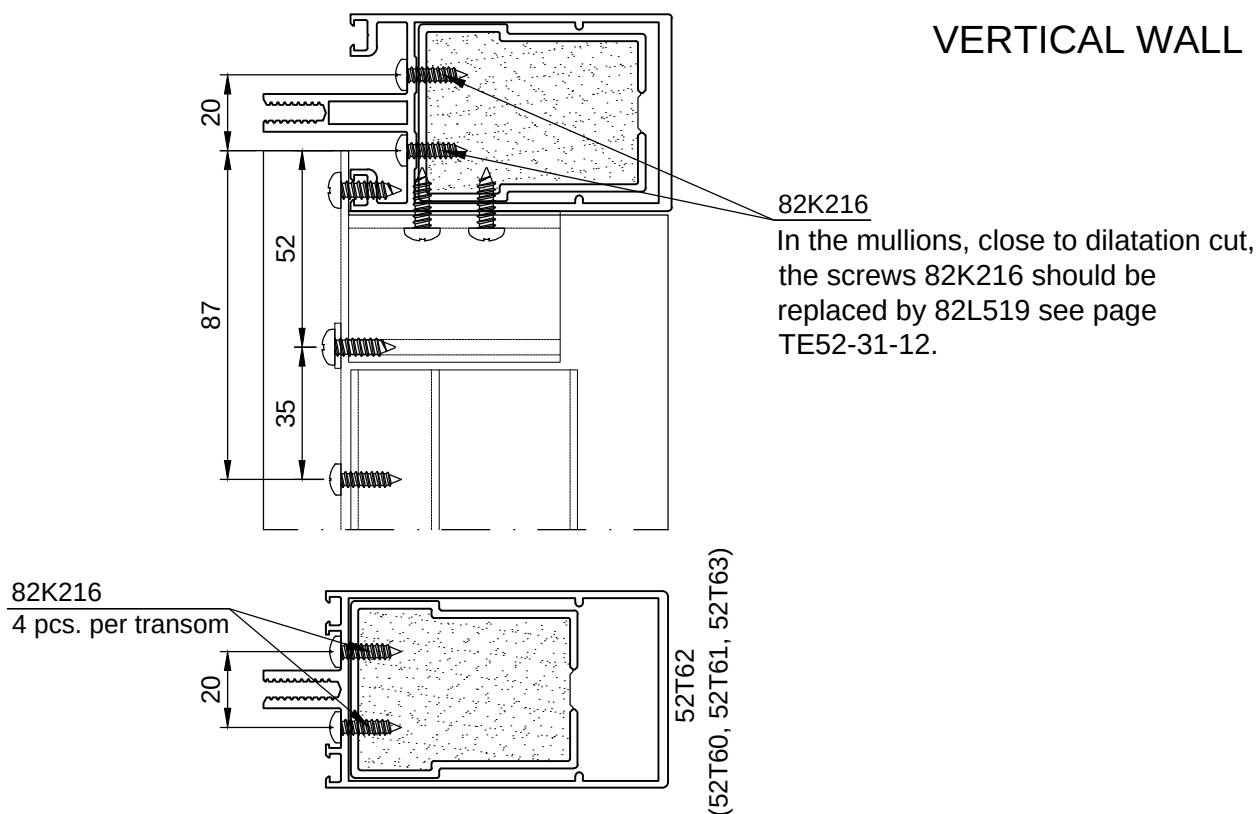

SLOPED WALL/
ROOF

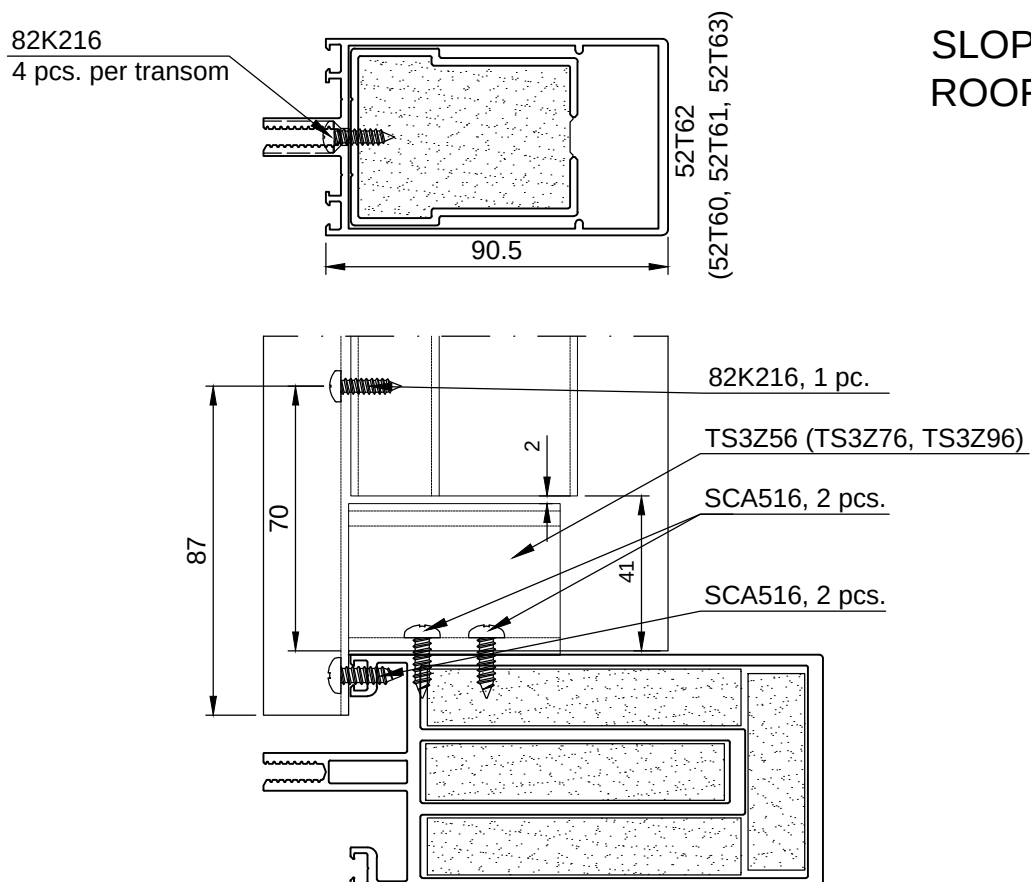


Positioning of the screws 82K216 (fixing reinforcement section CO5008) see page TE52-31-54 ÷56.
Preparation of transoms see page TE52-31-57.

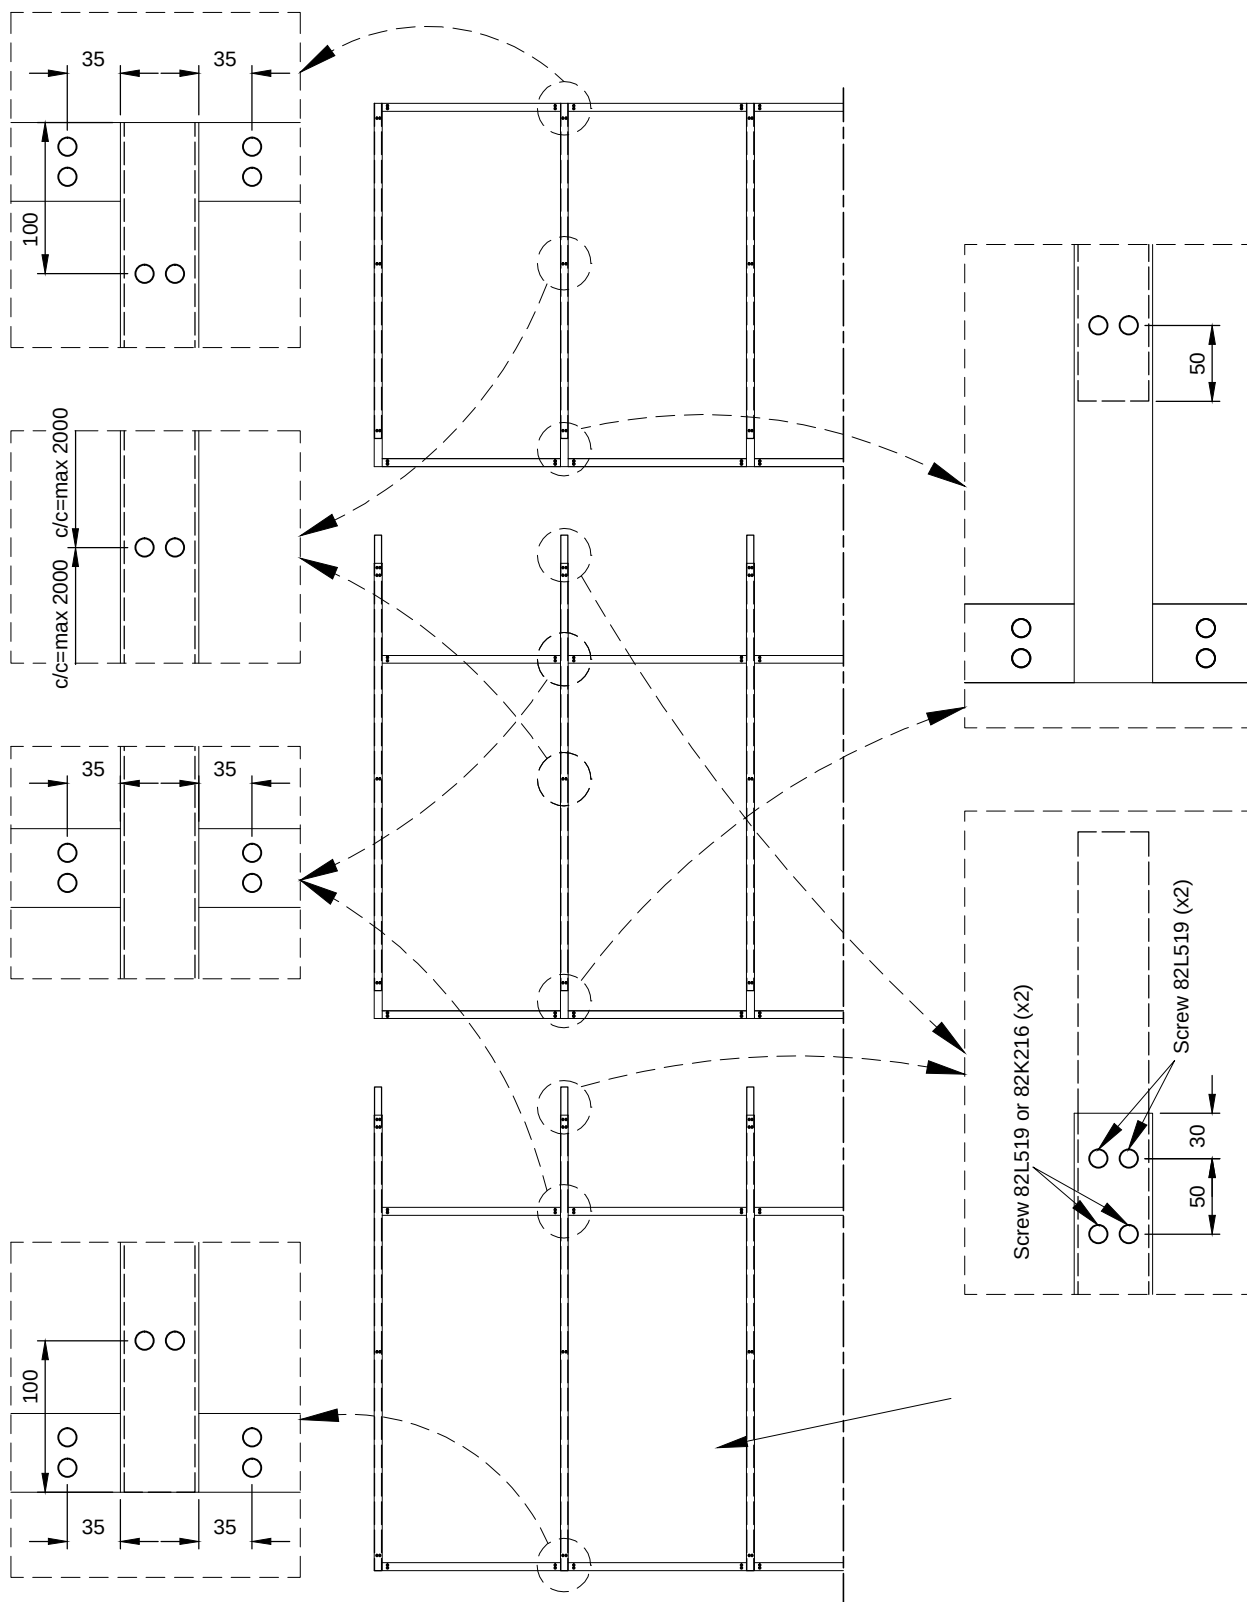


Detail positioning of the screws 82K216 in the profiles see pages TE52-31-51, -52, -53, TE52-31-12, -13, -14, -21, -22, -23, -26, -27.

In the mullions, close to dilatation cut, the screws 83K216 should be replaced by 82L519 see page TE52-31-12.








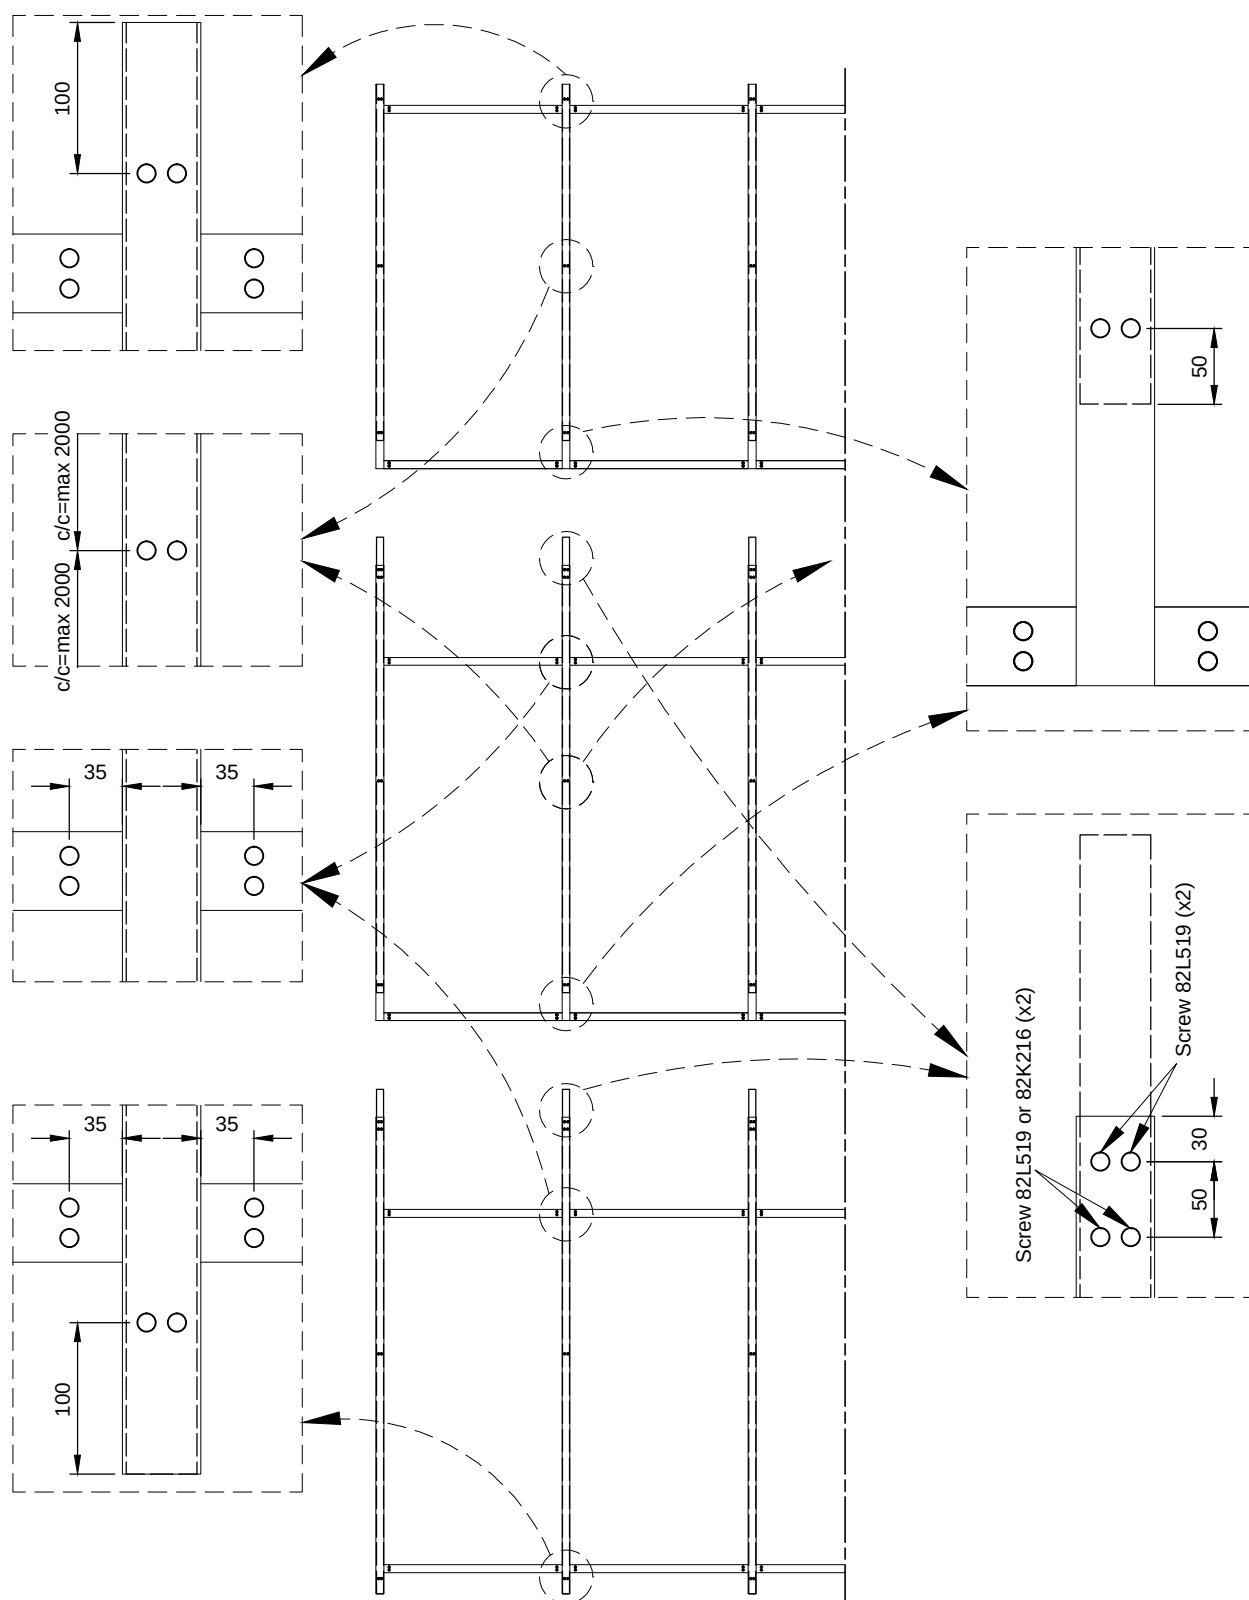






Detail positioning of the screws 82K216 in the profiles see pages TE52-31-51, -52, -53, TE52-31-12, -13, -14, -21, -22, -23, -26, -27.

In the mullions, close to dilatation cut, the screws 83K216 should be replaced by 82L519 see page TE52-31-12.

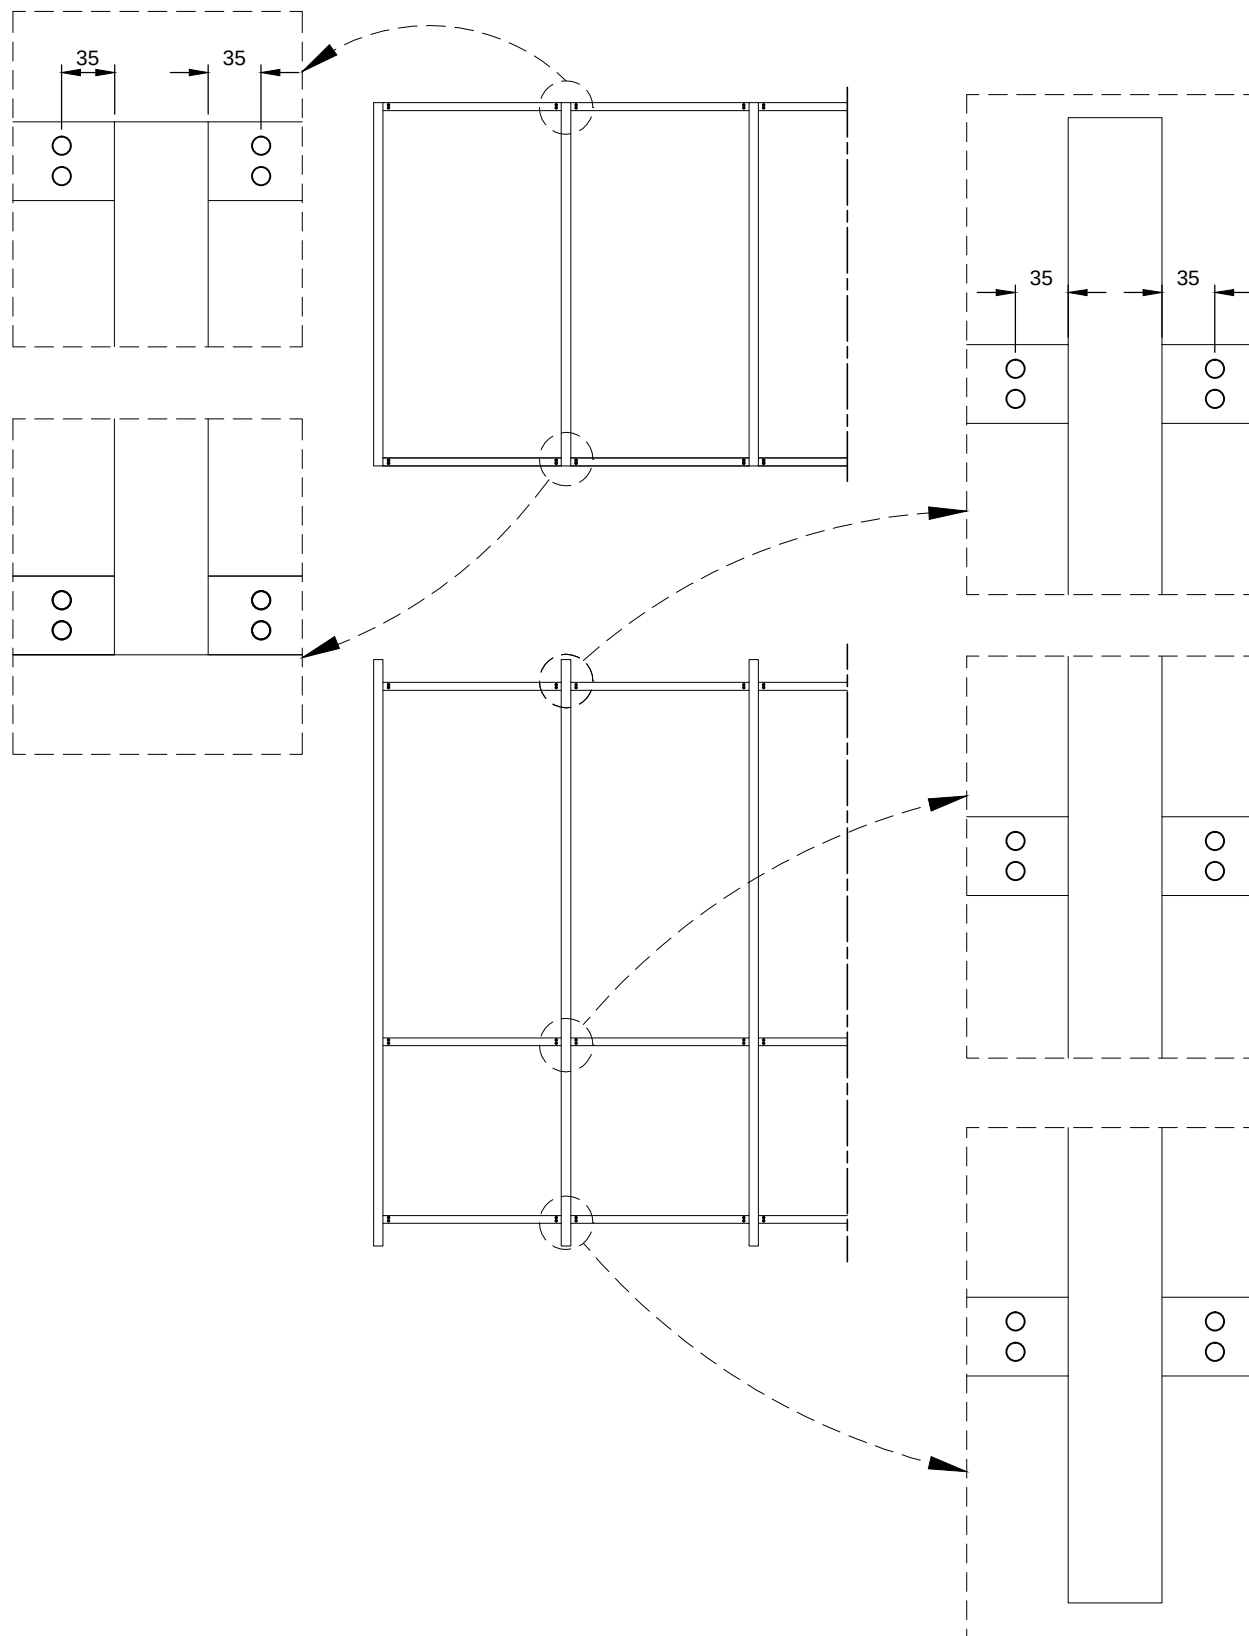

Detail positioning of the screws 82K216 in the profiles see pages TE52-31-51, -52, -53.

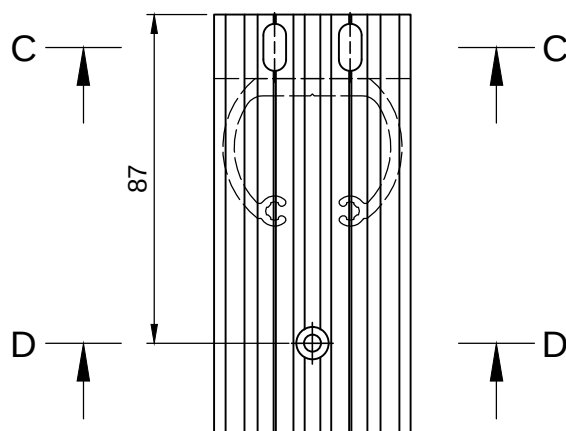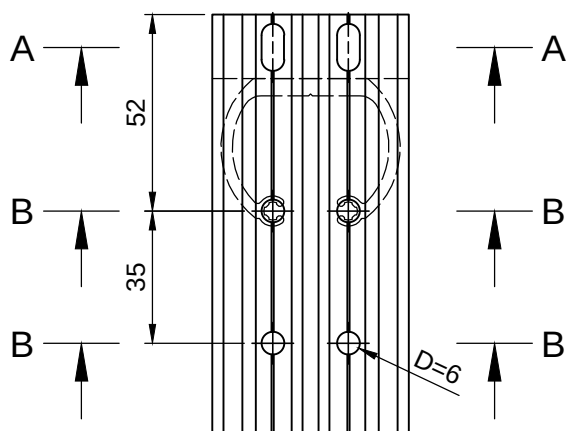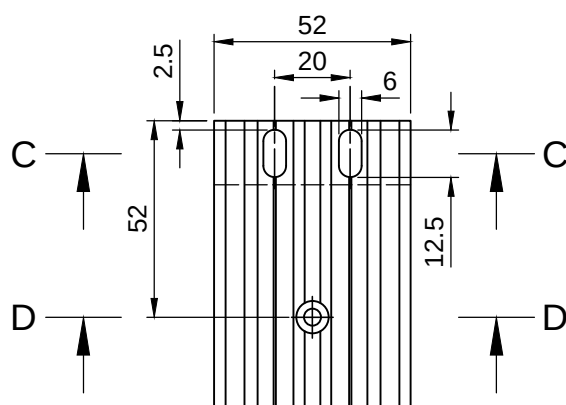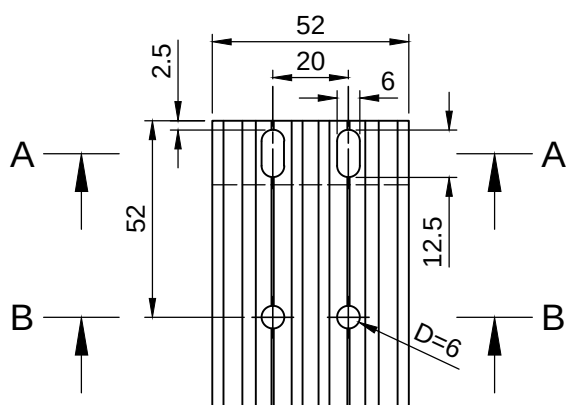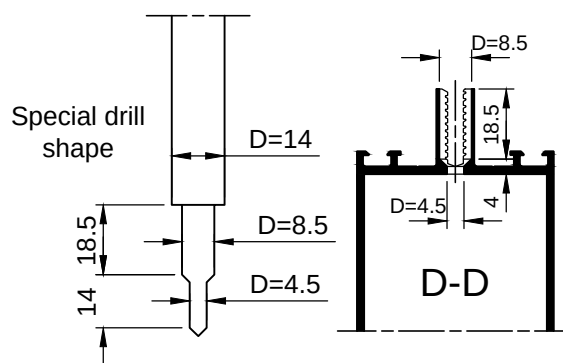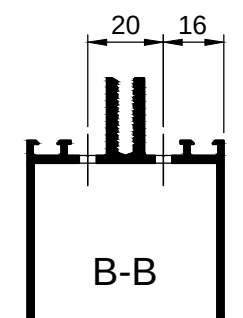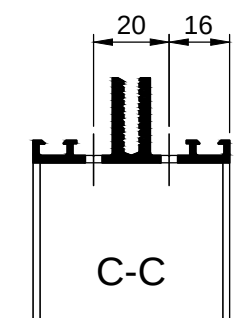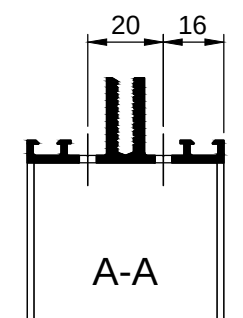

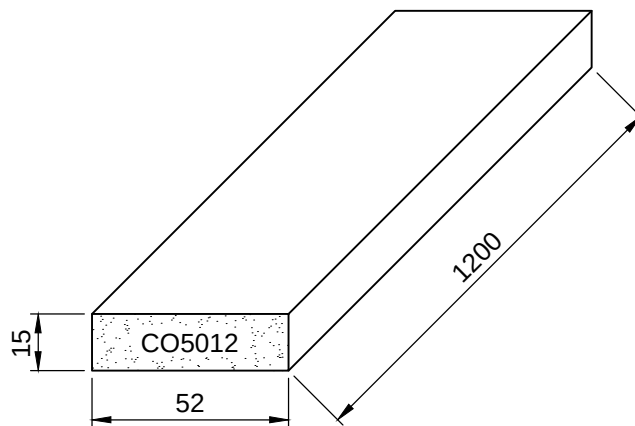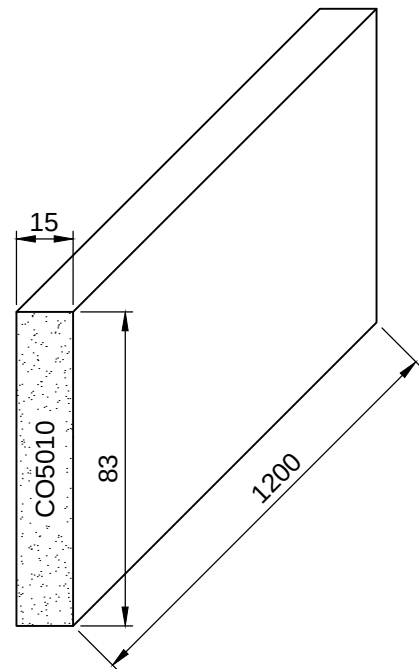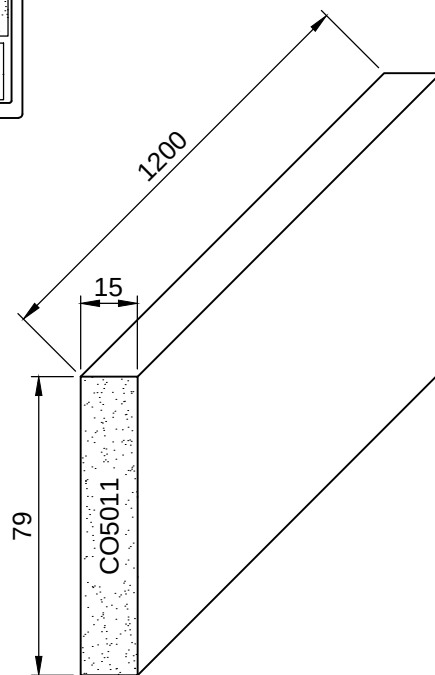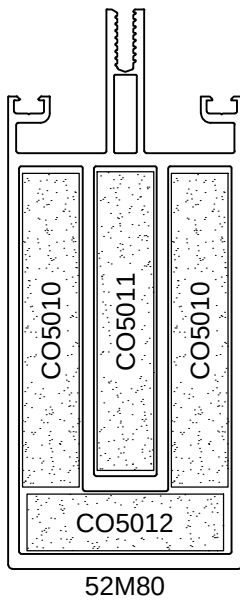

Inserts should be slide in and pushed "end to end" to avoid gaps between them along mullion profile. No joint or sealing is required.

