


Construction Manual

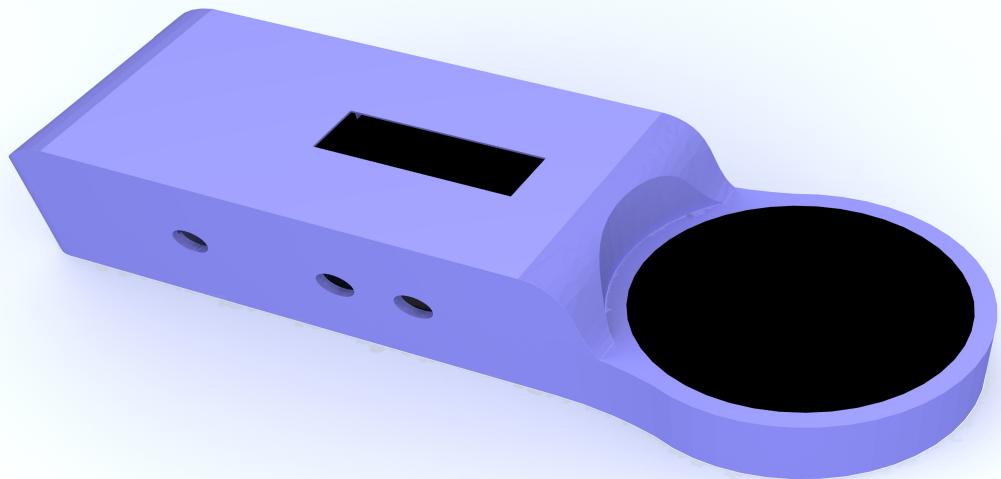

Welcome to the FLipPad

Construction Manual

This manual covers detailed step-by-step instructions for building the FLipPad alternative input system.

As additional tools you will need:

- a soldering iron with a fine tip
- sharp side-cutting pliers
- a slotted screwdriver
- optionally a PCB holder

The required materials are:

- tin-solder (small diameter)
- adhesive tape (Scotch tape)

Legend



Solder / do not solder



Clip / do not clip with pliers



Fix / do not fix with tape



Attention: orientation of this part is important!




This part is done in this step



Part number for this step
(see part overview on page 3/4)

Part Overview - Electronic Parts


1

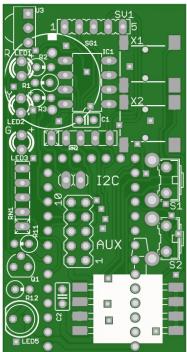

2




3

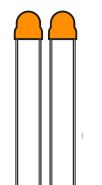


4




5

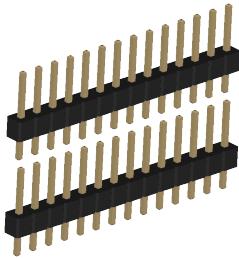


7

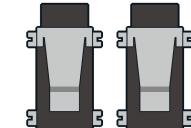

6

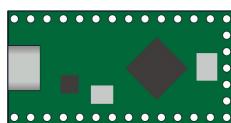


8

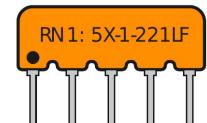

9



10

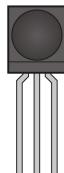

11




12



13



14

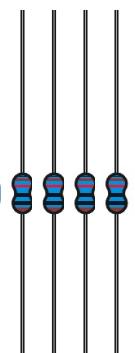

15



16




17



18



19

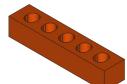

20



Part Overview - Case Parts


21





22




23

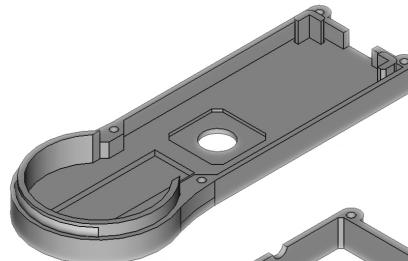

24

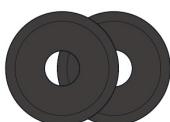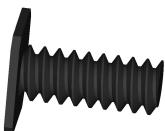

25

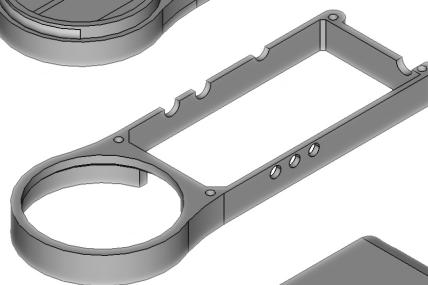


26




27



28

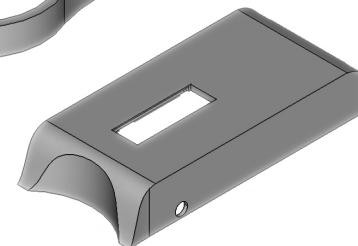

29

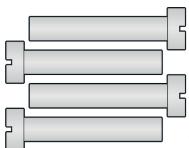





Optional Parts:

30







1

2

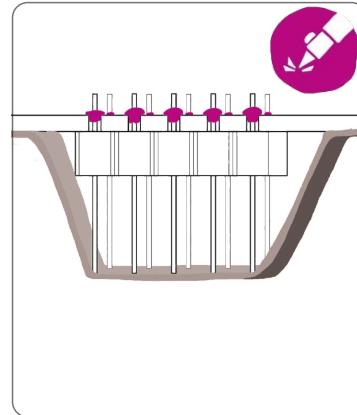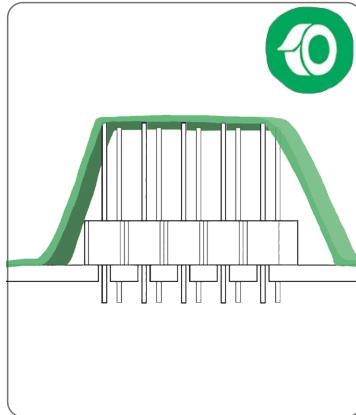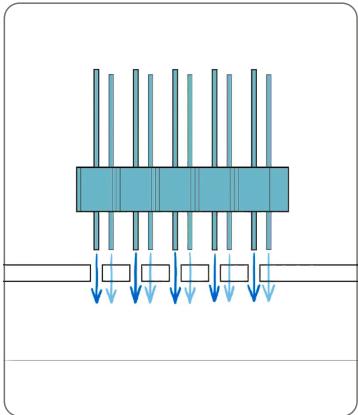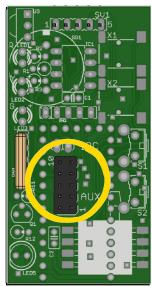









3

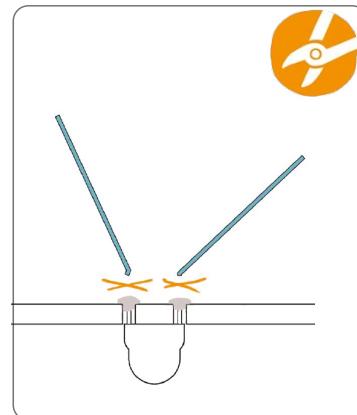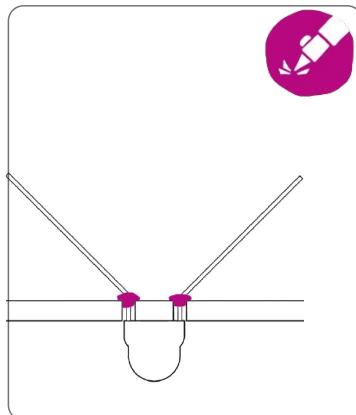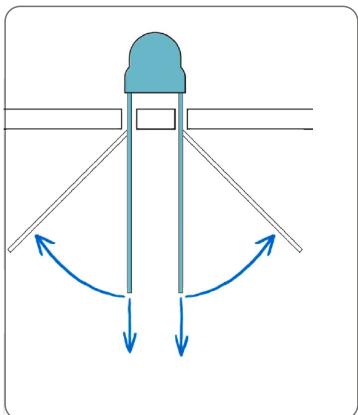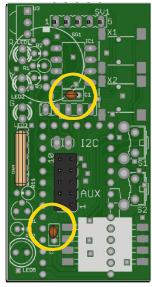





4

5





6

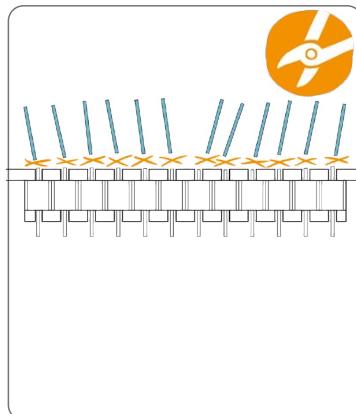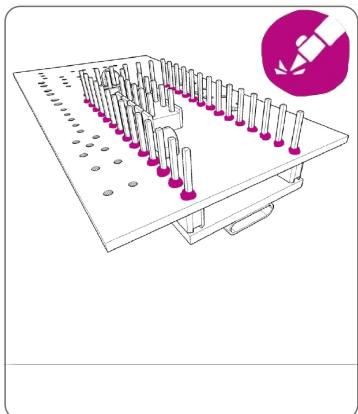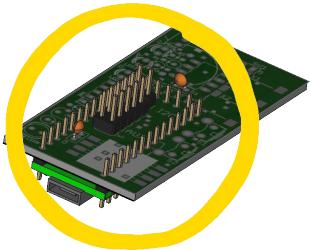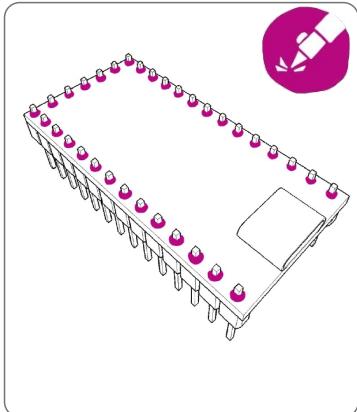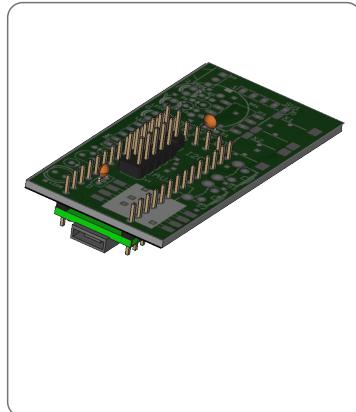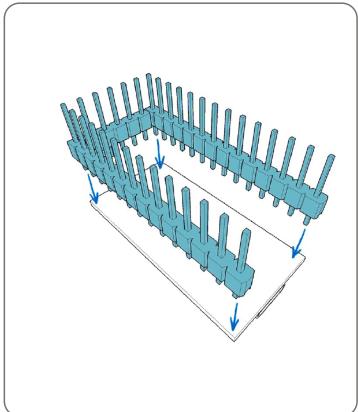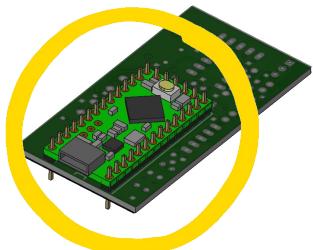





7

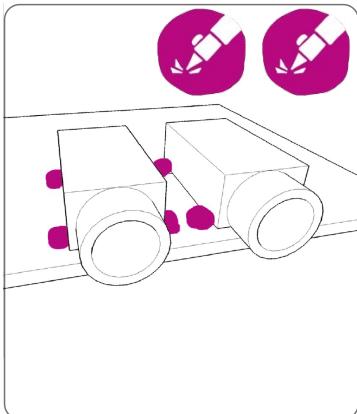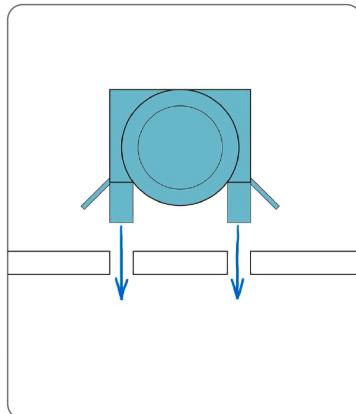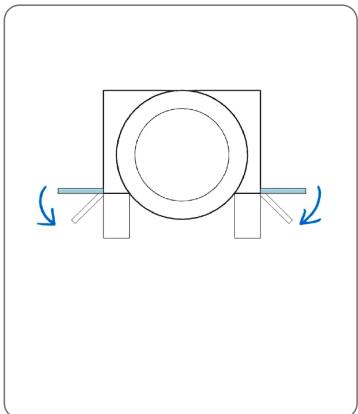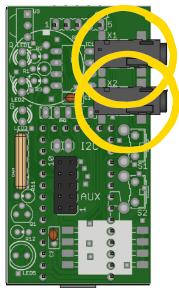





8

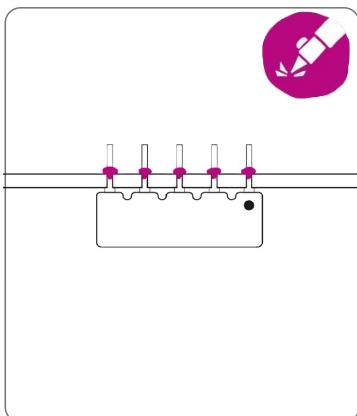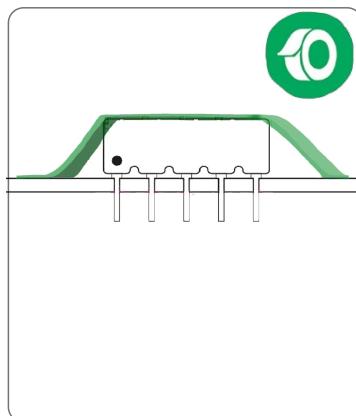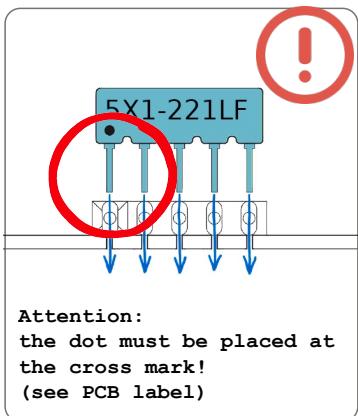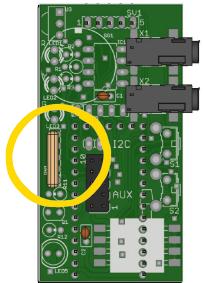





9

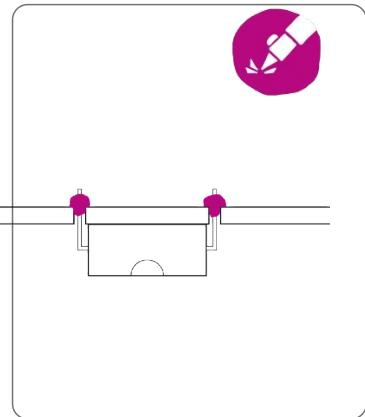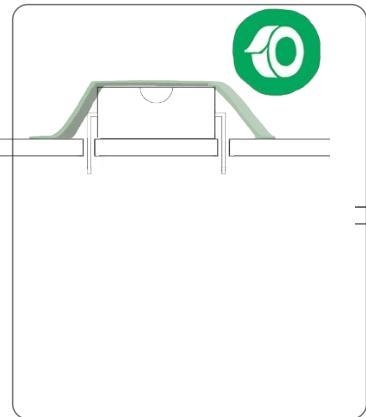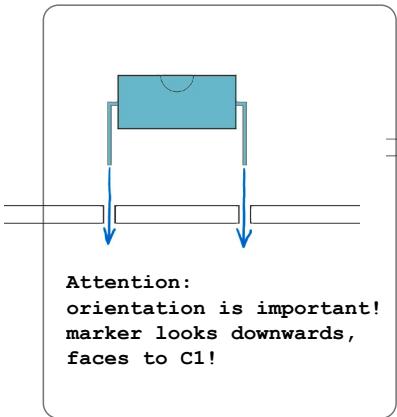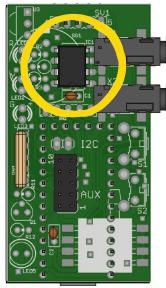

10

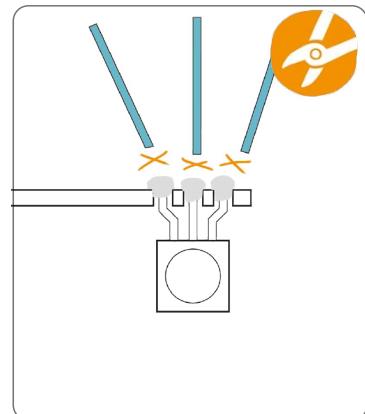
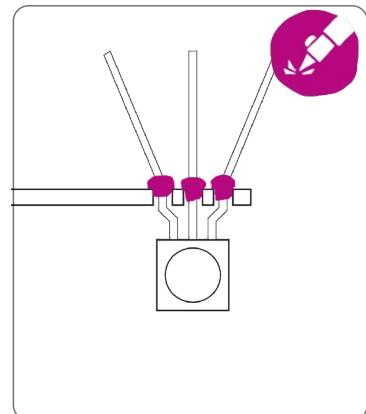
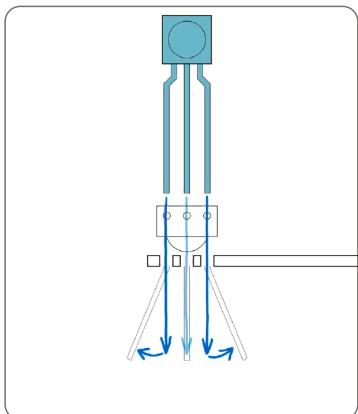
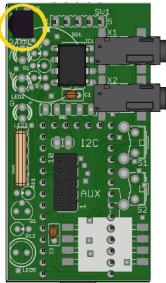


11

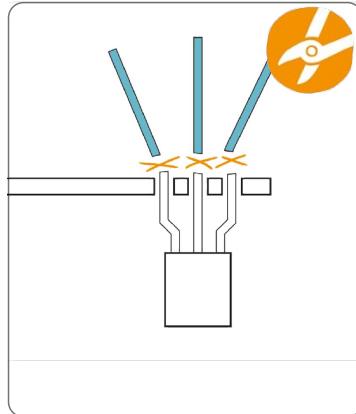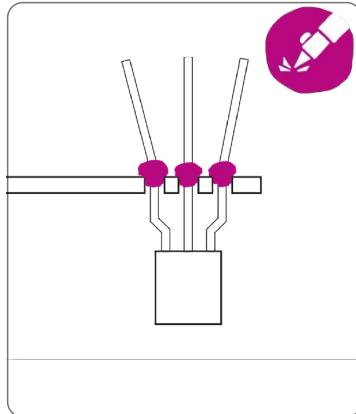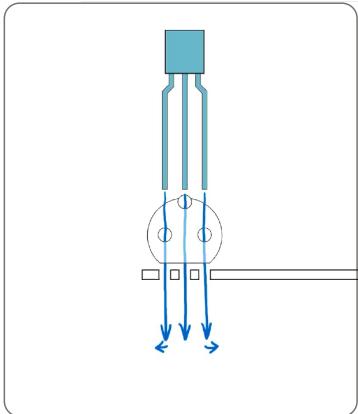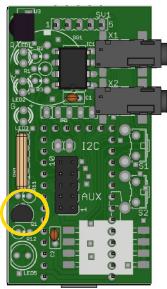


12


13

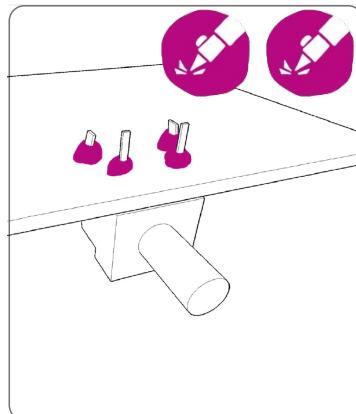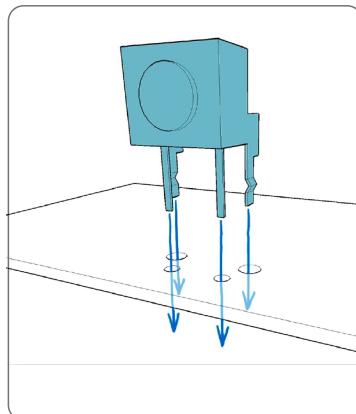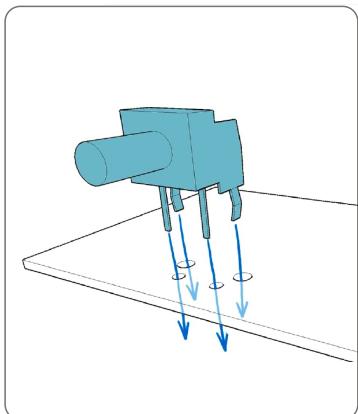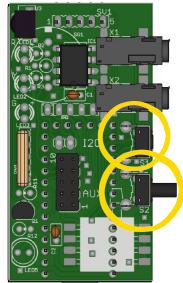


14

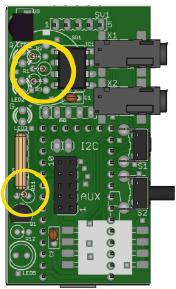


4x

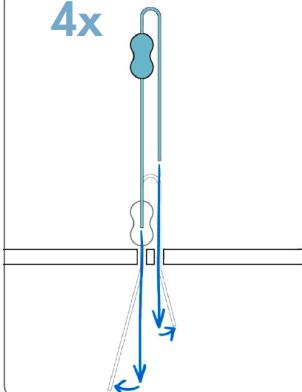


4x

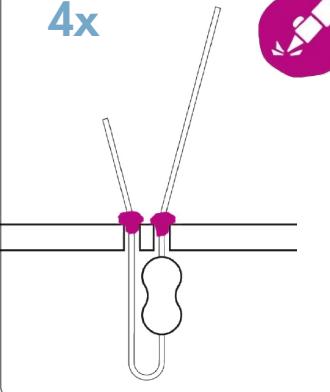




4x

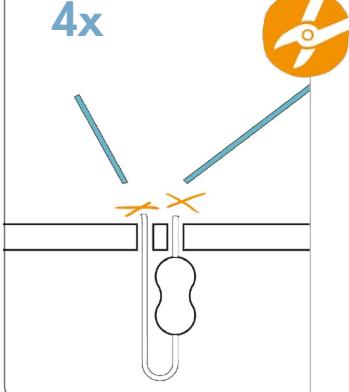





15

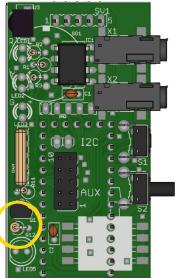





4x

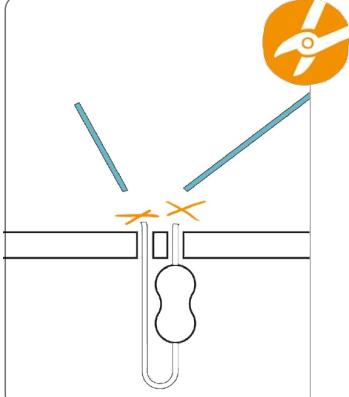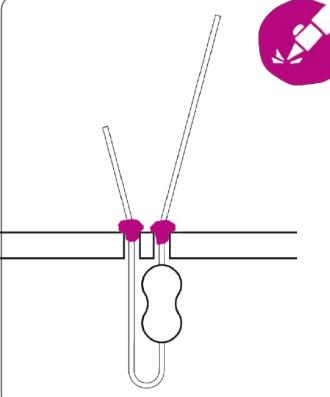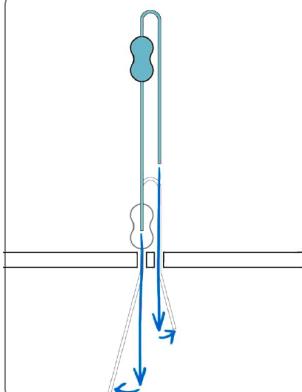





16

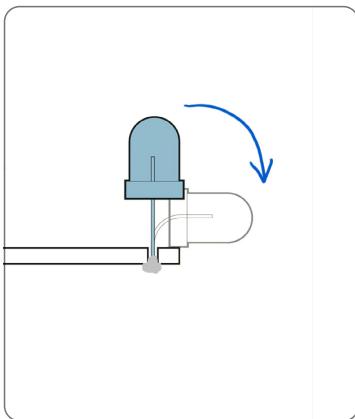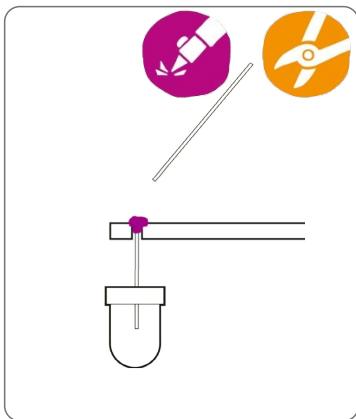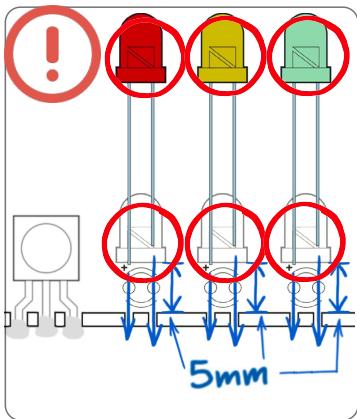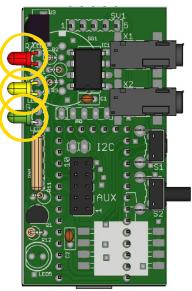

17

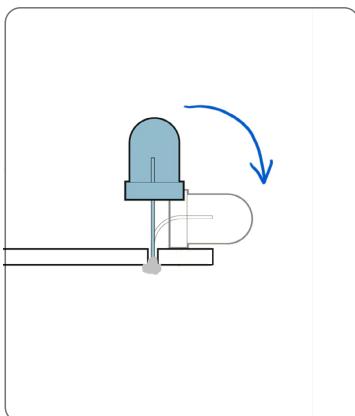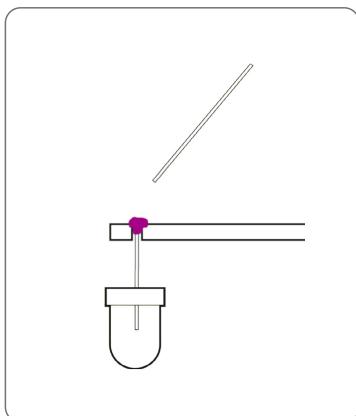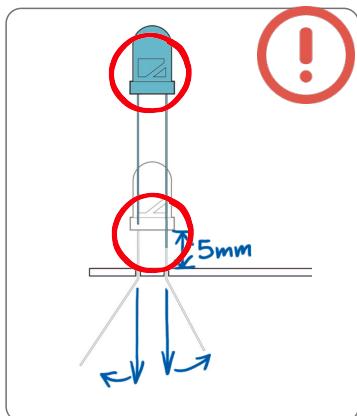
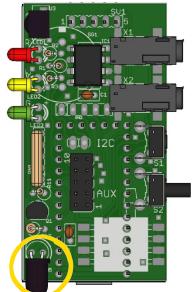


18

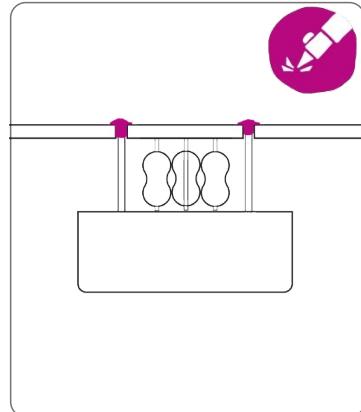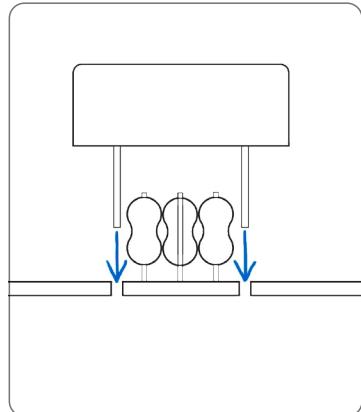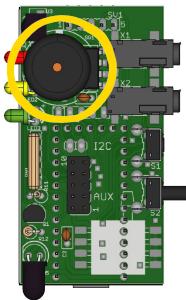

19

20

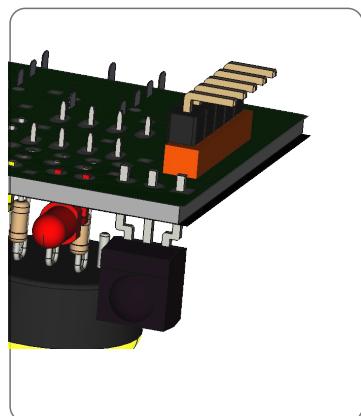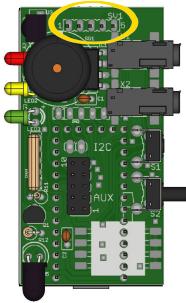


Attention: place orange spacer between
PCB and connector, then solder the longer side
of the connector on the other side of the PCB.

30






optional

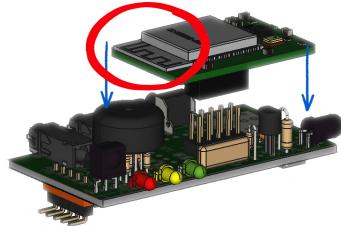




21






22

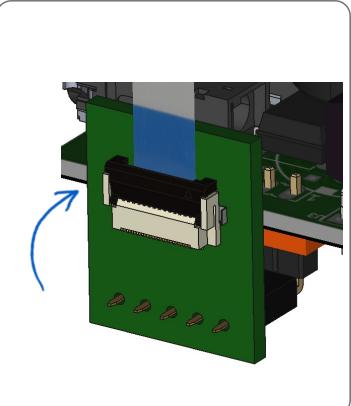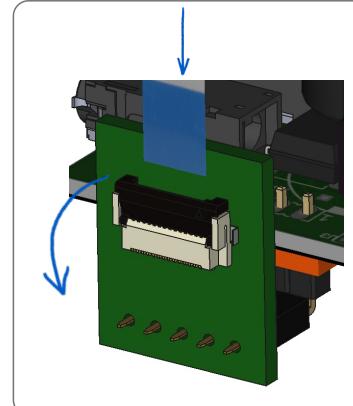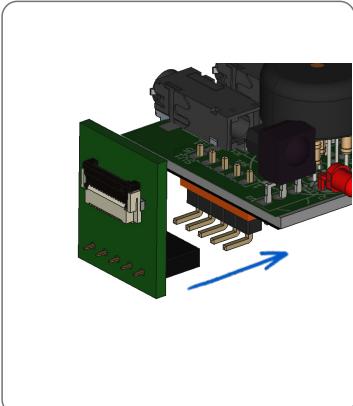





23 24

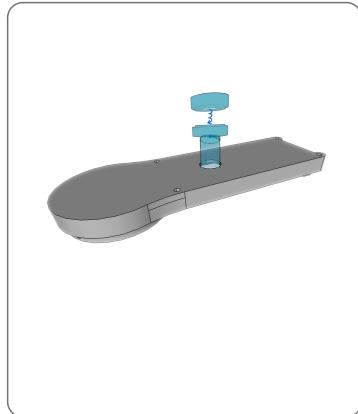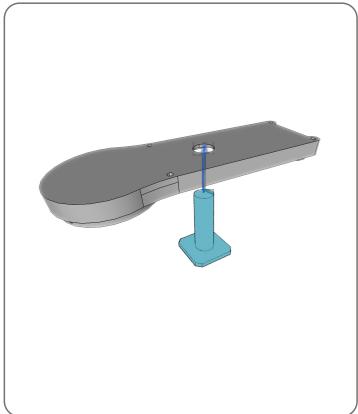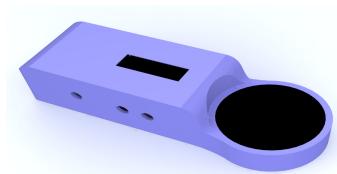


25

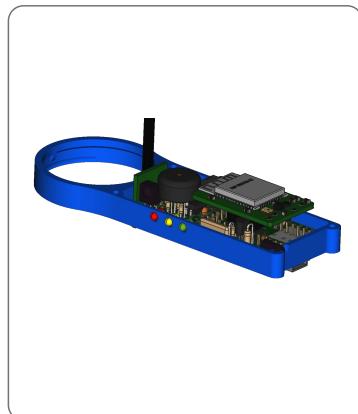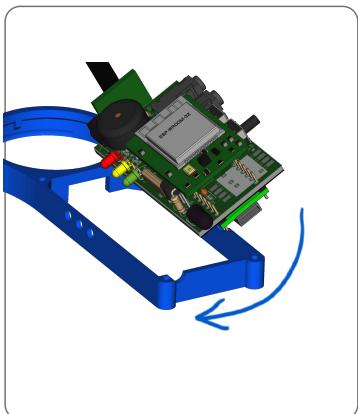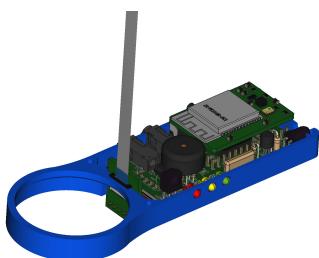







26

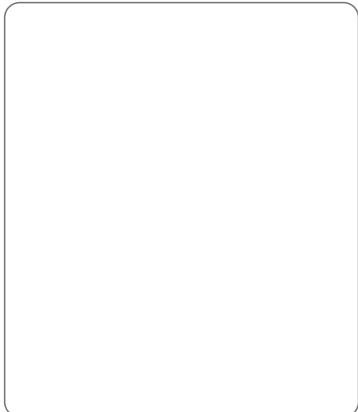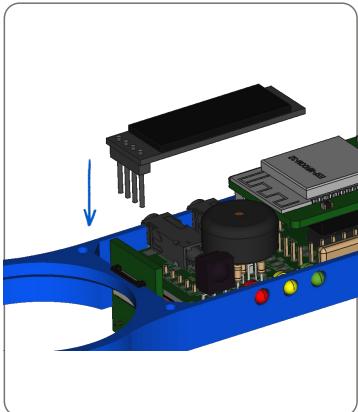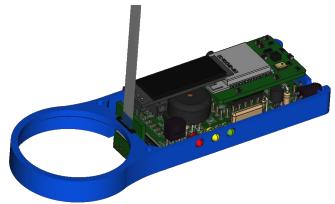

27

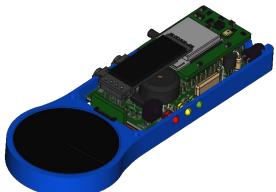

23 28 29

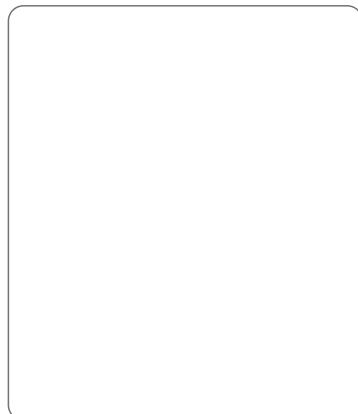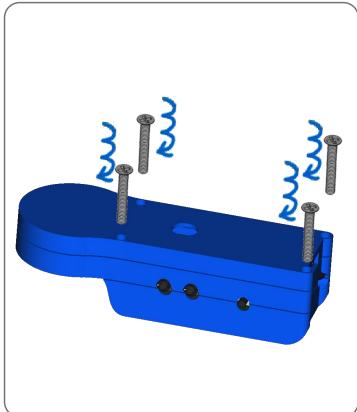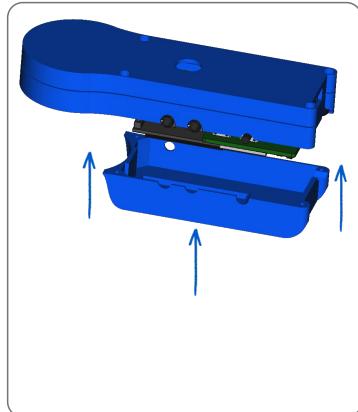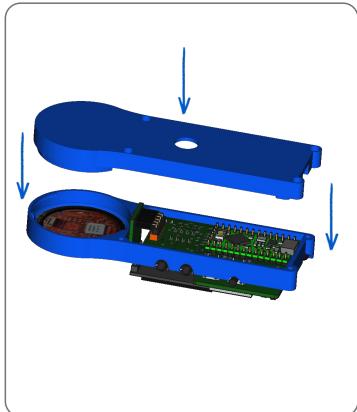

Copyright 2022, AsTeRICS Foundation, CC-BY-SA 4.0
office@asterics-foundation.org

Acknowledgements:

Futura fonts by www.onlinewebfonts.com (CC BY 3.0)

Exclamation mark icon made by Pixel Buddha from www.flaticon.com

Illustrations based on work of Moritz Schwarzl (moritz.schwarzl@gmx.at)