



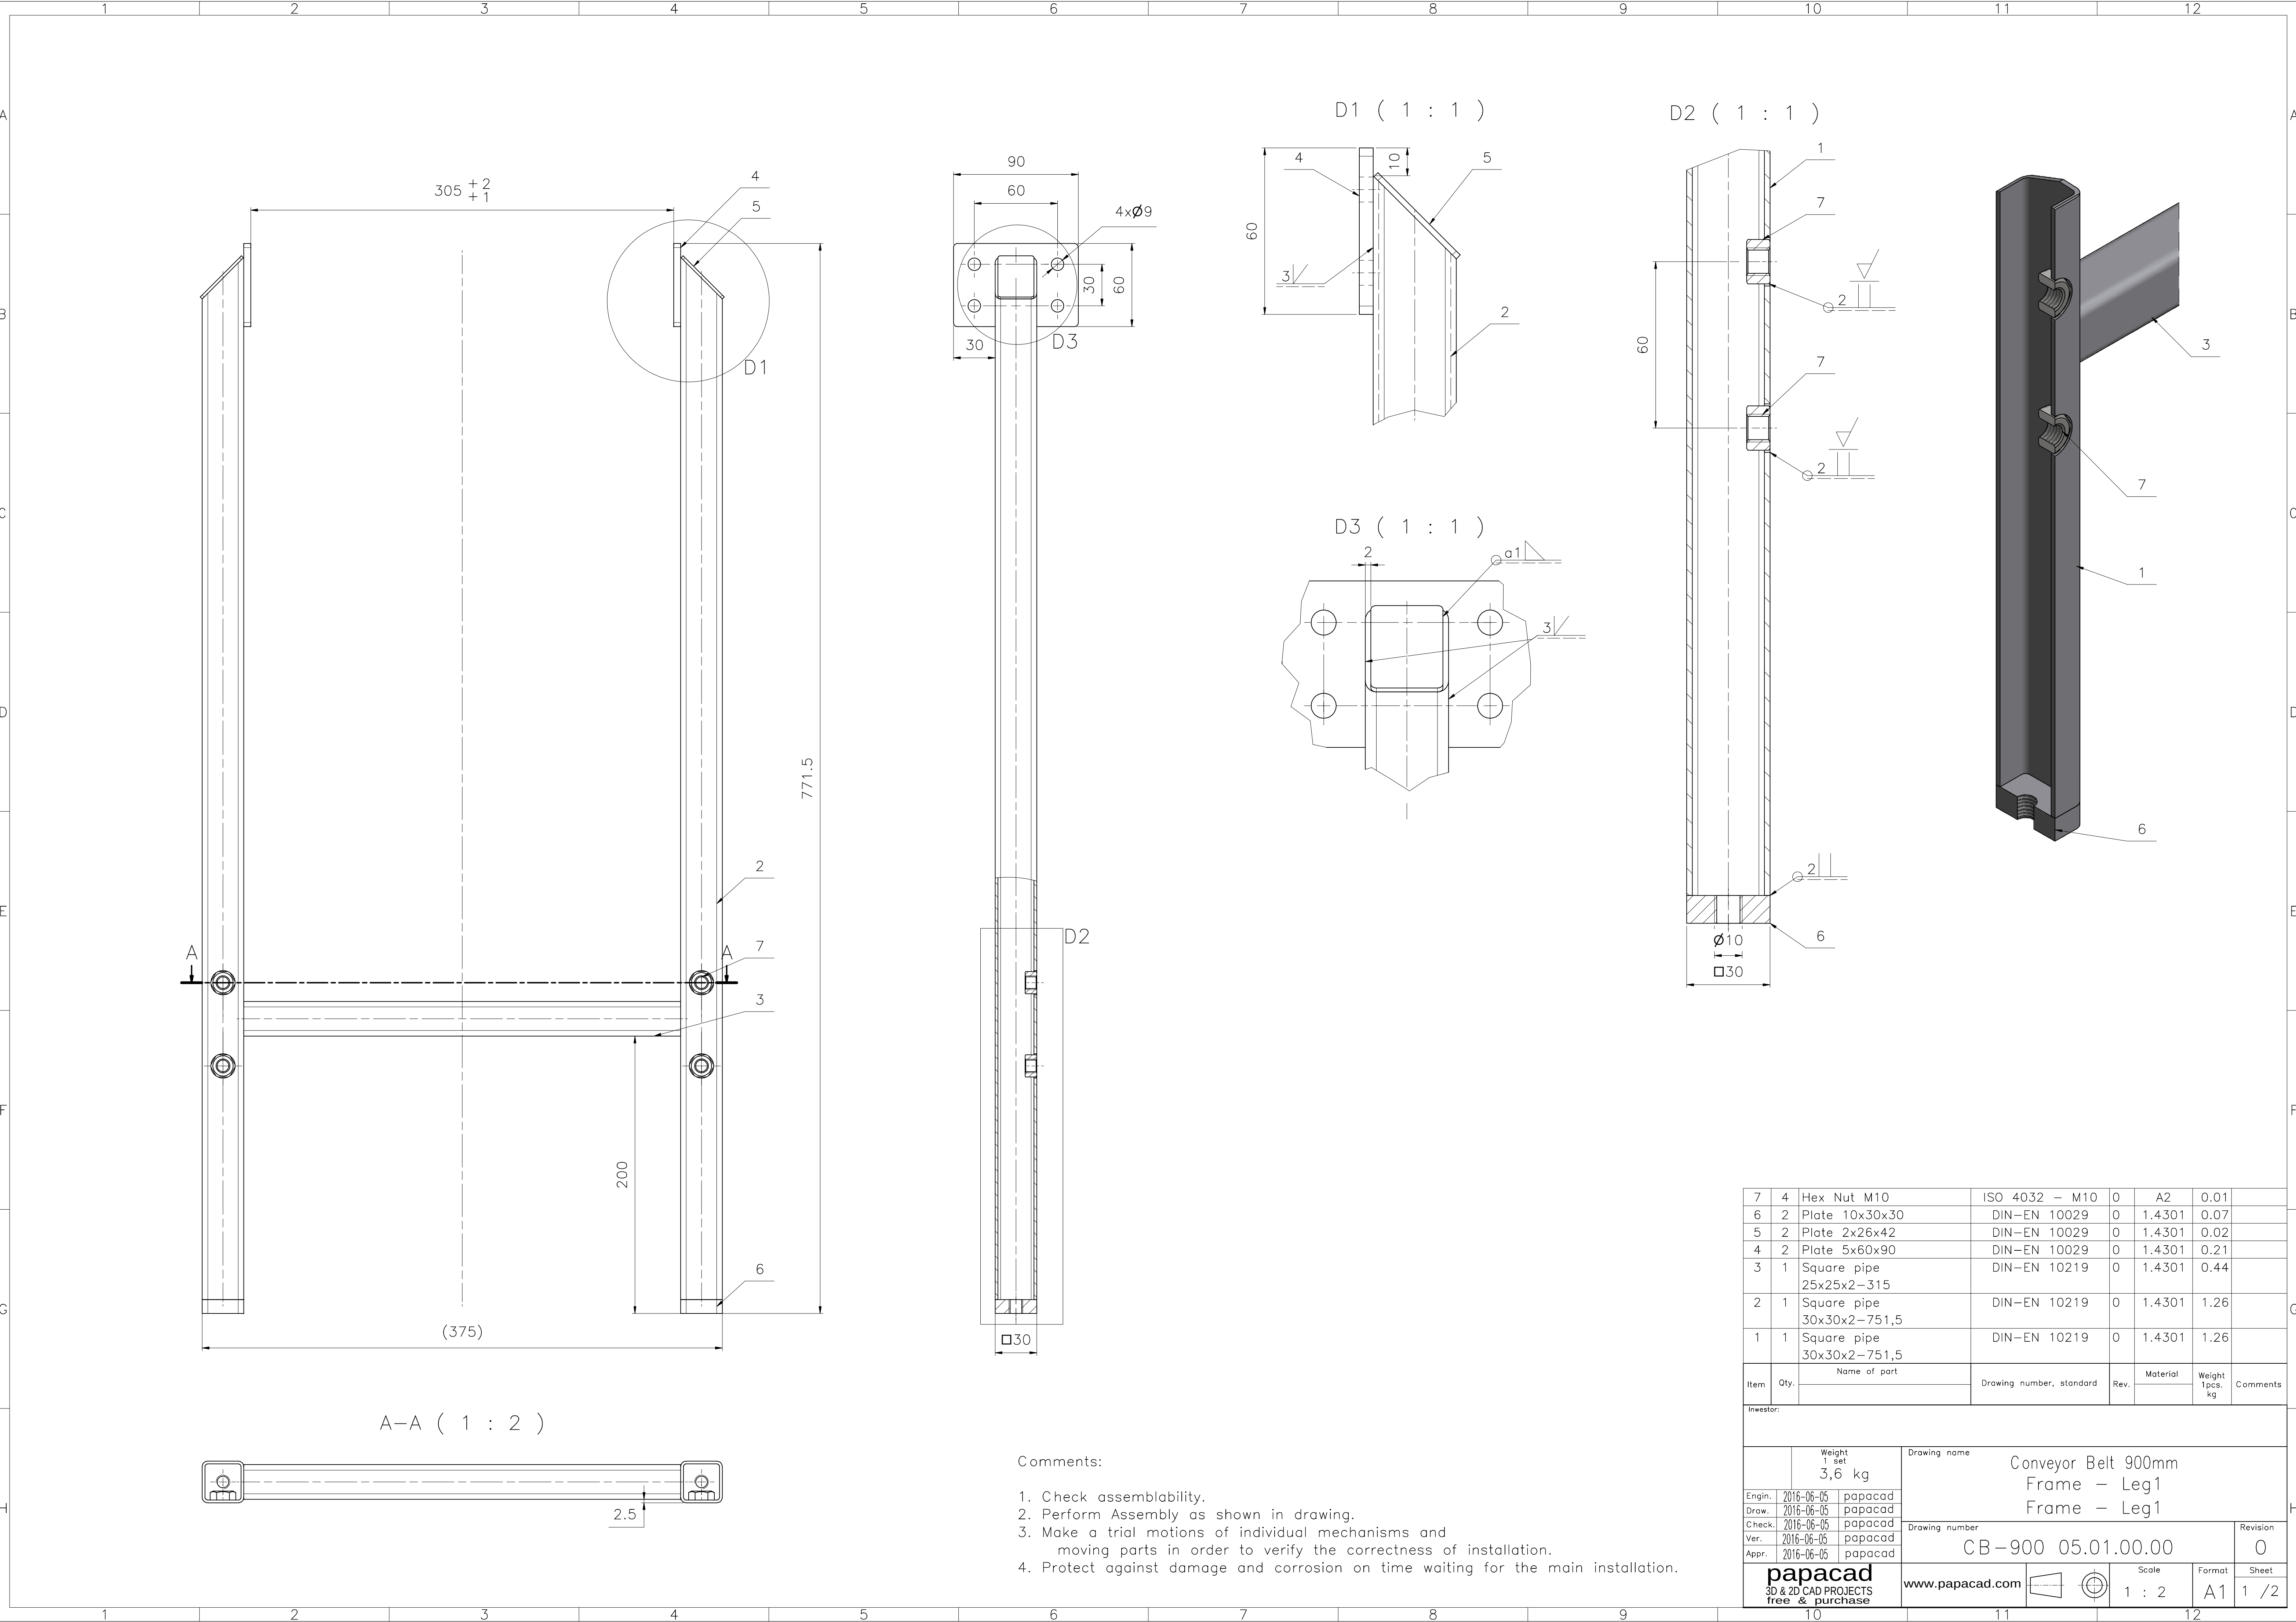

Comments:

1. Check assemblability.
2. Perform Assembly as shown in drawing.
3. Make a trial motions of individual mechanisms and moving parts in order to verify the correctness of installation.
4. Protect against damage and corrosion on time waiting for the main installation.

7	4	Hex Nut M10	ISO 4032 – M10	0	A2	0.01	
6	2	Plate 10x30x30	DIN–EN 10029	0	1.4301	0.07	
5	2	Plate 2x26x42	DIN–EN 10029	0	1.4301	0.02	
4	2	Plate 5x60x90	DIN–EN 10029	0	1.4301	0.21	
3	1	Square pipe 25x25x2–315	DIN–EN 10219	0	1.4301	0.44	
2	1	Square pipe 30x30x2–751,5	DIN–EN 10219	0	1.4301	1.26	
1	1	Square pipe 30x30x2–751,5	DIN–EN 10219	0	1.4301	1.26	
Item	Qty.	Name of part	Drawing number, standard	Rev.	Material	Weight Ipcs. kg	Comments
Investor:							
		Weight 1 set 3,6 kg	Drawing name Conveyor Belt 900mm Frame – Leg1 Frame – Leg1				
Engin.	2016-06-05	papacad	Drawing number CB–900 05.01.00.00				Revision 0
Draw.	2016-06-05	papacad					
Check.	2016-06-05	papacad					
Ver.	2016-06-05	papacad					
Appr.	2016-06-05	papacad					
papacad 3D & 2D CAD PROJECTS free & purchase			www.papacad.com		Scale 1 : 2	Format A1	Sheet 1 / 2

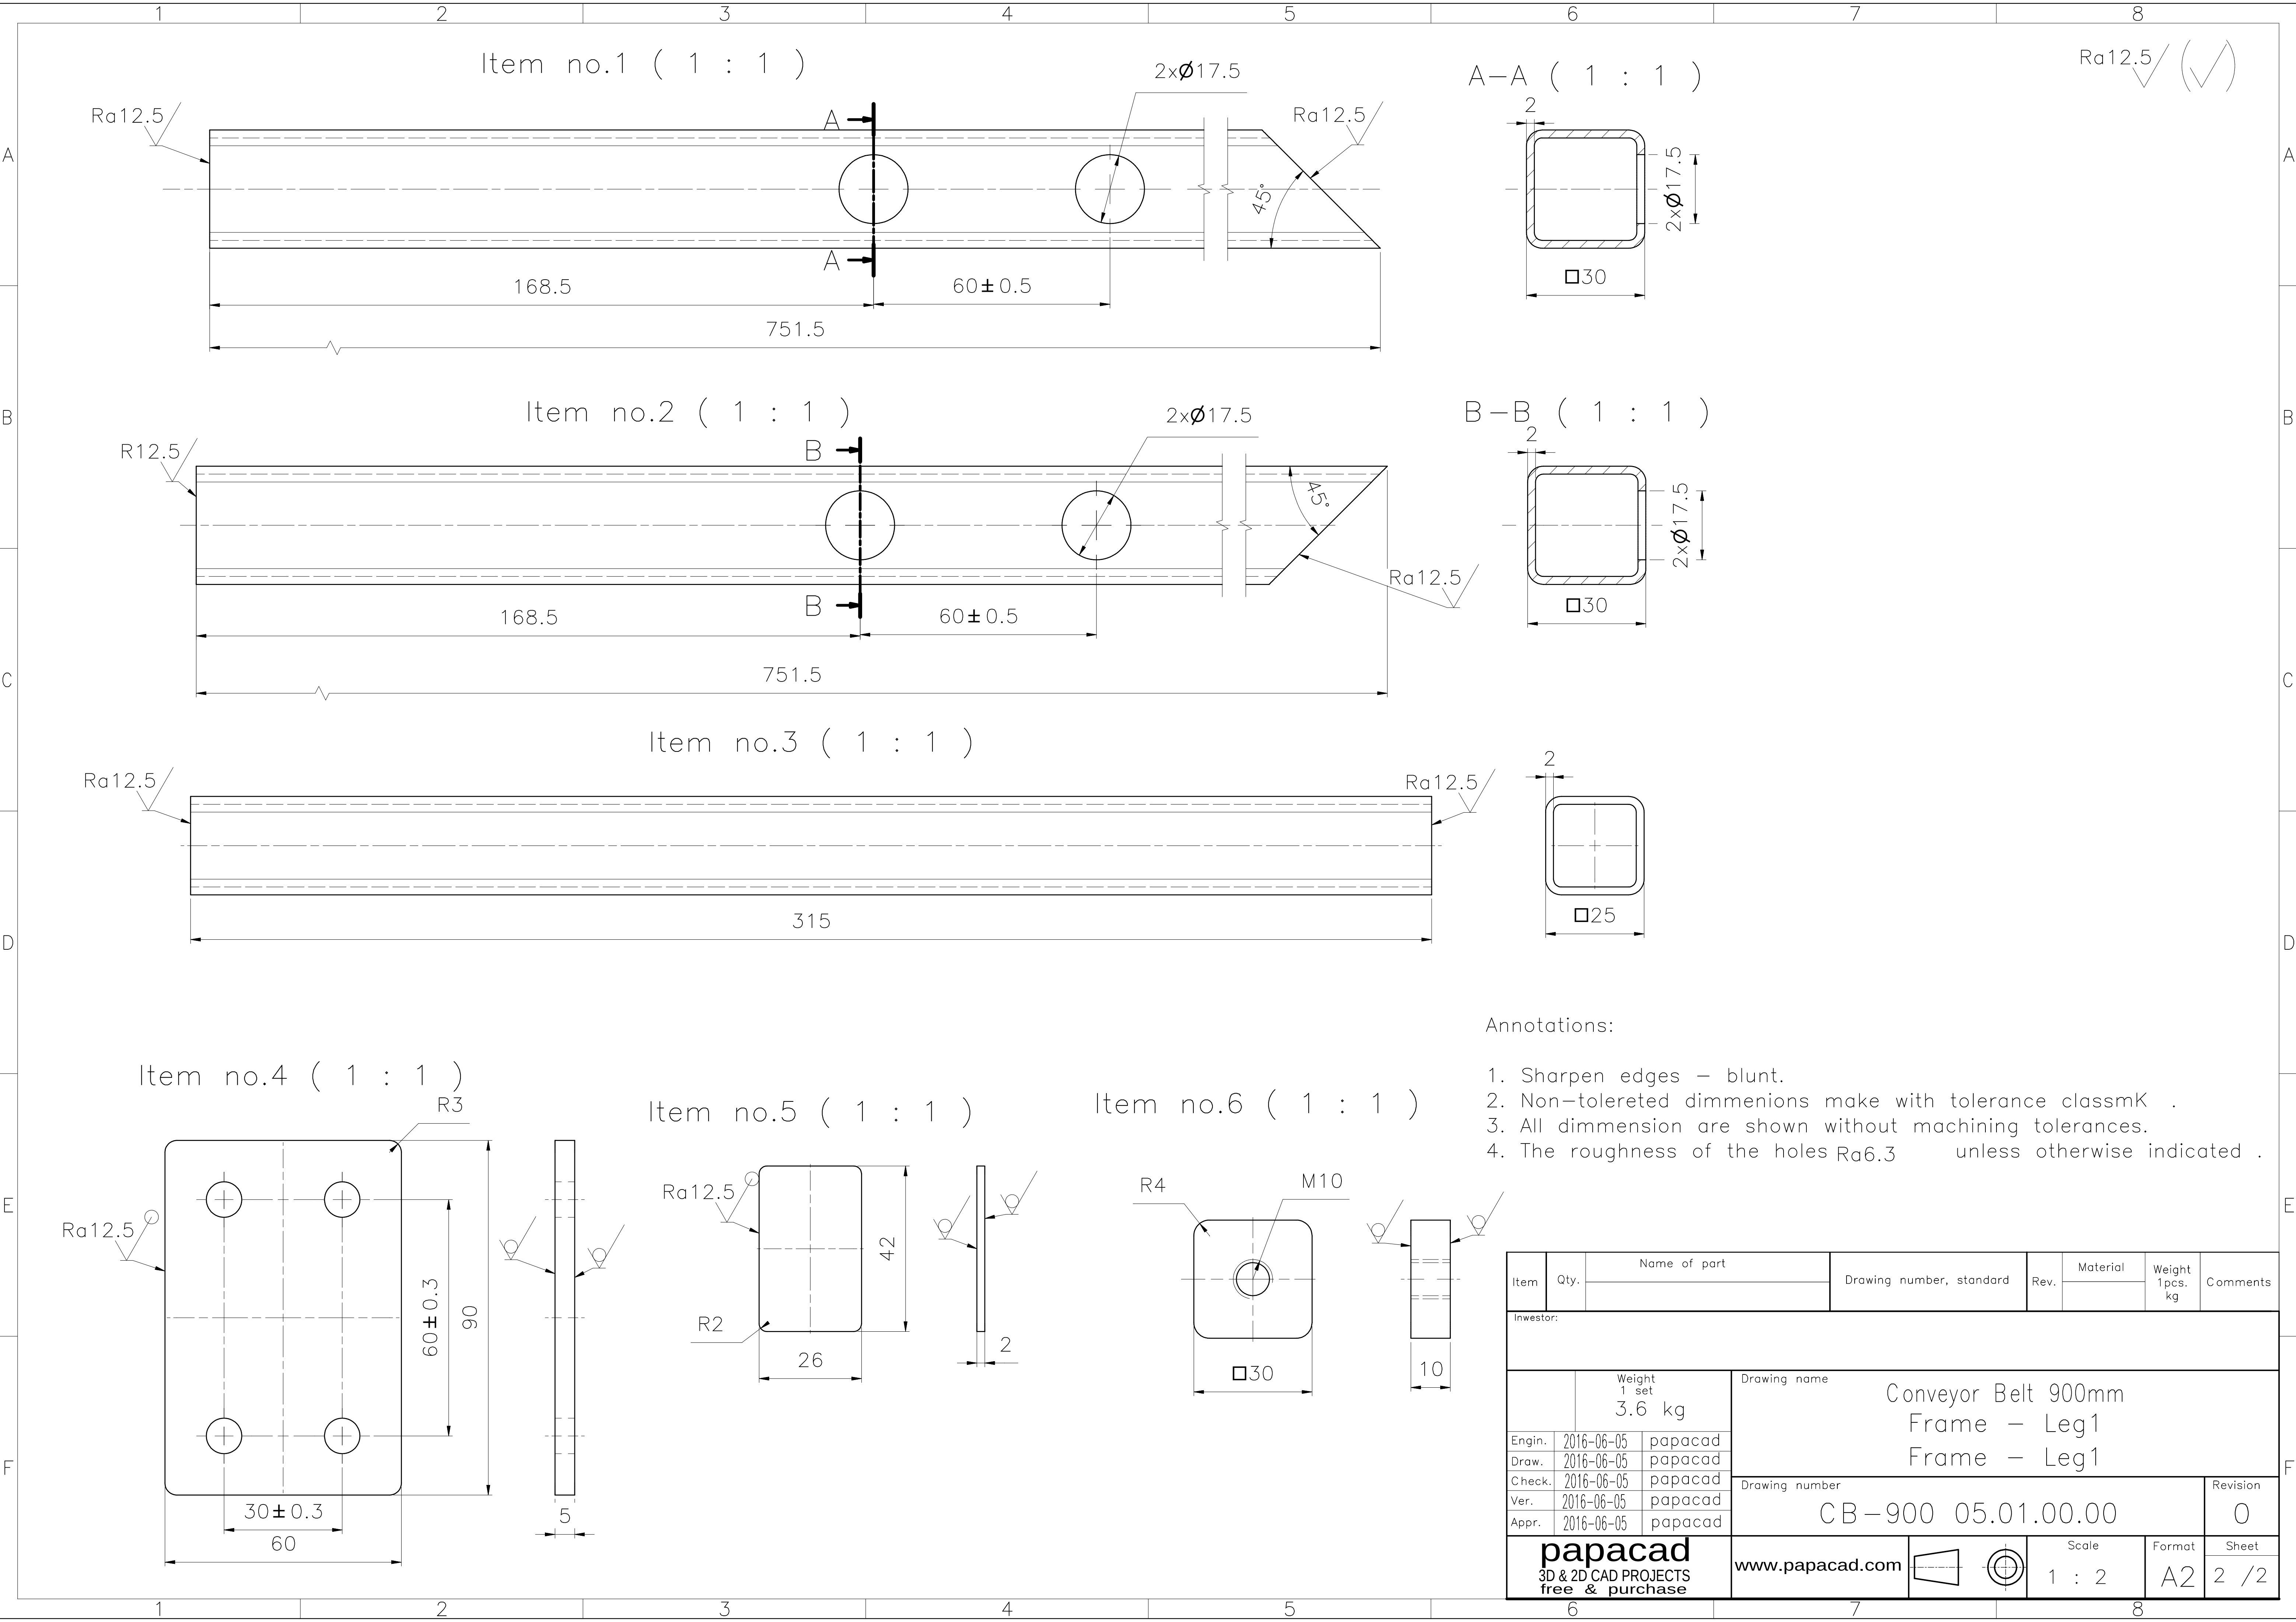

Item	Qty.	Name of part	Drawing number, standard	Rev.	Material	Weight 1pcs. kg	Comments
Investor:							
		Weight 1 set 3.6 kg	Drawing name Conveyor Belt 900mm Frame – Leg1 Frame – Leg1				
Engin.	2016-06-05	papacad	Drawing number CB-900 05.01.00.00		Revision 0		
Draw.	2016-06-05	papacad					
Check.	2016-06-05	papacad					
Ver.	2016-06-05	papacad					
Appr.	2016-06-05	papacad					
papacad 3D & 2D CAD PROJECTS free & purchase			www.papacad.com		Scale 1 : 2	Format A2	Sheet 2 / 2