V3.1.4
Wiring colours harmonised.
New 3 sensor design.
Flash socket addded
Light meter added


Transparent three legged sensors must be fitted with the flat surface at the rear and the little dome pointing overthe board and towards the laser.
Connecting them incorrectly WILL destroy them.

Caution
To avoid sensor
damage, wire up the
rx modules BEFORE
plugging the
transparent senors
into them. Double
check wiring BEFORE
powering up the
board & ensure LEDs
light.
Then de-power the
board and insert
sensors ENSURING

the sensor is fitted

the correct way

round.

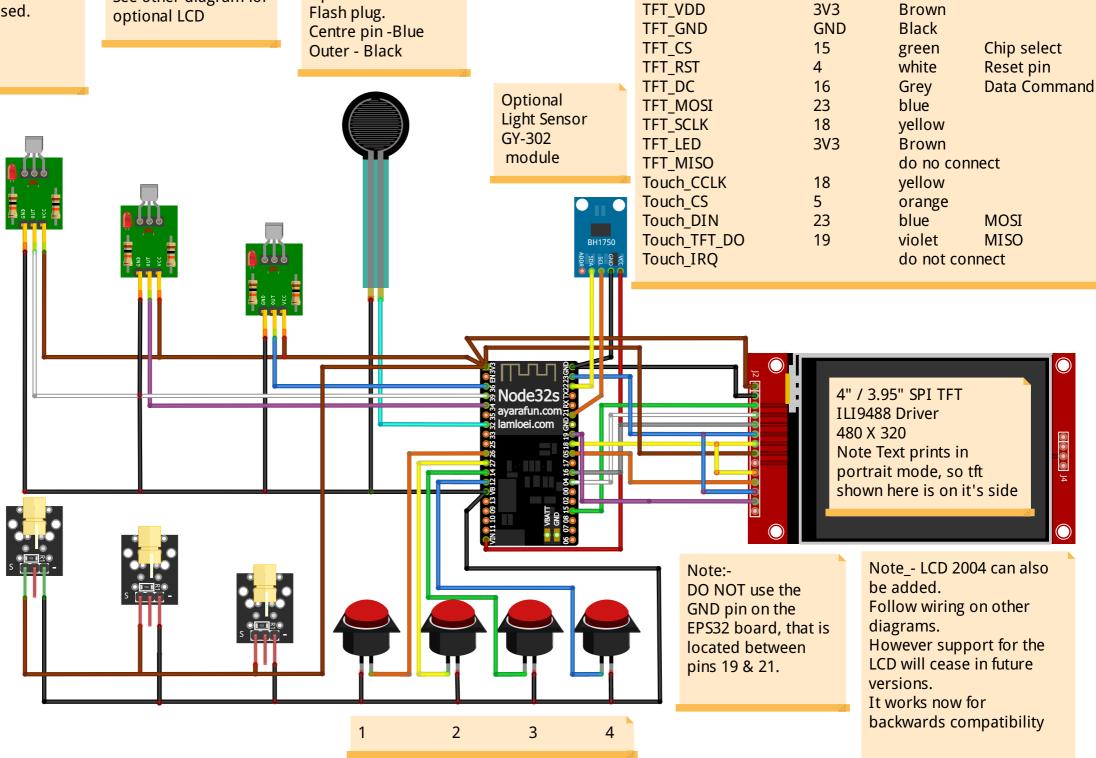

Optional

See other diagram for

Wire Colour

ESP32

TFT pins in order