
ESET 349 - Microcontroller Architecture

MOV, Constants and Literal Pools

Dr. Muhammad Faeyz Karim

ARM Rotation Scheme


- ARM instructions are 32 bits in length
- How do you load a 32-bit constant into an instruction that is only 32 bits long?
- MOV instruction

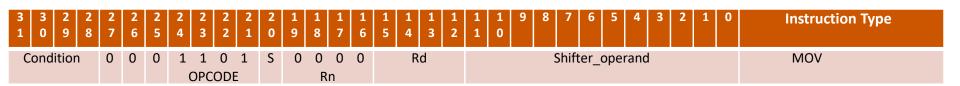

MOV instruction with immediate operand


MOV Instruction Example

- Bit pattern: 0xE3A004FF
- Mnemonic: MOV r0, #0xFF, 8

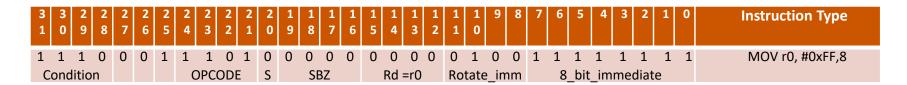

- Condition = E means ALWAYS (executed)
- The value in bits [11:8] of the instruction specify the rotate right value which is multiplied by 2. Hence you cannot rotate right by an odd number.

Rotate Right Shifter

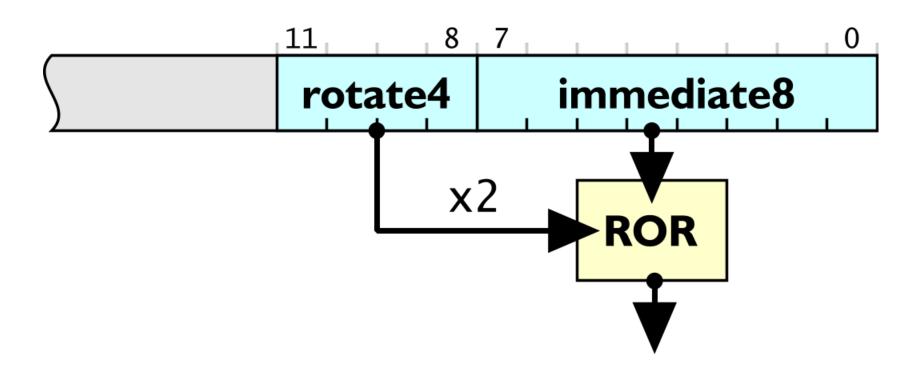

MOV Instruction

- As only 12 bits are available, they cannot represent all possible 32-bit numbers. Hence some numbers cannot be represented.
- What are the numbers that cannot be represented?????
- Can 0x55555555 be represented?
- How about 0xFFFFFFF?

More MOV Examples

- MOV r0, #0xFF ; r0 =255, no rotation ;needed
- MOV r0, #0x1, 30; r0 = 4, rotation of 30 bits; to the right is same as rotating 2 bits to the; left or multiplying by 4.
- MOV r0, #0x1, 26; r0 = 64, rotation of 26 bits; to the right is same as rotating left by 6 bits; or multiplying by

Example

- Calculate the rotation necessary to generate the constant 4080 using the byte rotation scheme.
- $4080 = 11111111110000_2$
- The byte 111111111₂ or 0xFF can be rotated by 4 bits to the left.
- Rotation of 4 bits to the left is equivalent to rotating (32-4) bits or 28 bits to the right
- MOV r0, #0xFF, 28; r0 = 4080

MVN

- MVN (move negative) instruction moves a one's complement of the operand into a register, can also be used to generate classes of numbers, such as
- MVN r0, #0 ; r0 = 0xFFFFFFF
- MVN r0, #0xFF, 8; r0 = 0x00FFFFFF

Keil µvision

- Keil is a very intelligent assembler, instead of writing
 "MOV r0, #0xFF, 28" to move 4080 into register r0, you
 can simply write "MOV r0, #4080" and let the assembler
 figure out how to assemble it correctly.
- The Keil assembler will first try to use a MOV instruction with the correct shift to represent the constant, if it is not successful, it will try to use MVN to represent the constant. Only if both methods fail, then an assembly error is produced.

LDR

- The best way to load a constant into a register is to use a pseudo-instruction LDR. It is easiest and create the least headache for the programmer.
- LDR <Rd>, <numeric constant>
- This method can load all possible 32-bit constants.

Examples

- LDR r0, =42; Keil assembler will translate this ;into => MOV r0, #42
- LDR r2, =0xFFFFFFF; assembled into ;MVN r2, #0

Literal Pool

- The literal pool is normally located at the END directive.
 However if the location is more than 4KB away (unlikely
 for this course since our programs are very small) from
 the place where it is used, and error will occur.
- To prevent the error, the literal pool can be located nearer using the LTORG assembler directive.

Pseudo-instruction ADR

- ADR is another useful pseudo-instruction for loading the 32-bit address into a register.
- The 32-bit address is stored in the memory which can then be retrieved by accessing through a relative offset from the PC register value of the instruction.
- For addresses further away, ADRL can be used
- Example:

```
ADR r1, label 1; range < 255Bytes
```

ADRL r2, labe 12; range < 64K