
We have now got tractions on e_1 , e_2 , e_3 planes $\rightarrow I^1$, I^2 , I^3 what do they depict?

Traction T^1 acts on a plane with outward normal \underline{e}_1 If we cut the body with a \underline{e}_1 -plane through pt P then we get a traction T^1 whose components in the three directions of the coordinate system are given by T_1^1 , T_2^1 , and T_3^1

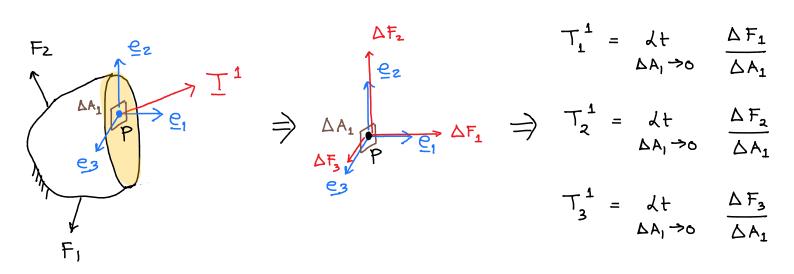


NORMAL and SHEAR stresses

For defining these quantities, lets consider a plane with outward normal in the tree endirection. With traction T^1 acting on the enplane, we can use its components to define:

Normal stress, $T_{11} = T_1^1$ tendency to pull or push Shear stress, $T_{12} = T_2^1$ tendency to slide shear stress, $T_{13} = T_3^1$ between two surfaces

Similarly, we can define T2 and T3


Plane normal along e,

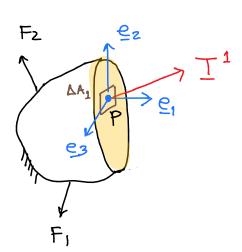


$$T^{1} \longrightarrow \Delta A_{1} \longrightarrow T^{1} = \begin{bmatrix} T_{1}^{1} \\ T_{2}^{1} \\ T_{3}^{1} \end{bmatrix} = \begin{bmatrix} \sigma_{11} \\ \tau_{12} \\ \tau_{13} \end{bmatrix}$$

$$T' = \begin{bmatrix} T_1' \\ T_2' \\ T_3' \end{bmatrix} = \begin{bmatrix} \sigma_{11} \\ \sigma_{12} \\ \sigma_{13} \end{bmatrix}$$

[Tij > represents the jth component of traction on the ith plane]

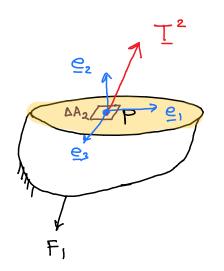

Plane normal along ez

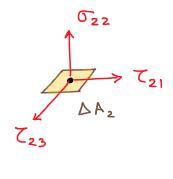

$$T = \begin{bmatrix} T_1^2 \\ T_2^2 \\ T_3^2 \end{bmatrix} = \begin{bmatrix} C_{21} \\ G_{22} \\ C_{23} \end{bmatrix}$$

F2

Plane normal along e3

$$T^{3} = \begin{bmatrix} T_{1}^{3} \\ T_{2}^{3} \\ T_{3}^{3} \end{bmatrix} = \begin{bmatrix} T_{31} \\ T_{32} \\ T_{33} \end{bmatrix}$$


$$\underline{T}^{n} = \underline{T}^{1} n_{1} + \underline{T}^{2} n_{2} + \underline{T}^{3} n_{3}$$

$$\begin{bmatrix} T_1^n \\ T_2^n \\ T_3^n \end{bmatrix} = \begin{bmatrix} \sigma_{11} \\ \tau_{12} \\ \tau_{21} \end{bmatrix} n_1 + \begin{bmatrix} \tau_{21} \\ \sigma_{22} \\ \tau_{23} \end{bmatrix} n_2 + \begin{bmatrix} \tau_{31} \\ \tau_{32} \\ \tau_{33} \end{bmatrix} n_3$$

Traction

on plane with normal en

Traction on plane with normal =3

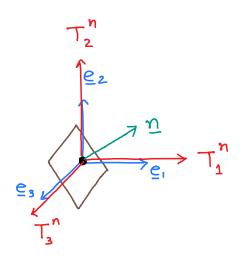

Componentwise

$$T_{1}^{n} = \sigma_{11} n_{1} + \tau_{21} n_{2} + \tau_{31} n_{3}$$

$$T_{2}^{n} = \tau_{12} n_{1} + \sigma_{22} n_{2} + \tau_{32} n_{3}$$

$$T_{3}^{n} = \tau_{13} n_{1} + \tau_{23} n_{2} + \sigma_{33} n_{3}$$

Representing in the form of a matrix:

$$\begin{bmatrix} T_{1}^{n} \\ T_{2}^{n} \\ T_{3}^{n} \end{bmatrix} = \begin{bmatrix} \sigma_{11} & \tau_{21} & \tau_{31} \\ \tau_{12} & \sigma_{22} & \tau_{32} \\ \tau_{13} & \tau_{23} & \sigma_{33} \end{bmatrix} \begin{bmatrix} n_{1} \\ n_{2} \\ n_{3} \end{bmatrix}$$

$$\begin{bmatrix} \underline{\sigma} \\ \underline{\tau} \\ \underline$$

State of stress at a point

An infinite number of traction vectors act at a given point. The totality of all traction vectors acting on every possible plane through a point is defined to be the STATE of STRESS at the point.

Since traction along any plane can be obtained from info of tractions on mutually perpendicular planes, therefore it is enough to know tractions on three mutually perpendicular planes to define the totality of all tractions acting at a pt.

The tractions on three mutually perpendicular planes can be further resolved into normal and tangential directions, which lead to the normal and shear stresses on each plane.

Thus the state of stress at a point is completely defined by the nine stress components acting on three mutually perpendicular planes (say e_1 , e_2 , e_3 planes)


$$\begin{bmatrix} \underline{G} \end{bmatrix}_{(e_1 - e_2 - e_3)} = \begin{bmatrix} \sigma_{11} & \tau_{21} & \tau_{31} \\ \tau_{12} & \sigma_{22} & \tau_{32} \\ \tau_{13} & \tau_{23} & \sigma_{33} \end{bmatrix}$$

$$(e_1 - e_2 - e_3)$$

 $\left[\begin{array}{c} \square \end{array} \right]_{\left(e_1-e_2-e_3\right)} \rightarrow \text{Representation of stress tensor in } \left(e_1-e_2-e_3\right) \text{ Coor. Sys.}$

Stress tensor does not depend upon the inclined plane normal

Sign convention for stress components

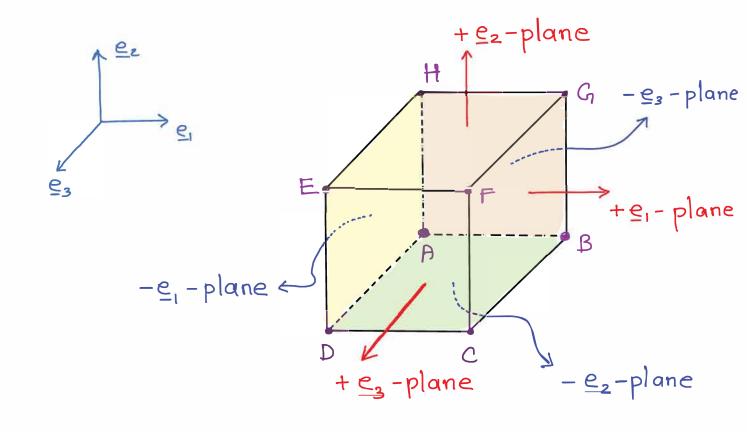

- · A face is the if the outward normal vector points in the direction of the the coordinate axis
- · A face is -ve if the outward normal vector points in the direction of the -ve coordinate axis
- The stress component is positive when a positively directed force component acts on a positive face
- The stress component is positive when a negatively directed force component acts on a negative face
- When a positively directed force component acts on a negative face or a negatively directed force component acts on a positive face, the stress component is negative