WIRE

STANDARD PROCEDURE - WIRE SPLICING

When splicing a wire, it is important that the correct gage be used as shown in the wiring diagrams.

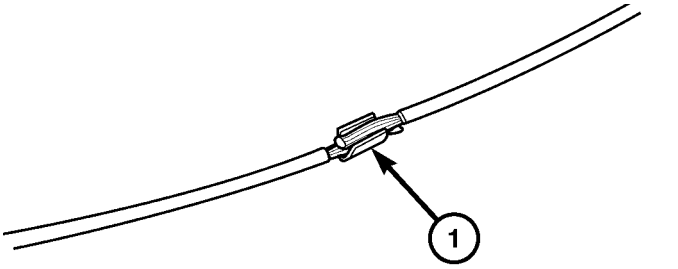

Fig. 13 SPLICE BAND

1 - SPLICE BAND

(1) Remove one-half (1/2) inch of insulation from each wire that needs to be spliced.

(2) Place a piece of adhesive lined heat shrink tubing on one side of the wire. Make sure the tubing will be long enough to cover and seal the entire repair area.

(3) Place the strands of wire overlapping each other inside of the splice clip (1).

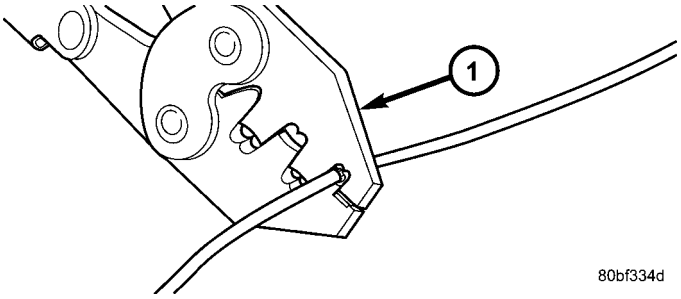

Fig. 14 CRIMPING TOOL

1 - CRIMPING TOOL

(4) Using crimping tool (1), Mopar p/n 05019912AA, crimp the splice clip and wires together.

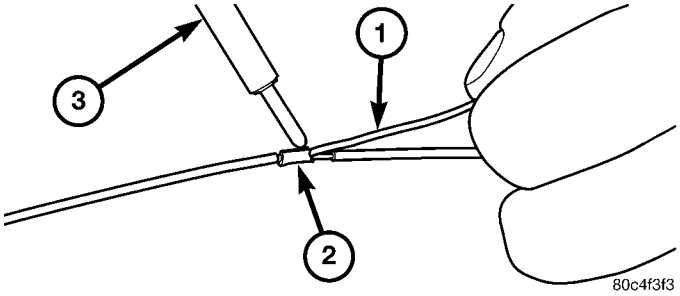

Fig. 15 SOLDER SPLICE

1 - SOLDER
2 - SPLICE BAND
3 - SOLDERING IRON

(5) Solder (3) the connection (2) together using rosin core type solder (1) only.

CAUTION: DO NOT USE ACID CORE SOLDER.

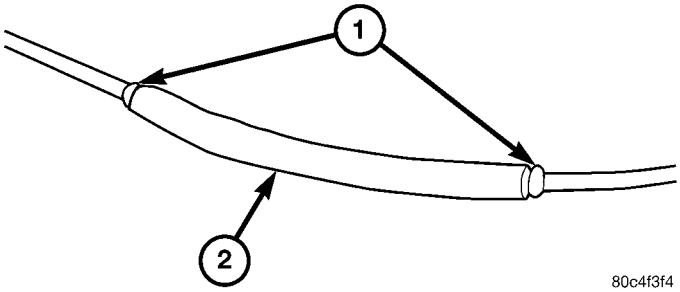

Fig. 16 HEAT SHRINK TUBE

1 - SEALANT
2 - HEAT SHRINK TUBE

(6) Center the heat shrink tubing (2) over the joint and heat using a heat gun. Heat the joint until the tubing is tightly sealed and sealant (1) comes out of both ends of the tubing.