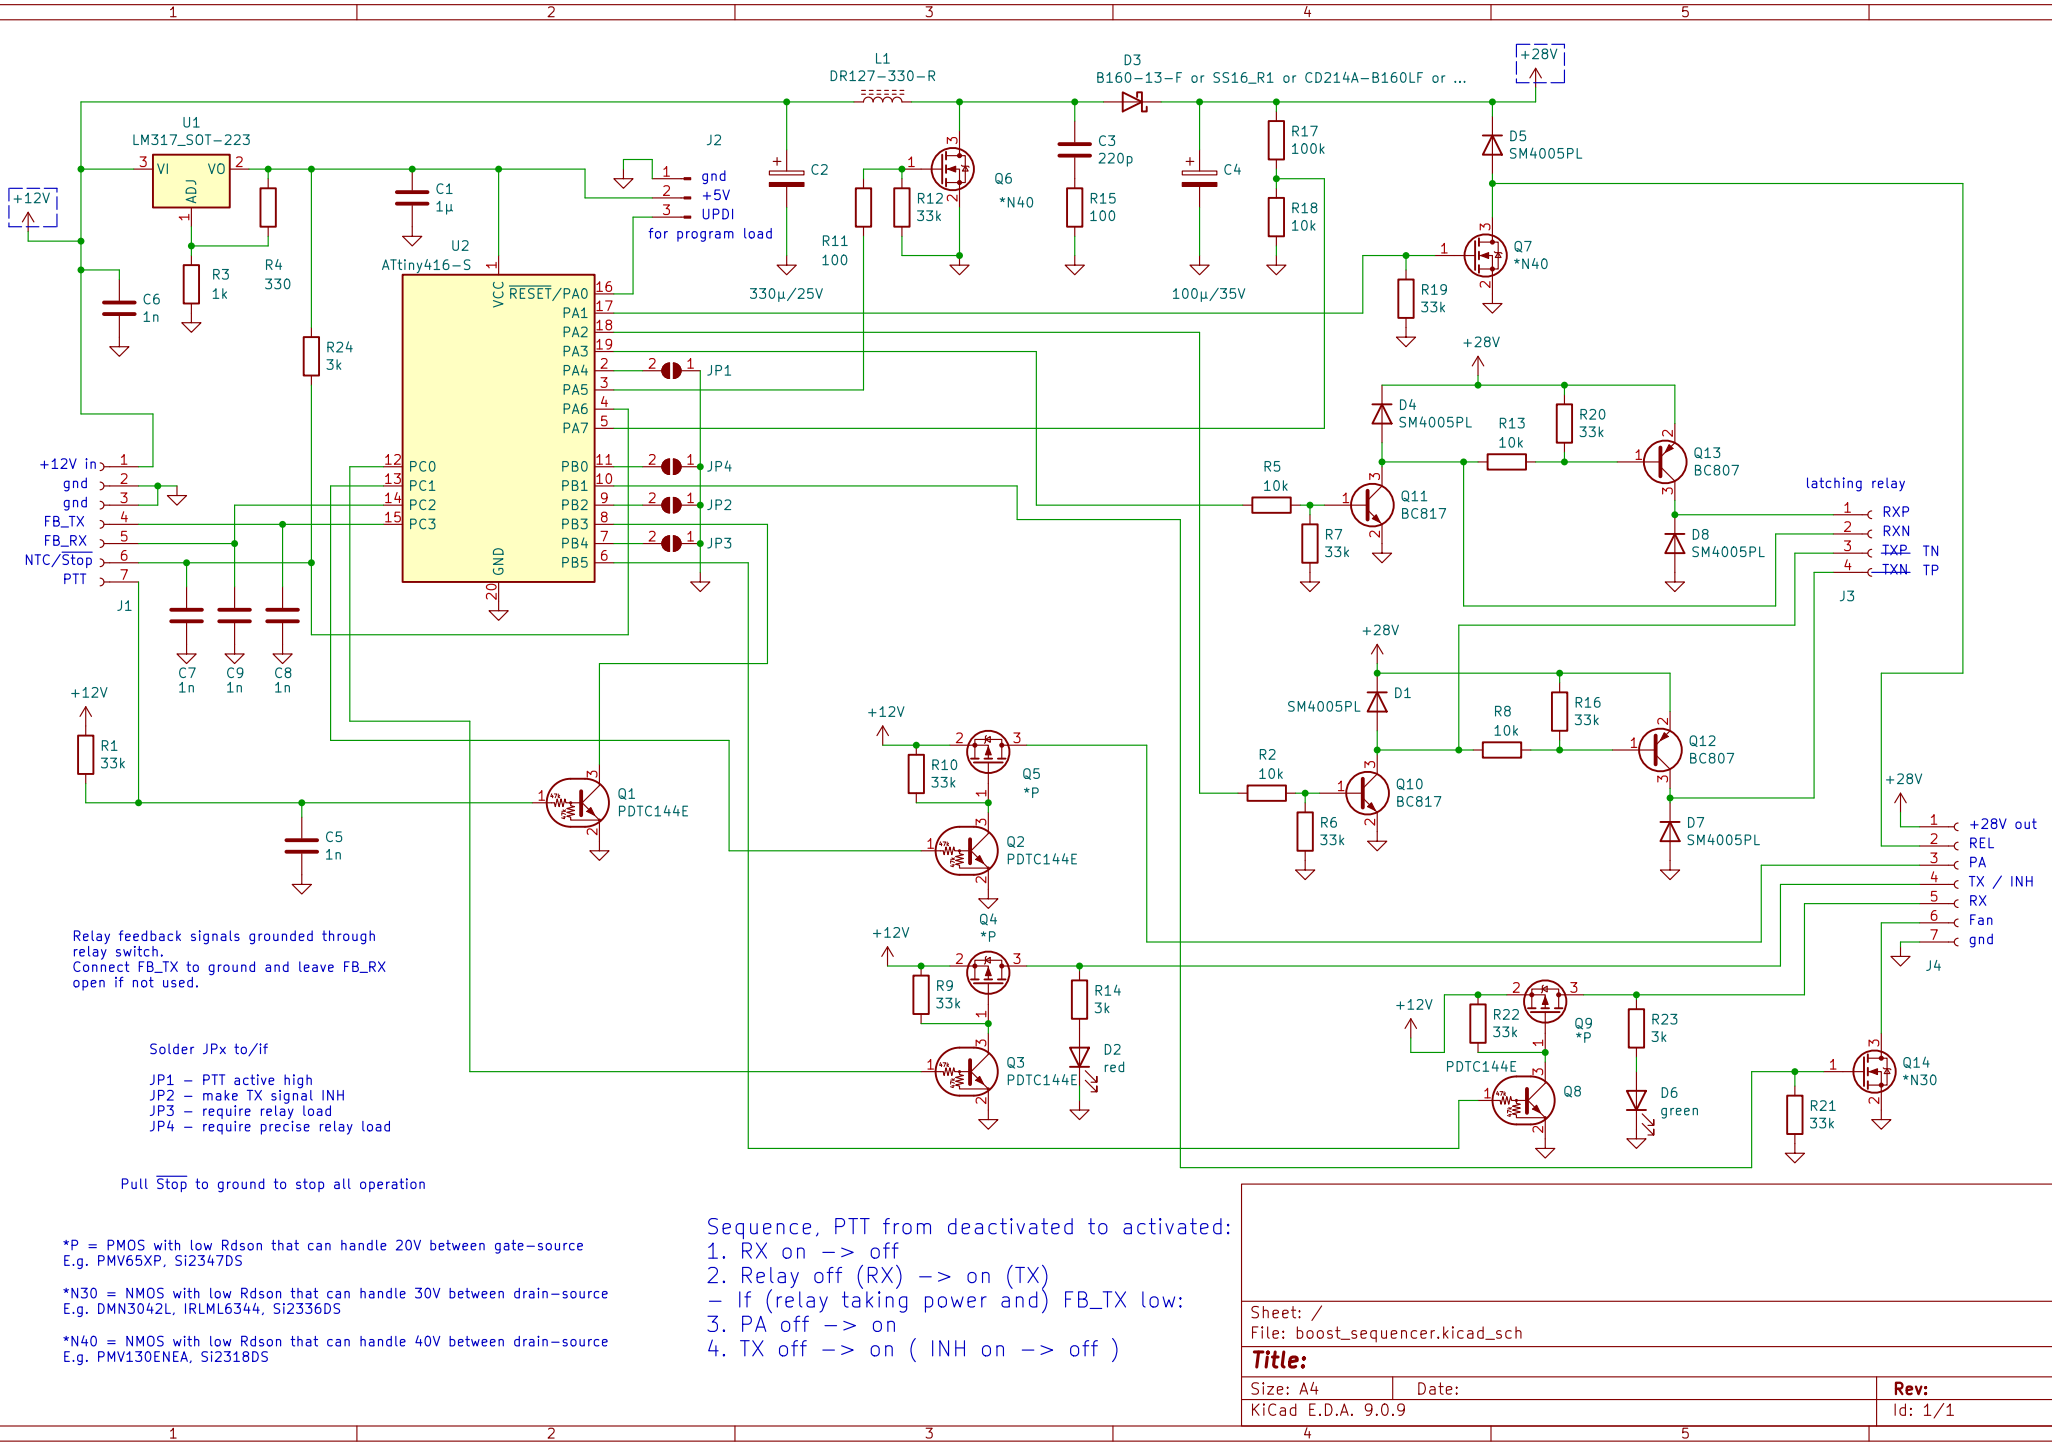


Relay feedback signals grounded through relay switch.
Connect FB_TX to ground and leave FB_RX open if not used.

Solder JPx to/if

JP1 – PTT active high
JP2 – make TX signal INH
JP3 – require relay load
JP4 – require precise relay load

Pull $\overline{\text{Stop}}$ to ground to stop all operation

*P = PMOS with low Rdson that can handle 20V between gate-source
E.g. PMV65XP, Si2347DS

*N30 = NMOS with low Rdson that can handle 30V between drain-source
E.g. DMN3042L, IRLML6344, Si2336DS

*N40 = NMOS with low Rdson that can handle 40V between drain-source
E.g. PMV130ENEA, Si2318DS

Sequence, PTT from deactivated to activated:
1. RX on -> off
2. Relay off (RX) -> on (TX)
– If (relay taking power and) FB_TX low:
3. PA off -> on
4. TX off -> on (INH on -> off)

Sheet: /		
File: boost_sequencer.kicad_sch		
Title:		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 9.0.9		Id: 1/1