

	Work Instruction	Doc. Revision	00
	AXI V810 24VDC Power Supply HWS150 Series Removal and Replacement Procedure	Effective Date	17 Apr2016

This procedure is applicable to below models:

V810 STD	☒	S1	☒	S2
V810 XXL	☒	S1	☒	S2
V810 S2EX	☒			
V810 Mini	☐			

REVISION HISTORY

Rev	Effective Date	Description	Doc Originator
00	17 Apr 2016	First Release	Chin Chee Yan

	Work Instruction	Doc. Revision	00
	AXI V810 24VDC Power Supply HWS150 Series Removal and Replacement Procedure	Effective Date	17 Apr2016

Content

Removal Procedure.....	3
Replacement Procedure.....	5
Validation Procedure.....	7

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 24VDC Power Supply HWS150 Series Removal and Replacement Procedure	Effective Date	17 Apr2016

Removal Procedure

1. Unload board from machine if any.
2. Shut down machine as usual, may refer to procedure "AXI V810 Machine Shut Down Procedure".
3. Turn Off SSCA box. Turn Off PDU power is switch "Off" status.

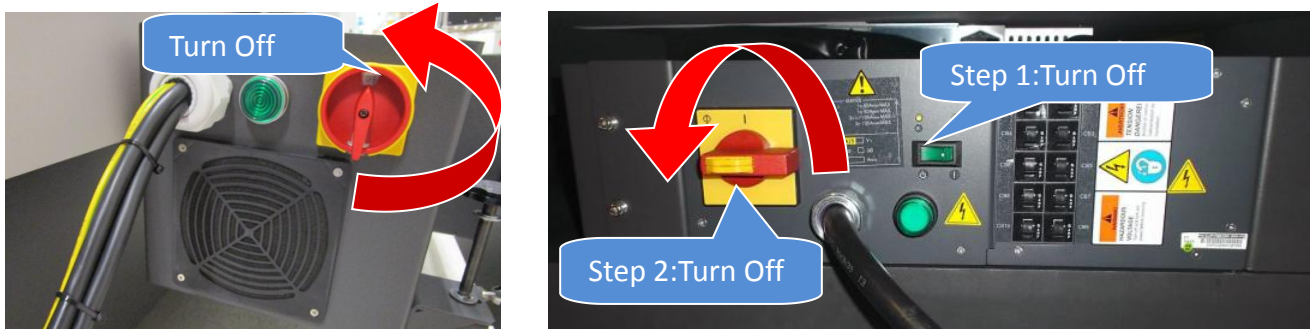


Figure 1 SSCA & PDU Turn Off

4. Gently Lift SSCA to service position. Open SSCA Top Cover.

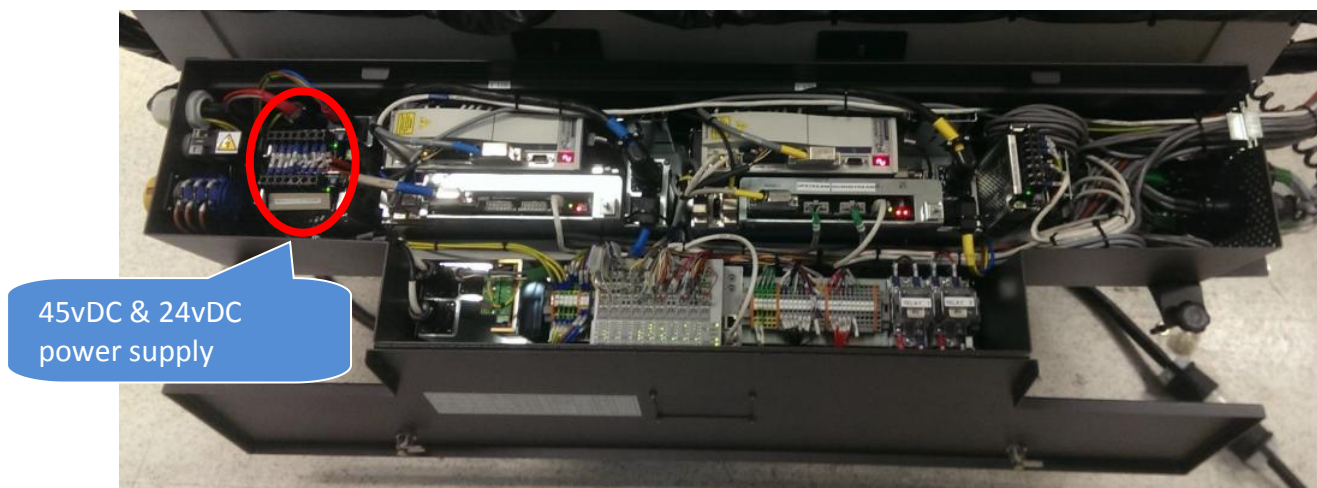


Figure 2 SSCA Top Cover (Opening)

5. Unhook and disconnect the Input and Output connector as below Figure 3

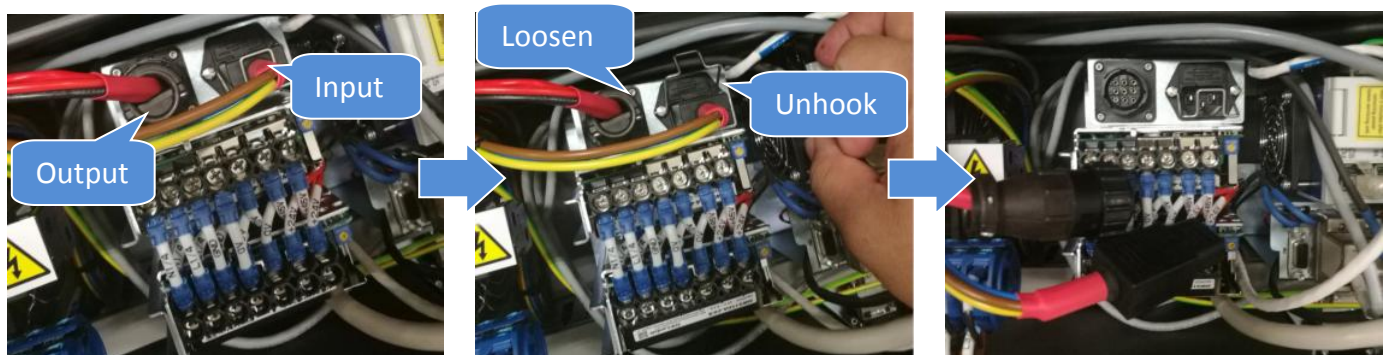


Figure 3 Power Input & Output Disconnection

	Work Instruction	Doc. Revision	00
	AXI V810 24VDC Power Supply HWS150 Series Removal and Replacement Procedure	Effective Date	17 Apr2016

6. Loosen 4 x Thumb Screws by using Flat Head Slotted Screwdrivers as below Figure 4. Remove entire Power Supply Module from SSCA

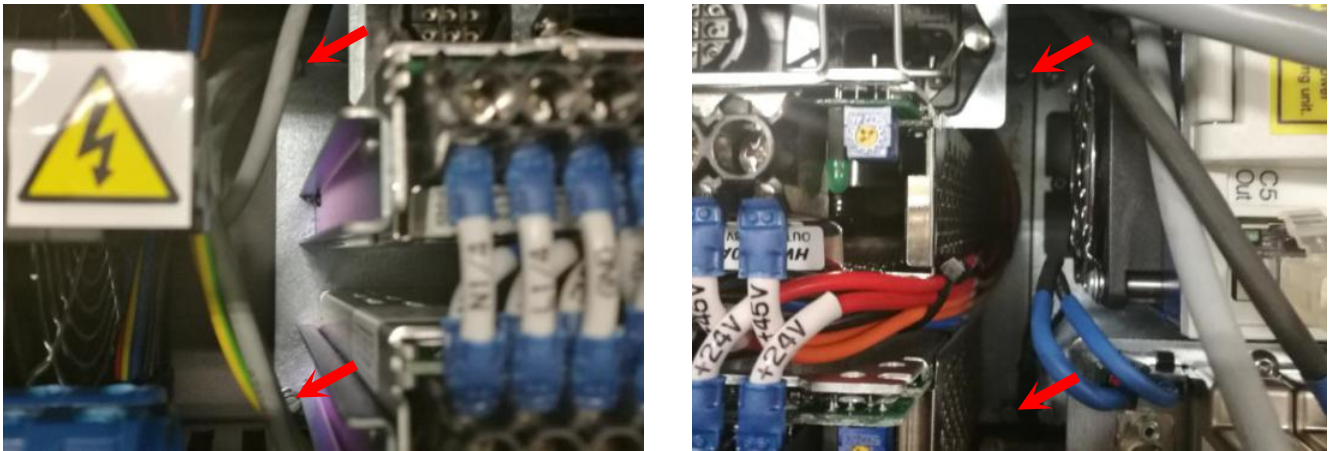


Figure 4 Power Supply Module Removal

7. Unscrew and disconnect the cable as shown.



Figure 5 Power Cable Disconnect

8. Unscrew Power Supply from mounting as shown.



Figure 6 45 VDC Power Supply Removal

ViTrox	Work Instruction	Doc. Revision	00
	AXI V810 24VDC Power Supply HWS150 Series Removal and Replacement Procedure	Effective Date	17 Apr2016

Replacement Procedure.

9. Prepare new part, AC/DC CONVERTER 24V 150W (P/N, 2210-0057)



Figure 7 AC/DC CONVERTER 24V 150W

10. Assemble New Power supply at Mounting Holder by refer to below Orientation. Tighten 2 x Screws accordingly

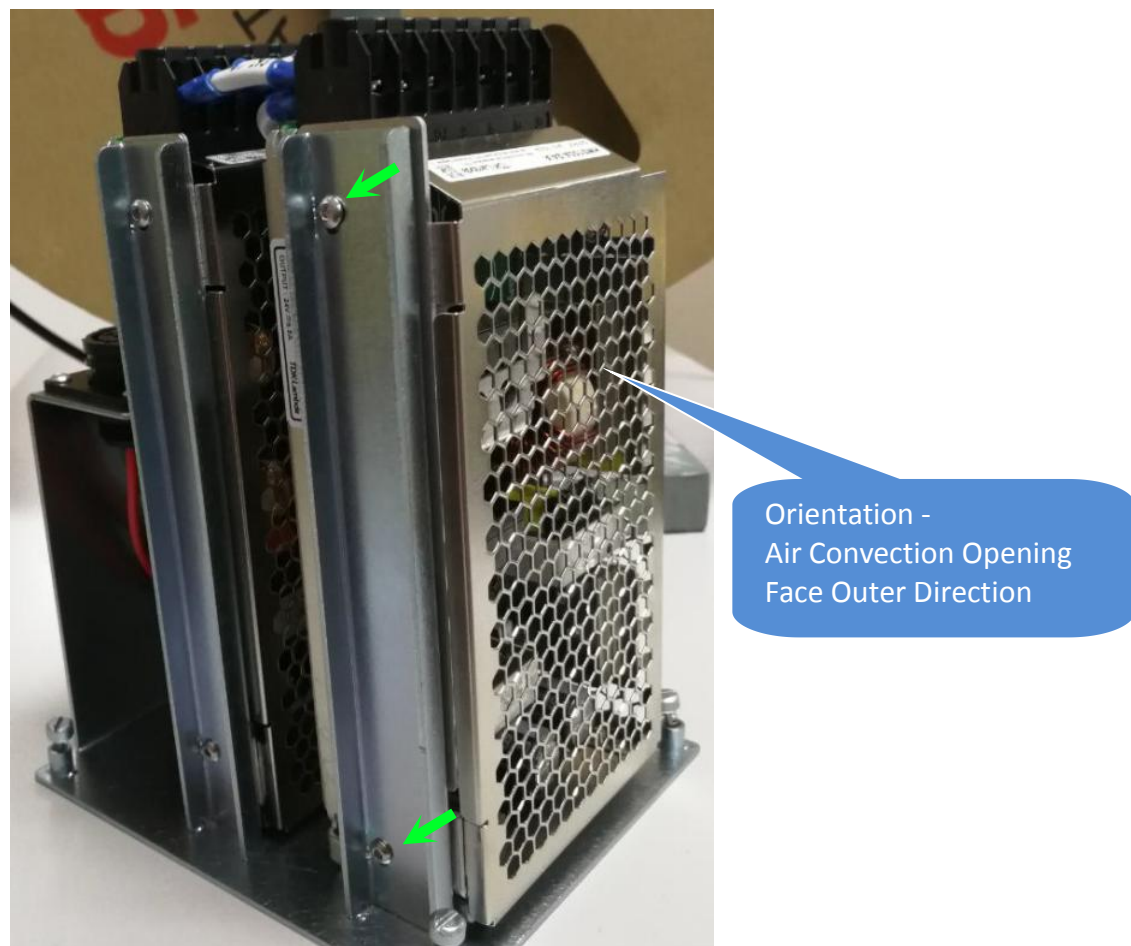


Figure 8 Power Supply Assembly

11. Connect cable by refer to Table 1.Tighten all screws (Red Highlight)

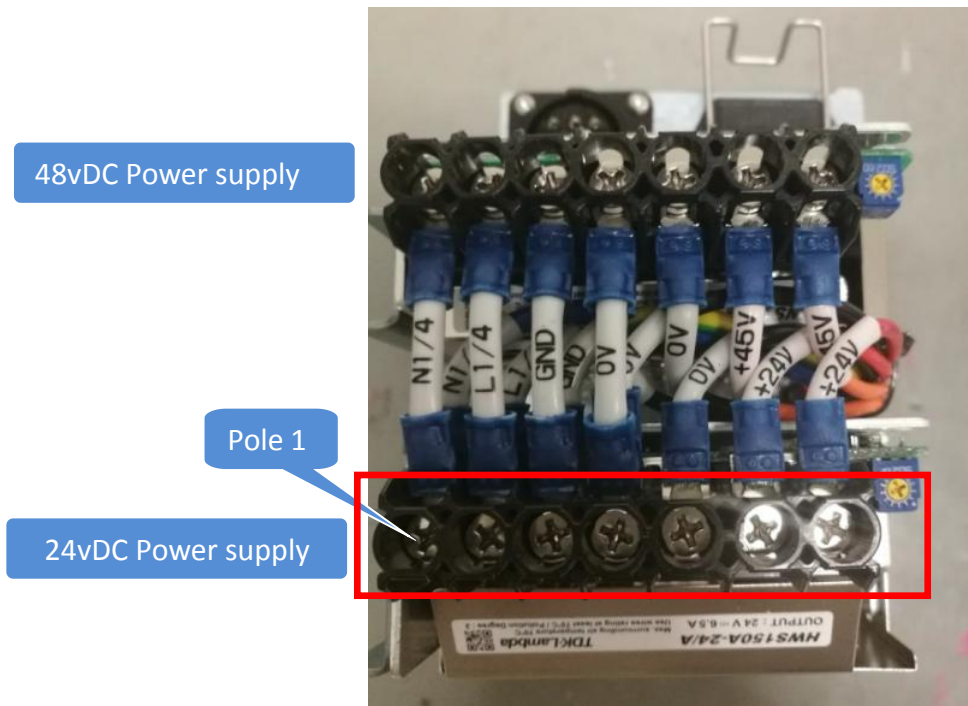


Figure 9 48 VDC Power Supply Cable Connection

Power Supply	Pole 1	Pole 2	Pole 3	Pole 4	Pole 5	Pole 6	Pole 7
48vDC	N1/4	L1/4	GND	0vDC	0vDC	+45vDC	+45vDC
24vDC	N1/4	L1/4	GND	0vDC	0vDC	+24vDC	+24vDC

Table 1 Power Supply Cable Configuration

12. Assemble the Power Supply Module to SSCA by tighten 4 x thumb screws. May refer to below Figure 10

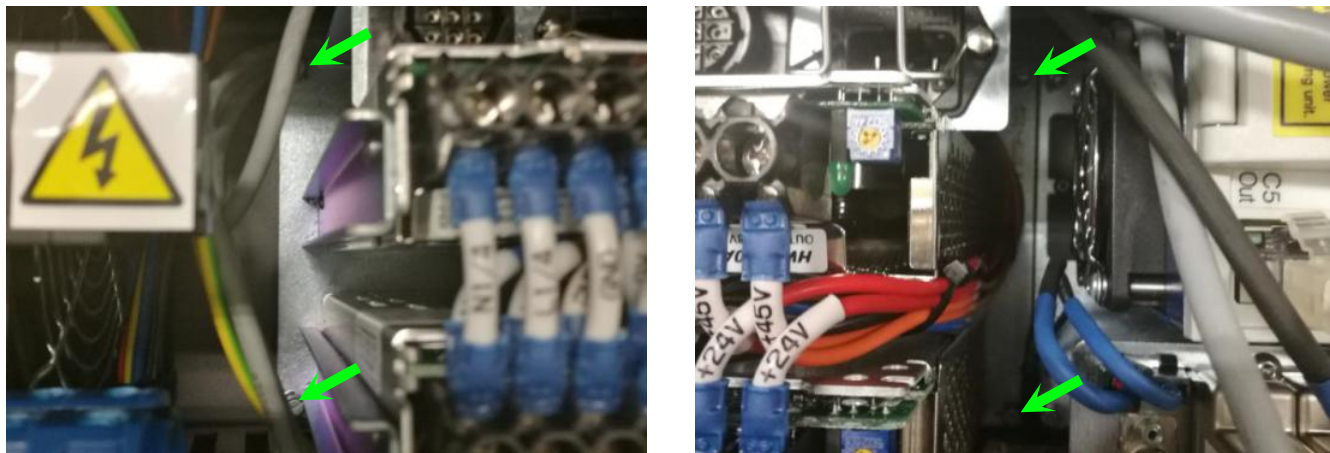


Figure 10 Power Supply Module Assembly

	Work Instruction	Doc. Revision	00
	AXI V810 24VDC Power Supply HWS150 Series Removal and Replacement Procedure	Effective Date	17 Apr2016

13. Connect the input cable and output connector, lock the hook.

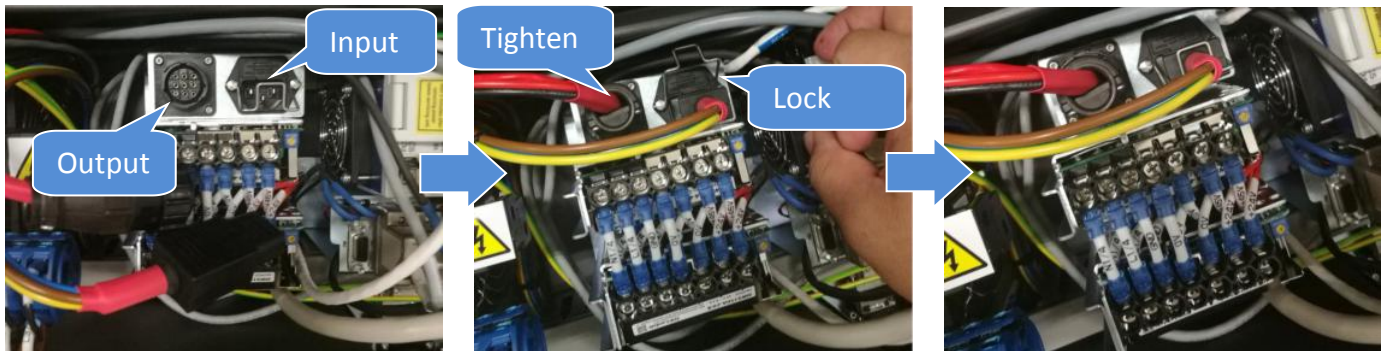


Figure 11 Power Input & Output Connection

Validation Procedure

14. Turn On PDU

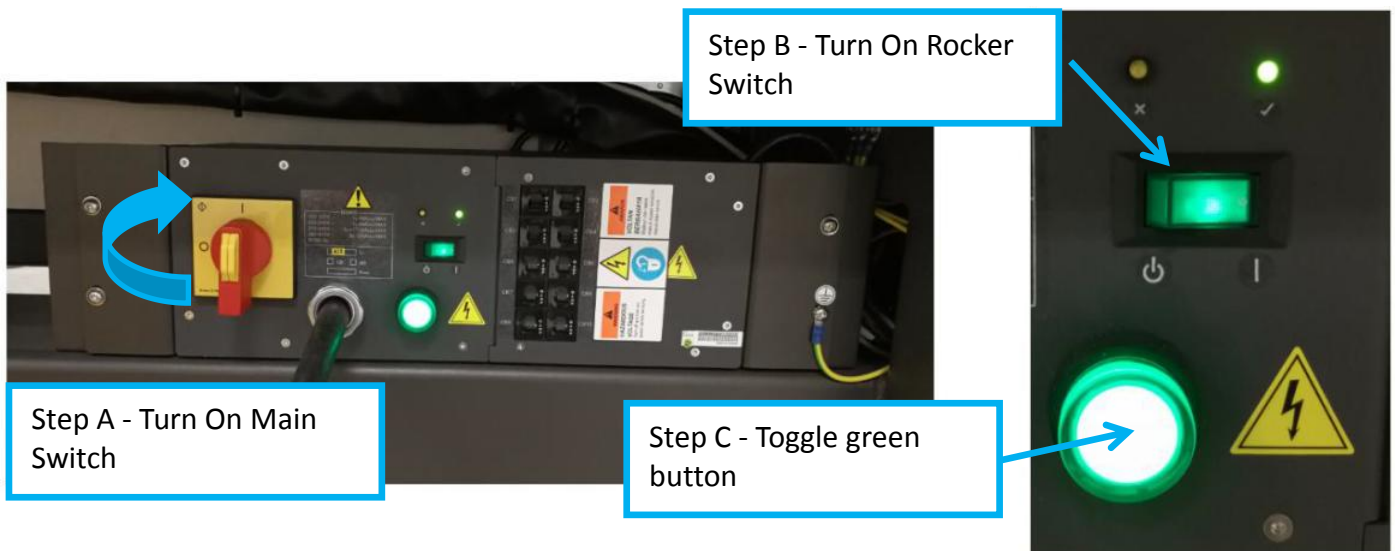


Figure 12 PDU Turn ON

15. Turn On SSCA as below Figure 13



Figure 13 SSCA (Turn On)

	Work Instruction	Doc. Revision	00
	AXI V810 24VDC Power Supply HWS150 Series Removal and Replacement Procedure	Effective Date	17 Apr2016

16. Use Multi-meter and probe at Pole 5 and 6 as shown. Use precision screw driver slightly adjust Potentiometer until 23.5~24VDC indicate

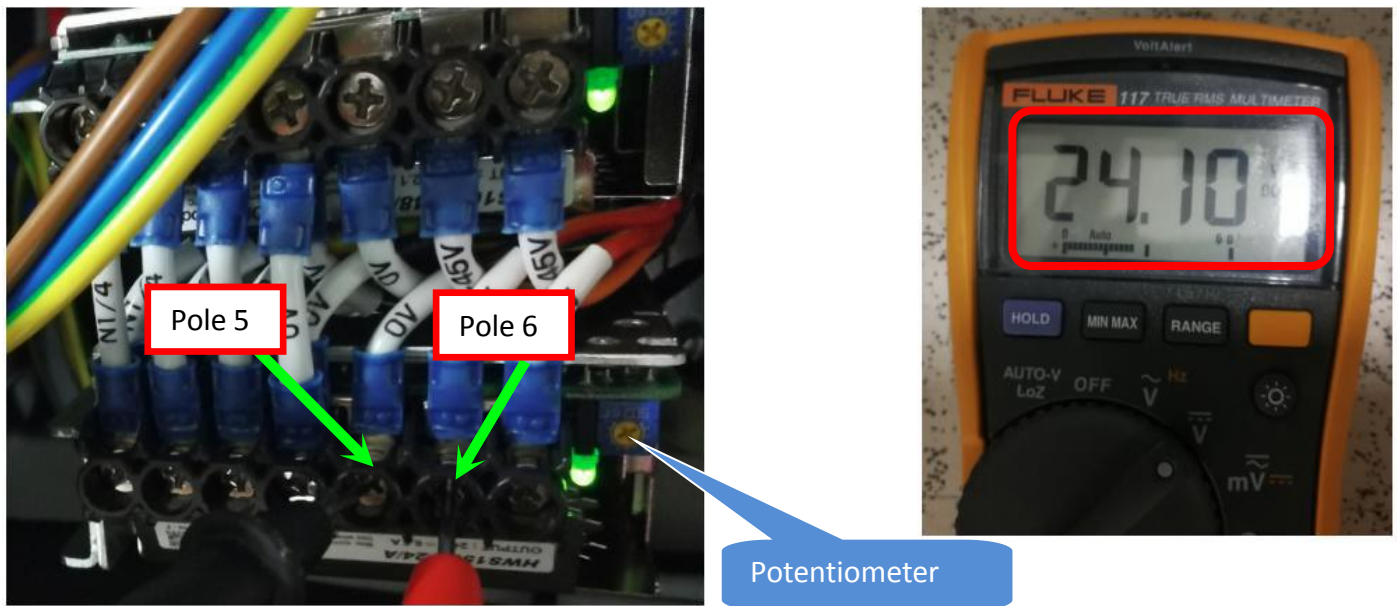


Figure 14 45 VDC Power Supply Verification

17. Close the SSCA top cover
18. Perform V810 Start Up by refer to “AXI V810 Machine Start Up Procedure”